LANGUEDOC LINEAR CHANDELIER 72"

RH


PARTS ENCLOSED

- (A) Mounting Plate (1)
- (B) Canopy (1)
- (C) Canopy Screws (8)
- (D) 3mm Allen Wrench (1)
- (E) 2.5mm Allen Wrench (1)
- (F) Caps (10)
- (G) Set Screws (10)
- (H) Sockets (10)
- (J) Glass Shades (10)
- (K) Bulbs (10)

SAFETY CABLE ASSEMBLY

- 1. Join fixture safety cable with safety cable from ceiling.
- 2. Wrap both safety cables around the cable lock nut.
- 3. Secure by tightening both hex nuts until tight.

ceiling safety cable

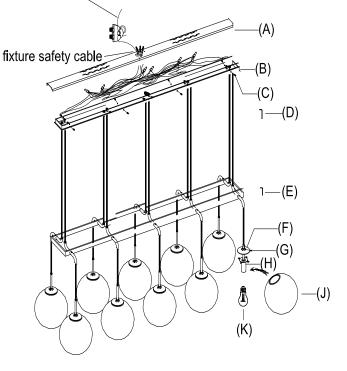

IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for ten (10) 40-Watt maximum TYPE A standard bulbs (K) (included) OR ten (10) 9-Watt compact fluorescent bulbs (not included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.

WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.

m Mwarning: strangulation hazard

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

ASSEMBLY & INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

- 1. Carefully remove all parts from the box and remove all plastic covering.
- 2. Remove Mounting Plate (A) from Canopy (B) by removing Canopy Screws (C) with 3mm Allen Wrench (D) provided.
- Attach Mounting Plate (A) to ceiling and secure with mounting screws/proper fasteners from your local hardware store (not included).
- 4. Connect the safety steel wire from the fixture and the safety cable from ceiling. Refer to the illustration.
- Attach the fixture ground wire (GREEN) to the ground wire from the outlet box (usually green insulation or bare wire) with a plastic wire connector and wrap the connection with electrical tape. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
- Connect the main neutral wire from the fixture (WHITE) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
- Connect the main hot wire (BLACK) from the fixture to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS; OTHERWISE, SAFETY WILL BE COMPROMISED.
- Attach Canopy (B) with light fixture to affixed Mounting Plate
 (A) and secure with Canopy Screws (C). Tighten with 3mm Allen Wrench (D).
- 9. Insert Bulbs (K) into the Sockets (H).
- Loosen Set Screw (G) by using 2.5 mm Allen Wrench (E). Insert Sockets (H) with bracket on top into globe Glass Shade (J) so the bracket will hold the glass. Lower the Cap (F) to the top of Glass Shade (J) and secure with Set Screw (G). Tighten with 2.5mm Allen Wrench (E).
- 11. Assembly is complete.

CARE INSTRUCTIONS

Do not use polishes or cleaners on your lamp. Just wipe clean with a soft cloth.