

# RESTORATION HARDWARE

## HARRISON FLOOR BASE

### PARTS ENCLOSED:

- (A) Base (1)
- (B) Tube 1 (1)
- (C) Tube 2 (1)
- (D) Center box (1)
- (F) Finial (1)
- (G) CFL bulb (2)

### IMPORTANT SAFETY INSTRUCTIONS:

For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into your outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

This fixture has been rated for up to (2) 100-watt maximum TYPE A bulb or 23 watts CFL bulb. To avoid the risk of fire, do not exceed the recommended wattage.

### WARNINGS:

All wires are connected. When unpacking, be careful not to pull wires as a bad connection may result. Do not connect electricity until your lamp is fully assembled.

To reduce the risk of fire, electrical shock, or personal injury, always turn off lamp and allow it to cool prior to replacing light bulb.

Do not touch bulb when fixture is turned on or look directly at lit bulb.  
Keep flammable materials away from lit bulb.


### TO ASSEMBLE:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Put the Tube 1 (B) onto the Base (A) and tighten it.
3. Put the Tube 2 (C) onto the Tube 1 (B) and tighten it.
4. Unscrew the Finial (F) from the Center box (D) and place the desired shade, (sold separately).
5. Attach the Finial (F) and tighten to secure the shade.
6. Insert the 23-watt CFL bulbs (included) into threaded sockets.
7. Plug into proper electrical outlet and test fixture.
8. Assembly is complete.

### CARE INSTRUCTIONS:

Do not use polishes or cleaners on your lamp.  
JUST WIPE CLEAN WITH SOFT CLOTH.

(F) 

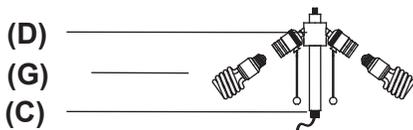

(B) 

(A) 