

RESTORATION HARDWARE

PALMEA WICKER PENDANT

PARTS ENCLOSED:

- (A) Wire Nuts (X3)
- (B) Cross Bar
- (C) Threaded Tube
- (D) Mounting Screws (X2)
- (E) Canopy
- (F) Wire Clamp
- (G) Screw
- (H) Nut
- (I) Shade

IMPORTANT SAFETY INSTRUCTIONS:

1. These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning the assembly and installation of this lighting fixture.
2. We strongly recommend that a professional electrician install all direct wire fixtures.
3. This product must be installed in accordance with the applicable installation codes by a person familiar with the construction and operation of the product and the hazards involved.
4. The lighting fixture is meant for indoor use. It must be connected only to 3-wire, single-phase electrical supply systems (provided with ground wire or equivalent protection system).
5. This fixture has been rated for up to one (1) 150-watt maximum, TYPE A, medium base light bulb. To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

1. To reduce the risk of fire, electrical shock or personal injury, always turn off light fixture and allow it to cool prior to replacing light bulb.
2. Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
3. Keep flammable materials away from lit bulb.
4. This lighting fixture contains lead, a chemical known to the state of California to cause cancer, birth defects and/ or other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

TO ASSEMBLE:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY AT THE FUSE BOX/ CIRCUIT BREAKER.
2. Remove all parts carefully from the carton. Do not throw away any parts.
3. Measure desired drop for fixture to hang.
4. Unthread nut (H) from threaded tube (C) slide nut down the cord until it rests on top of shade (I).
5. Slide canopy (E) down cord so it rests on top of shade (I).
6. Affix cross bar (B) (with threaded tube (C) attached) to ceiling outlet box using mounting screws (D) provided.
7. Loosen screw (G) on wire clamp (F). Carefully pull cord through the hole in wire clamp (F) to the position of desired drop. Tighten screw (G) to secure desired position. Tie a knot directly behind wire clamp (F) to secure wires. If necessary, cut excess cord, leaving five or six inches of length for wire connections.
8. Make proper electrical connections described in steps 8-10. A LICENSED ELECTRICIAN IS RECOMMENDED
9. Attach ground wire from the fixture (silver in color) to the ground wire in outlet box. Fasten wires together with wire nut (A) and tightly wrap connection with electrical tape.
10. Attach hot wire from fixture (black, unlabeled wire) to hot wire from ceiling outlet box. Fasten wires together with wire nut (A) and tightly wrap connection with electrical tape.
11. Attach neutral wire (J) from fixture (wire with label attached showing "N") to neutral wire from ceiling outlet box. Fasten wires together with wire nut (A) and tightly wrap connection with electrical tape.
12. Carefully push wire connections back into ceiling outlet box. Slide canopy (E) up cord and hold firmly against ceiling. Slide nut (H) up cord and onto threaded tube (C) to secure the canopy against ceiling.
13. Insert one (1) 150-watt maximum, Type A, medium base bulb into the socket.
14. Reconnect main electrical supply at fuse box/ circuit breaker and test the fixture.

CARE INSTRUCTIONS:

1. Wipe clean with a soft, dry cloth or static duster.
2. Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the fixture's finish.

