

RESTORATION HARDWARE

BRYSON FLOOR LAMP

PARTS ENCLOSED:

- (A) Finial
- (B) Harp
- (C) Saddle
- (D) Plug
- (E) 23W CFL bulb (X1)

IMPORTANT SAFETY INSTRUCTIONS:

1. These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning the assembly and installation of this lighting fixture.
2. This lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into the outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.
3. This fixture has been rated for one (1) 150-watt maximum TYPE A, medium base light bulb or one (1) 23-watt, medium base CFL bulb (included). To avoid the risk of fire, do not exceed the recommended wattage.
4. This lamp has been UL rated for dry locations.

WARNINGS:

1. To reduce the risk of fire, electrical shock or personal injury, always turn off light fixture and allow it to cool prior to replacing light bulbs.
2. Do not touch bulbs when fixture is turned on. Do not look directly at lit bulbs.
3. Keep flammable materials away from lit bulbs.

TO ASSEMBLE:

NOTE: Do not connect the electricity until lamp is fully assembled.

1. Unpack all parts and remove packing materials. Place lamp base on a level surface.
2. Remove finial (A) from the top of harp (B). Squeeze harp (B) inward and place into the opening of saddle (C).
3. Place shade (not included) onto harp (B). Thread finial (A) back onto the harp to secure the shade to the lamp.
4. Install one (1) 23-watt maximum, Type A base CFL bulb (E) (included) into socket.
5. Remove plug cover from polarized plug (D).
6. Insert polarized plug (D) into wall outlet.

CARE INSTRUCTIONS:

1. Wipe clean with a soft, dry cloth or static duster.
2. Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the fixture's finish.

