

# RH

## CATHEDRAL PENDANT

### PARTS ENCLOSED:

- (A) STEM (1)
- (C) FIXTURE (1)
- (D) QUICK LINKS (2)
- (E) CHAIN (1)
- (F) COLLAR (1)
- (G) CANOPY (1)
- (K) MOUNTING PLATE (1)
- (L) OUTLET BOX SCREWS (2)

### IMPORTANT SAFETY INSTRUCTIONS:

Always disconnect the power before installing or replacing bulbs and before cleaning or other maintenance. This fixture has been rated for up to four (4) 75W medium base bulbs. To avoid the risk of fire, do not exceed the recommended wattage.

Consult a qualified, licensed electrician to ensure correct branch circuit conductor. *Consulter un électricien qualifié pour vous assurer que les conducteurs de la dérivation sont adéquats.*

### WARNINGS:


All wires are connected. When unpacking, be careful not to pull wires as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch the bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.

### THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.

### TO ASSEMBLE:

#### INSTRUCTIONS D'INSTALLATION:

1. Shut off power to the outlet box.
2. Carefully remove all parts from the box and remove all plastic covering.
3. Attach stem (A) to fixture threaded stem (B).
4. Determine the height at which the fixture (C) is to be hung. If necessary, remove the quick link (D) from the end of the chain (E) and shorten the chain by removing the desired number of links using chain pliers. Reattach the quick link to the end of the chain.
5. Weave the power cord through the links of the chain, and trim the power cord to the length of the chain plus 8 inches.
6. Slip chain through collar (F) and canopy (G).
7. Feed the cord up through the bushing (H), and pull through the bracket (J) so that it is on the bottom side of the mounting plate (K).
8. Open quick link and hook it onto the bushing. Close the quick link.
9. Feed the outlet box conductors through the mounting plate, and attach mounting plate to outlet box. Secure with outlet box screws (L).
10. Make appropriate electrical connections using wire nuts:
  - a. Connect the fixture's live wire (black) to the live outlet box wire.
  - b. Connect the fixture's neutral wire (white) to the neutral outlet box wire.
  - c. Connect the fixture's ground wire (green or uncoated) to the ground outlet box wire. If no ground is present in outlet box, connect fixture's ground wire to the mounting plate using the green screw (included).
11. Raise canopy to mounting plate. Secure by screwing collar onto bushing.
12. Install (4) bulbs (M).
13. Restore power to the fixture.

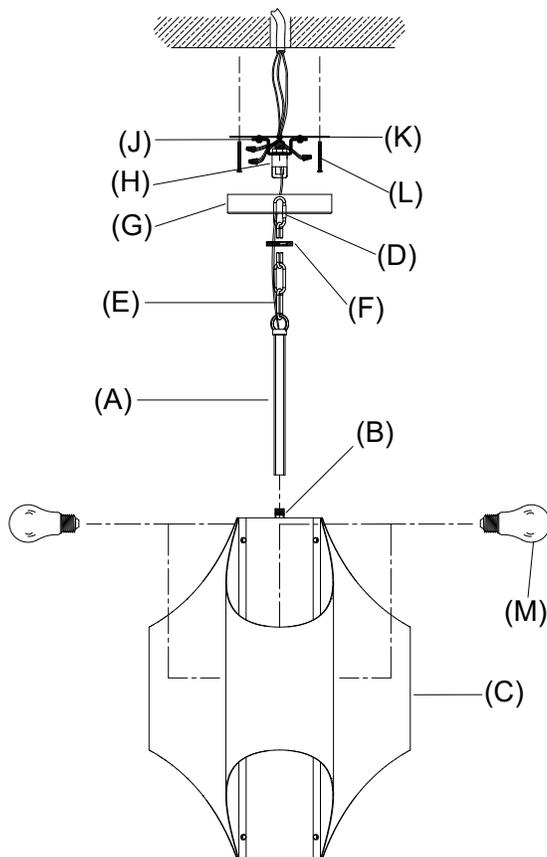

### CARE INSTRUCTIONS:

Do not use polishes or cleaners on your lamp.  
Just wipe clean with a soft cloth.