

RESTORATION HARDWARE

30" CLAY BEADED DOME PENDANT

WARNING: This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and/or other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

PARTS ENCLOSED:

- | | |
|---------------------------|--------------------|
| (A) Cross Bar | (G) Collar |
| (B) Cross Bar Screws (X2) | (H) Chain |
| (C) Threaded Tube | (I) Quick Link |
| (D) Hang Straight | (J) Loop |
| (E) Quick Link | (K) Socket (x3) |
| (F) Canopy | (L) Wire Nuts (x3) |

IMPORTANT SAFETY INSTRUCTIONS:

1. These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning the assembly and installation of this lighting fixture.
2. We strongly recommend that a professional electrician install all direct wire fixtures.
3. This product must be installed in accordance with the applicable installation codes by a person familiar with the construction and operation of the product and the hazards involved.
4. The lighting fixture is meant for indoor use. It must be connected only to 3-wire, single-phase electrical supply systems (provided with ground wire or equivalent protection system).
5. This fixture has been rated for up to four (3) 100-watt maximum, TYPE A, medium base light bulbs. To avoid the risk of fire, do not exceed the recommended wattage.
6. This fixture has been UL rated for dry locations.

WARNINGS:

1. To reduce the risk of fire, electrical shock or personal injury, always turn off light fixture and allow it to cool prior to replacing light bulbs.
2. Do not touch bulbs when fixture is turned on. Do not look directly at lit bulbs.
3. Keep flammable materials away from lit bulbs.
4. This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and/or other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

TO ASSEMBLE:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/ CIRCUIT BREAKER.
2. Remove all parts carefully from the carton. Do not throw away any parts.
3. Remove hang straight (D) from chain (H) by detaching quick link (E) from chain (H), while keeping cross bar (A), threaded tube (C), canopy (F), and collar (G) together.
4. Measure desired drop for fixture to hang and add/remove chain links (H) with chain break tool (not included). Reattach quick link (E) to the top chain link (H).
5. Unthread collar (G) from hang straight (D), and carefully slide it down chain (H) so it rests on top of loop (J).
6. Slide canopy (F) down chain (H) so it rests on top of loop (J).
7. Affix cross bar (A) (with threaded tube (C) and hangstraight (D) attached) to ceiling outlet box using cross bar screws (B) provided.
8. Lift fixture to ceiling and secure quick link (E) to hang straight (D). Guide the wire exiting the fixture through the center of collar (G) and canopy (F). Continue to guide the wire through chain (H), quick link (E), and through the center of hang straight (D) and threaded tube (C).
9. Cut the cord to the desired length to make electrical connections. At least 8" of wire will be needed to make proper electrical connections.
10. Make proper electrical connections described in steps 11 - 13. A LICENSED ELECTRICIAN IS RECOMMENDED.
11. Attach ground wire from the fixture (green or copper in color) to the ground wire in outlet box. Fasten wires together with wire nut (L) and tightly wrap connection with electrical tape.
12. Attach hot wire from fixture (black in color, or smooth side of wire) to hot wire from ceiling outlet box. Fasten wires together with wire nut (L) and tightly wrap connection with electrical tape.
13. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from ceiling outlet box. Fasten wires together with wire nut (L) and tightly wrap connection with electrical tape.
14. Gently push wire connections back into ceiling outlet box. Slide canopy (F) up chain (H) and hold firmly against ceiling. Slide collar (G) up chain (H) and thread onto hang straight (D), securing canopy (F) against ceiling.
15. Insert three (3) 100-watt maximum, Type A, medium base bulbs (not included) into the sockets (K).
16. Reconnect main electrical supply at fuse box/ circuit breaker and test the fixture.

CARE INSTRUCTIONS:

1. Wipe clean with a soft, dry cloth or static duster.
2. Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the fixture's finish.

