 


# RH

## CLAY BEAD DOME PENDANT 40"

### PARTS ENCLOSED:

- (A) Cross Bar (1)
- (B) Cross Bar Screws (2)
- (C) Threaded Tube (1)
- (D) Hang Straight (1)
- (E) Quick Link (2)
- (F) Canopy (1)
- (G) Collar (1)
- (H) Chain (1)
- (I) Loop (1)
- (J) Socket (4)
- (K) Wire Nuts (3)

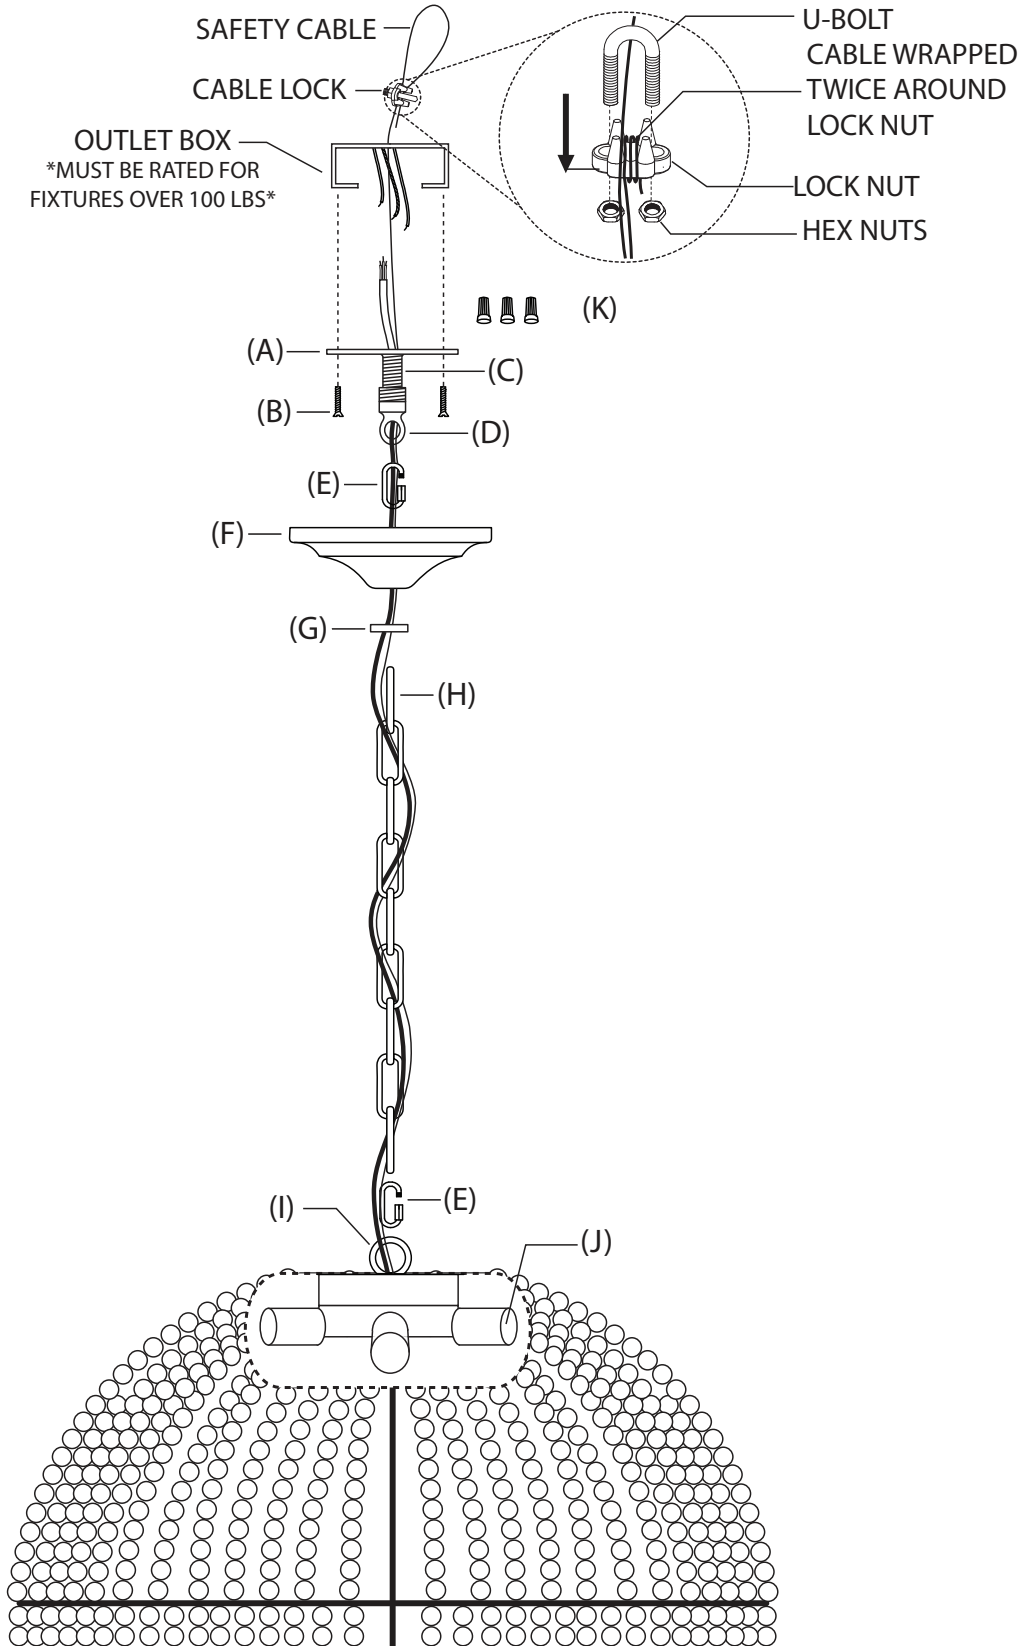

## CLAY BEAD DOME PENDANT 40"

**IMPORTANT PLEASE READ****WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.****SAFETY INSTRUCTIONS:**

These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.

This fixture has been rated for up to one (4) 100-watt maximum Type A medium base bulbs or four (4) 11-watt LED medium base bulb. To avoid risk of fire, do not exceed the recommended wattage.

If any special control devices are used with this fixture, follow the instructions carefully to assure full compliance with N.E.C. requirements. If there are any questions, contact a qualified electrical contractor.

**WARNINGS:**

All wires are connected. When unpacking, be careful not to pull wires as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from the lit bulb.

This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning, or otherwise touching this light fixture.

**⚠ WARNING:**

This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

**THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.****ASSEMBLY & INSTALLATION:**

1. SHUT OFF MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/ CIRCUIT BREAKER. IT IS RECOMMENDED THAT A LICENSED ELECTRICIAN INSTALL THIS FIXTURE.
2. Remove all parts carefully from the carton. Do not throw away any parts.
3. Remove hang straight (D) from chain (H) by detaching quick link (E) from chain (H), while keeping cross bar (A), threaded tube (C), canopy (F), and collar (G) together.
4. Measure desired drop for fixture to hang and add/remove chain links (H) with chain break tool (not included). Reattach quick link (E) to top of chain link (H).

**ASSEMBLY & INSTALLATION:**

5. Unthread collar (G) from hang straight (D), and carefully slide it down chain (H) so it rests on top of loop (I).
6. Slide canopy (F) down chain (H) so it rests on top of loop (I).
7. Affix cross bar (A) (with threaded tube (C) and hang straight (D) attached) to ceiling outlet box using cross bar screws (B) provided.
8. Lift fixture to ceiling and secure quick link (E) to hang straight (D). Guide the wire and safety cable exiting the fixture through the center of collar (G) and canopy (F). Continue to guide the wire and safety cable through chain (H), quick link (E), and center of hang straight (D) and threaded tube (C).
9. Cut the cord to the desired length to make electrical connections. At least 8" of wire will be needed to make proper electrical connections.
10. Guide safety cables exiting canopy (F) through threaded tube (C) and into ceiling outlet box. From above the ceiling outlet box, loop safety cables around an appropriate load-bearing structure. Use cable lock to secure position of cable.
11. To install cable lock, remove hex nuts and lock nut from U-bolt. Place U-bolt over looped safety cable and slide lock nut over U-bolt. Loop the loose end of the safety cable around the lock nut two times as shown in diagram. Re-attach hex nuts to U-bolt to secure the position of the cable lock.
12. Make proper electrical connections described in steps 11 - 13. A LICENSED ELECTRICIAN IS RECOMMENDED.
13. Attach ground wire from the fixture (green or copper in color) to the ground wire in outlet box. Fasten wires together with wire nut (K) and tightly wrap connection with electrical tape.
14. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from ceiling outlet box. Fasten wires together with wire nut (K) and tightly wrap connection with electrical tape.
15. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from ceiling outlet box. Fasten wires together with wire nut (K) and tightly wrap connection with electrical tape.
16. Gently push wire connections back into ceiling outlet box. Slide canopy (F) up chain (H) and hold firmly against ceiling. Slide collar (G) up chain (H) and thread onto hang straight (D), securing canopy (F) against ceiling.
17. Insert four (4) 100-watt maximum, Type A, medium base bulbs (not included) into the sockets (J).
18. Reconnect main electrical supply at fuse box/ circuit breaker and test the fixture.

**CARE INSTRUCTIONS:**

Wipe clean with a soft, dry cloth or static duster. Always avoid the use of harsh chemicals or abrasive cleaners, as they may cause damage to the fixture's finish.