 


## ANTIQUED METAL FUNNEL PENDANT 15"

## PARTS ENCLOSED

- (A) Mounting Strap (1)
- (B) Threaded Nipple (1)
- (C) Mounting Screws (2)
- (D) Mounting Loop (1)
- (E) Canopy (1)
- (F) Canopy Ring (1)
- (G) Chain (1)
- (H) Top Loop (1)
- (J) Washer (1)
- (K) Shade (1)

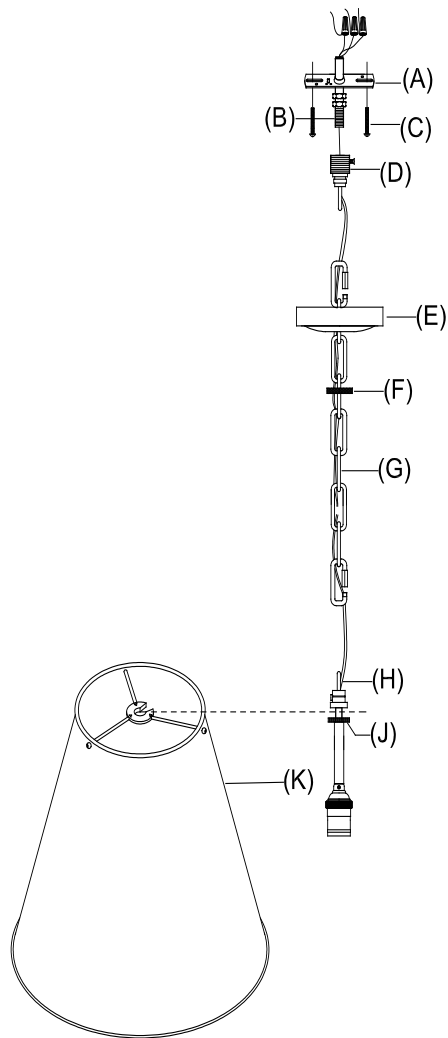

## ANTIQUED METAL FUNNEL PENDANT 15"

## IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for one (1) 100-Watt maximum TYPE A standard bulb (not included) OR one (1) 23-Watt Compact Fluorescent bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

## WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



**WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

**THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.**

**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

## ASSEMBLY &amp; INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic covering.
2. Attach side opening of shade spider located inside Shade (K) to the threaded section on top of socket and tighten with Washer (J).
3. Hook the Chain (G) to Top Loop (H).

## ASSEMBLY &amp; INSTALLATION CONT.

4. Feed wire through Chain (G), Canopy (E), and Mounting Loop (D).
5. Unscrewing Canopy Ring (F), slide Canopy Ring (F) and Canopy (E) on Chain (G).
6. Attach Mounting Strap (A) to ceiling outlet box with Mounting Screws (C) and insert top Threaded Nipple (B) in Mounting Strap (A).
7. Attach Mounting Loop (D) to Threaded Nipple (B) and tighten the set screw.
8. Attach Chain (G) with fixture to chain Mounting Loop (D) at desired height.
9. Gently pull the wiring from the ceiling outlet box and allow the wires to hang. Thread the wires through the center hole in the Mounting Strap (A).
10. Attach the fixture ground wire and house ground wire (usually green) to ceiling outlet box with the green grounding screw. Connect fixtures to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
11. Connect the neutral wire (WHITE) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
12. Connect the hot wire (BLACK) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS; OTHERWISE, SAFETY WILL BE COMPROMISED.
13. Tuck these wire connections neatly into the ceiling outlet box.
14. Slip Canopy (E) to ceiling and secure with Canopy Ring (F).
15. Insert the recommended bulb into the socket.
16. Restore power to outlet box and check operation of fixture.
17. Assembly is complete.

## CARE INSTRUCTIONS

 
Do not use polishes or cleaners on your lamp. Just wipe clean with a soft cloth.

# RH

## ANTIQUED METAL FUNNEL PENDANT 18"

### PARTS ENCLOSED

- (A) Mounting Strap (1)
- (B) Threaded Nipple (1)
- (C) Mounting Screws (2)
- (D) Mounting Loop (1)
- (E) Canopy (1)
- (F) Canopy Ring (1)
- (G) Chain (1)
- (H) Top Loop (1)
- (J) Washer (1)
- (K) Shade (1)

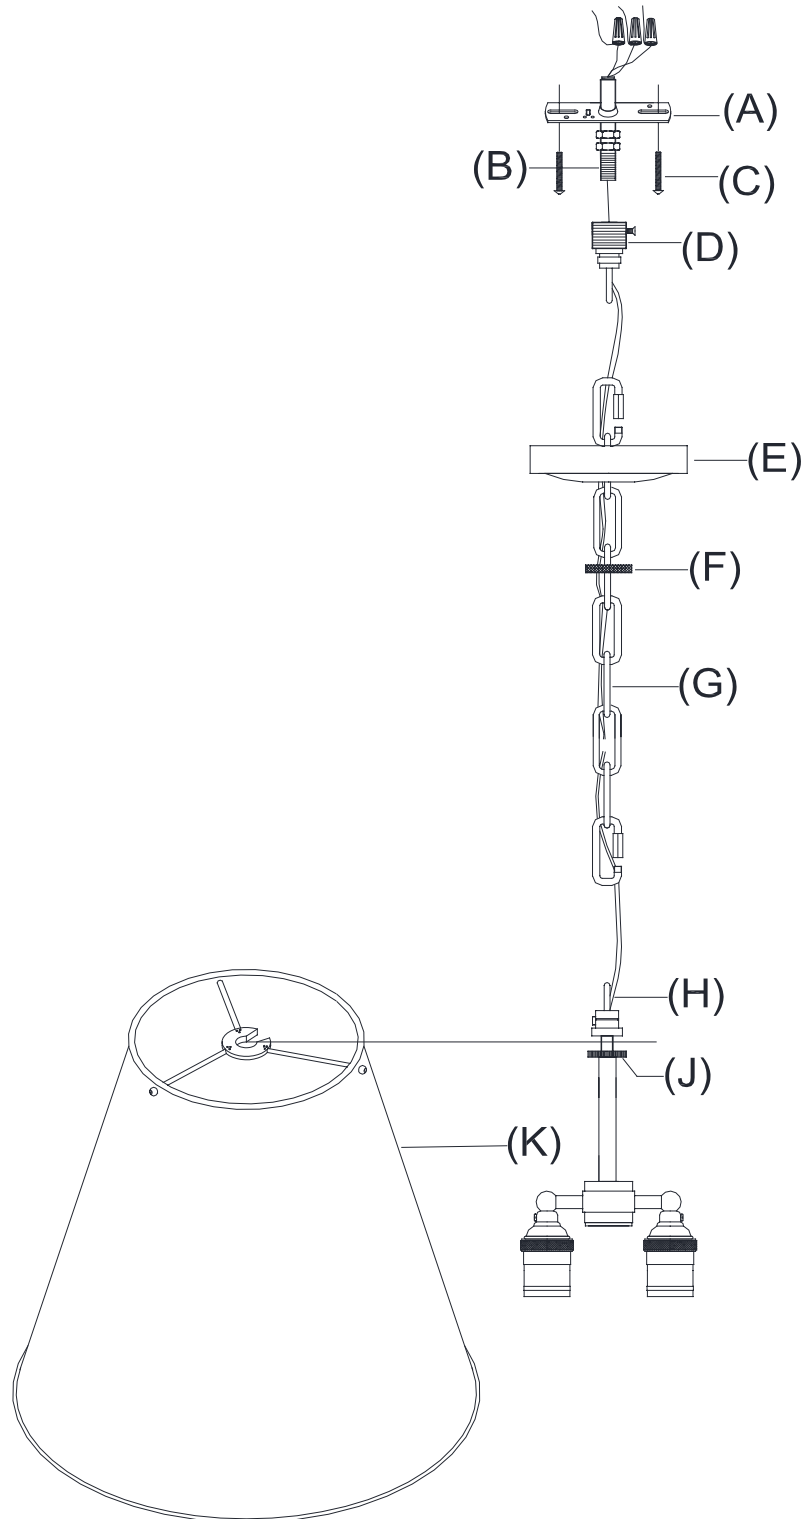

## IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for two (2) 100-Watt maximum Type A standard lightbulbs (not included) or two (2) 23-Watt compact fluorescent lightbulbs (not included). To avoid the risk of fire, do not exceed the recommended wattage.

## WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



**WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.



**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

## ASSEMBLY &amp; INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic covering.
2. Attach side opening of shade spider located inside Shade (K) to the threaded section on top of socket and tighten with Washer (J).
3. Hook the Chain (G) to Top Loop (H).

## ASSEMBLY &amp; INSTALLATION CONT.

4. Feed wire through Chain (G), Canopy (E), and Mounting Loop (D).
5. Unscrewing Canopy Ring (F), slide Canopy Ring (F) and Canopy (E) on Chain (G).
6. Attach Mounting Strap (A) to ceiling outlet box with Mounting Screws (C) and insert top Threaded Nipple (B) in Mounting Strap (A).
7. Attach Mounting Loop (D) to Threaded Nipple (B) and tighten the set screw.
8. Attach Chain (G) with fixture to chain Mounting Loop (D) at desired height.
9. Gently pull the wiring from the ceiling outlet box and allow the wires to hang. Thread the wires through the center hole in the Mounting Strap (A).
10. Attach the fixture ground wire and house ground wire (usually green) to ceiling outlet box with the green grounding screw. Connect fixtures to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
11. Connect the neutral wire (WHITE) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
12. Connect the hot wire (BLACK) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS; OTHERWISE, SAFETY WILL BE COMPROMISED.
13. Tuck these wire connections neatly into the ceiling outlet box.
14. Slip Canopy (E) to ceiling and secure with Canopy Ring (F).
15. Insert the recommended bulb into the socket.
16. Restore power to outlet box and check operation of fixture.
17. Assembly is complete.

## CARE INSTRUCTIONS

 
Do not use polishes or cleaners on your lamp. Just wipe clean with a soft cloth.

# RH

## ANTIQUED METAL FUNNEL PENDANT 24"

### PARTS ENCLOSED

- (A) Mounting Strap (1)
- (B) Threaded Nipple (1)
- (C) Mounting Screws (2)
- (D) Mounting Loop (1)
- (E) Canopy (1)
- (F) Canopy Ring (1)
- (G) Chain (1)
- (H) Top Loop (1)
- (J) Washer (1)
- (K) Shade (1)

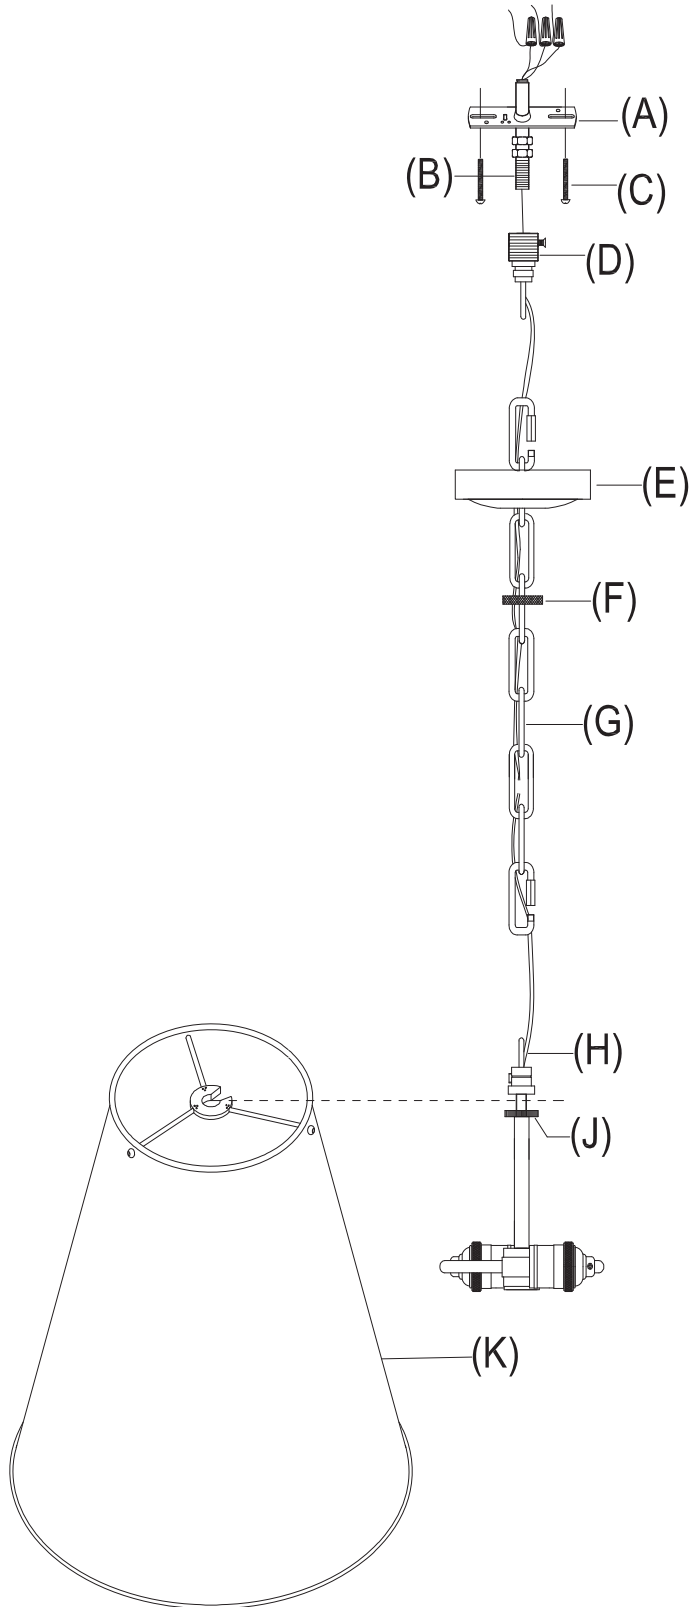

## IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for two (2) 100-Watt maximum Type A standard lightbulbs (not included), or one (1) 23-Watt compact fluorescent lightbulbs (not included). To avoid the risk of fire, do not exceed the recommended wattage.

## WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



**WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.



**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

## ASSEMBLY &amp; INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic covering.
2. Attach side opening of shade spider located inside Shade (K) to the threaded section on top of socket and tighten with Washer (J).
3. Hook the Chain (G) to Top Loop (H).

## ASSEMBLY &amp; INSTALLATION CONT.

4. Feed wire through Chain (G), Canopy (E), and Mounting Loop (D).
5. Unscrewing Canopy Ring (F), slide Canopy Ring (F) and Canopy (E) on Chain (G).
6. Attach Mounting Strap (A) to ceiling outlet box with Mounting Screws (C) and insert top Threaded Nipple (B) in Mounting Strap (A).
7. Attach Mounting Loop (D) to Threaded Nipple (B) and tighten the set screw.
8. Attach Chain (G) with fixture to chain Mounting Loop (D) at desired height.
9. Gently pull the wiring from the ceiling outlet box and allow the wires to hang. Thread the wires through the center hole in the Mounting Strap (A).
10. Attach the fixture ground wire and house ground wire (usually green) to ceiling outlet box with the green grounding screw. Connect fixtures to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
11. Connect the neutral wire (WHITE) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
12. Connect the hot wire (BLACK) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS; OTHERWISE, SAFETY WILL BE COMPROMISED.
13. Tuck these wire connections neatly into the ceiling outlet box.
14. Slip Canopy (E) to ceiling and secure with Canopy Ring (F).
15. Insert the recommended bulb into the socket.
16. Restore power to outlet box and check operation of fixture.
17. Assembly is complete.

## CARE INSTRUCTIONS

Do not use polishes or cleaners on your lamp. Just wipe clean with a soft cloth.