



 
CABRILLO PENDANT 21"

ASSEMBLY & INSTALLATION INSTRUCTIONS

UNITED STATES ENGLISH

CABRILLO PENDANT 21"**PARTS ENCLOSED**

- (A) Mounting Plate (1)
- (B) Canopy (1)
- (C) 18" Extension Rods (2)
- (D) 12" Extension Rods (2)
- (E) 6" Extension Rods (2)
- (F) Carabiner (2)
- (G) Nipple (1)
- (H) Bulb (included) (1)
- (I) Shade (1)

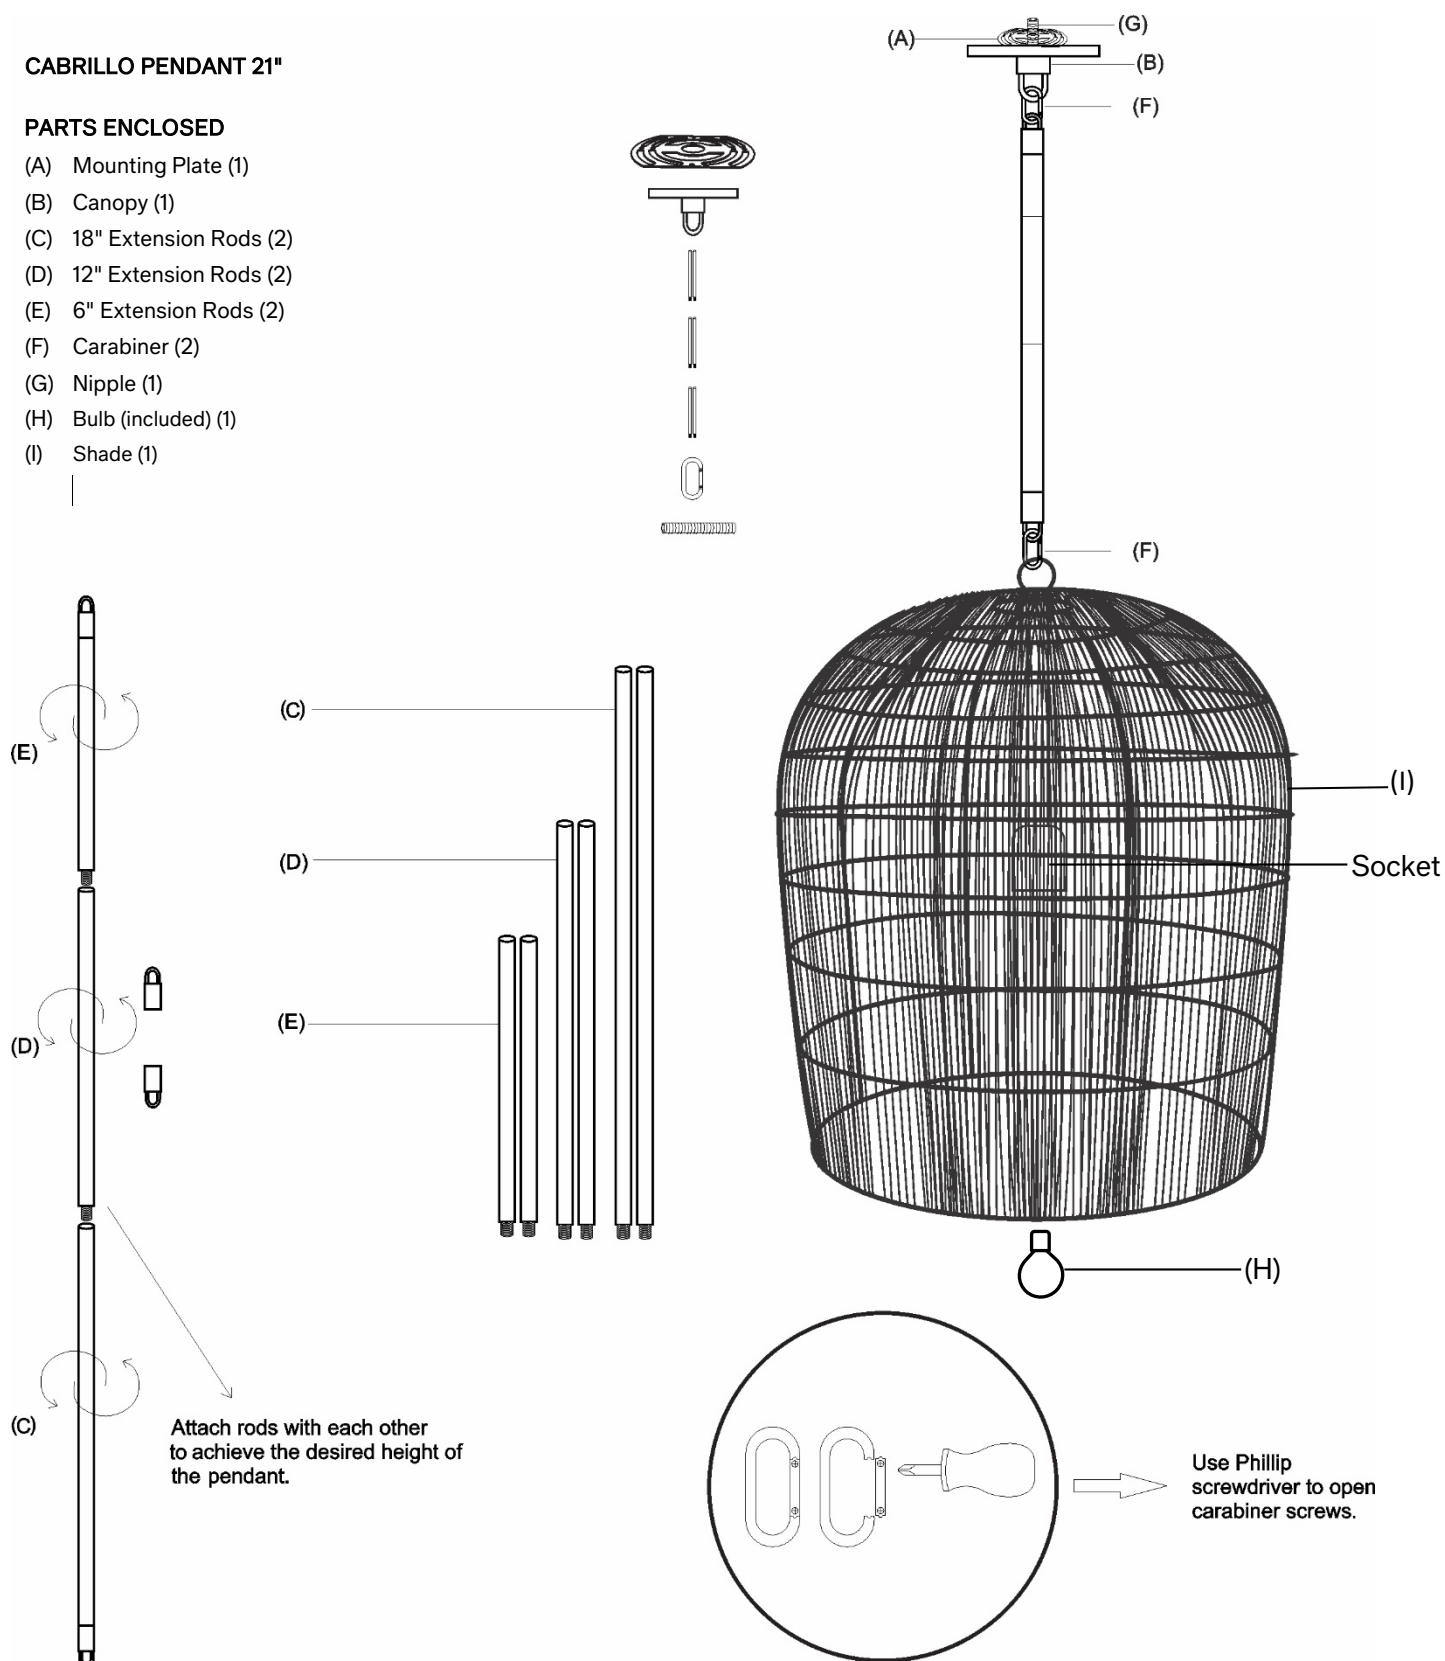

IMPORTANT: PLEASE READ

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR MOUNTING DIRECTLY TO A JUNCTION BOX. UNIQUE OR ALTERNATIVE INSTALLATION METHODS MAY REQUIRE DIFFERENT MOUNTING HARDWARE, WHICH HAS NOT BEEN INCLUDED. ALWAYS CONSULT WITH A LICENSED ELECTRICIAN BEFORE INSTALLATION.

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

IMPORTANT SAFETY FEATURES**BULBS**

This fixture has been rated for (1) 150-watt maximum Type A standard lightbulb (included). To avoid the risk of fire, do not exceed the recommended wattage.

VAULTED-CEILING COMPATIBILITY

This fixture is not vaulted-ceiling compatible.

DIMMER-SWITCH COMPATIBILITY

This fixture is not dimmer-switch compatible.

CEILING REINFORCEMENT

Fixtures weighing 50 lbs. or more will require additional reinforcement above the ceiling where they are to be installed.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch the bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.

WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

ASSEMBLY AND INSTALLATION**SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.**

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Determine the desired hanging length of the pendant. Attach the extension rods (C) (D) (E) according to the height needed.
3. Pass the wire through the connecting rods until it comes out through the back of the canopy (B).
4. Attach the mounting plate (A) to the ceiling and secure it with mounting screws and a suitable fastener from your local hardware store.
5. Attach nipple (G) to mounting plate (A).
6. Hook the carabiner (F) onto the connecting rods (C) (D) (E) and the canopy loop (B).
7. Carefully inspect the pendant's two attachment wires. One has very fine edges molded into the plastic coating - this is the NEUTRAL wire. The coating of the second wire is smooth - this is the HOT wire. The bare wire is the ground wire.
8. Connect the ground wire from the fixture to the ground wire (usually bare) from your ceiling box using a wire nut. If your home does not have a ground wire, attach the ground wire from the fixture to the green ground screw inside the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME IS PROPERLY GROUNDED.
9. Connect the NEUTRAL wire from your pendant with the neutral wire (usually white) from your ceiling box using a wire nut.
10. Connect the HOT wire from the fixture to the hot (usually black) wire from your outlet box using a wire nut. DO NOT REVERSE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
11. Carefully insert the wire connection into the ceiling outlet box.
12. Attach canopy (B) with pendant light to attached mounting plate (A).
13. Insert the included bulb (H) into the socket.
14. Assembly is complete.

HEIGHT ADJUSTMENT INSTRUCTIONS

Determine drop measurement (ceiling to bottom of fixture) and adjust height by adding/removing extension rods (C) (D) (E).

ATTENTION: ADJUSTING THE HANG HEIGHT

Any adjustments or alterations to the fixture, cord, or overall hang height that differ from those detailed on RH.com will void the Laboratory Listing and Approvals (UL, ETL, CSA, etc.). If the listing is voided, this means the product may no longer be safe for use as modified. RH does not recommend modifying the product.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture.
Wipe clean with a soft, dry cloth.



 
CABRILLO PENDANT 24"

ASSEMBLY & INSTALLATION INSTRUCTIONS

UNITED STATES ENGLISH

CABRILLO PENDANT 24"**PARTS ENCLOSED**

- (A) Mounting Plate (1)
- (B) Canopy (1)
- (C) 18" Extension Rods (2)
- (D) 12" Extension Rods (2)
- (E) 6" Extension Rods (2)
- (F) Carabiner (2)
- (G) Nipple (1)
- (H) Bulb (included) (1)
- (I) Shade (1)

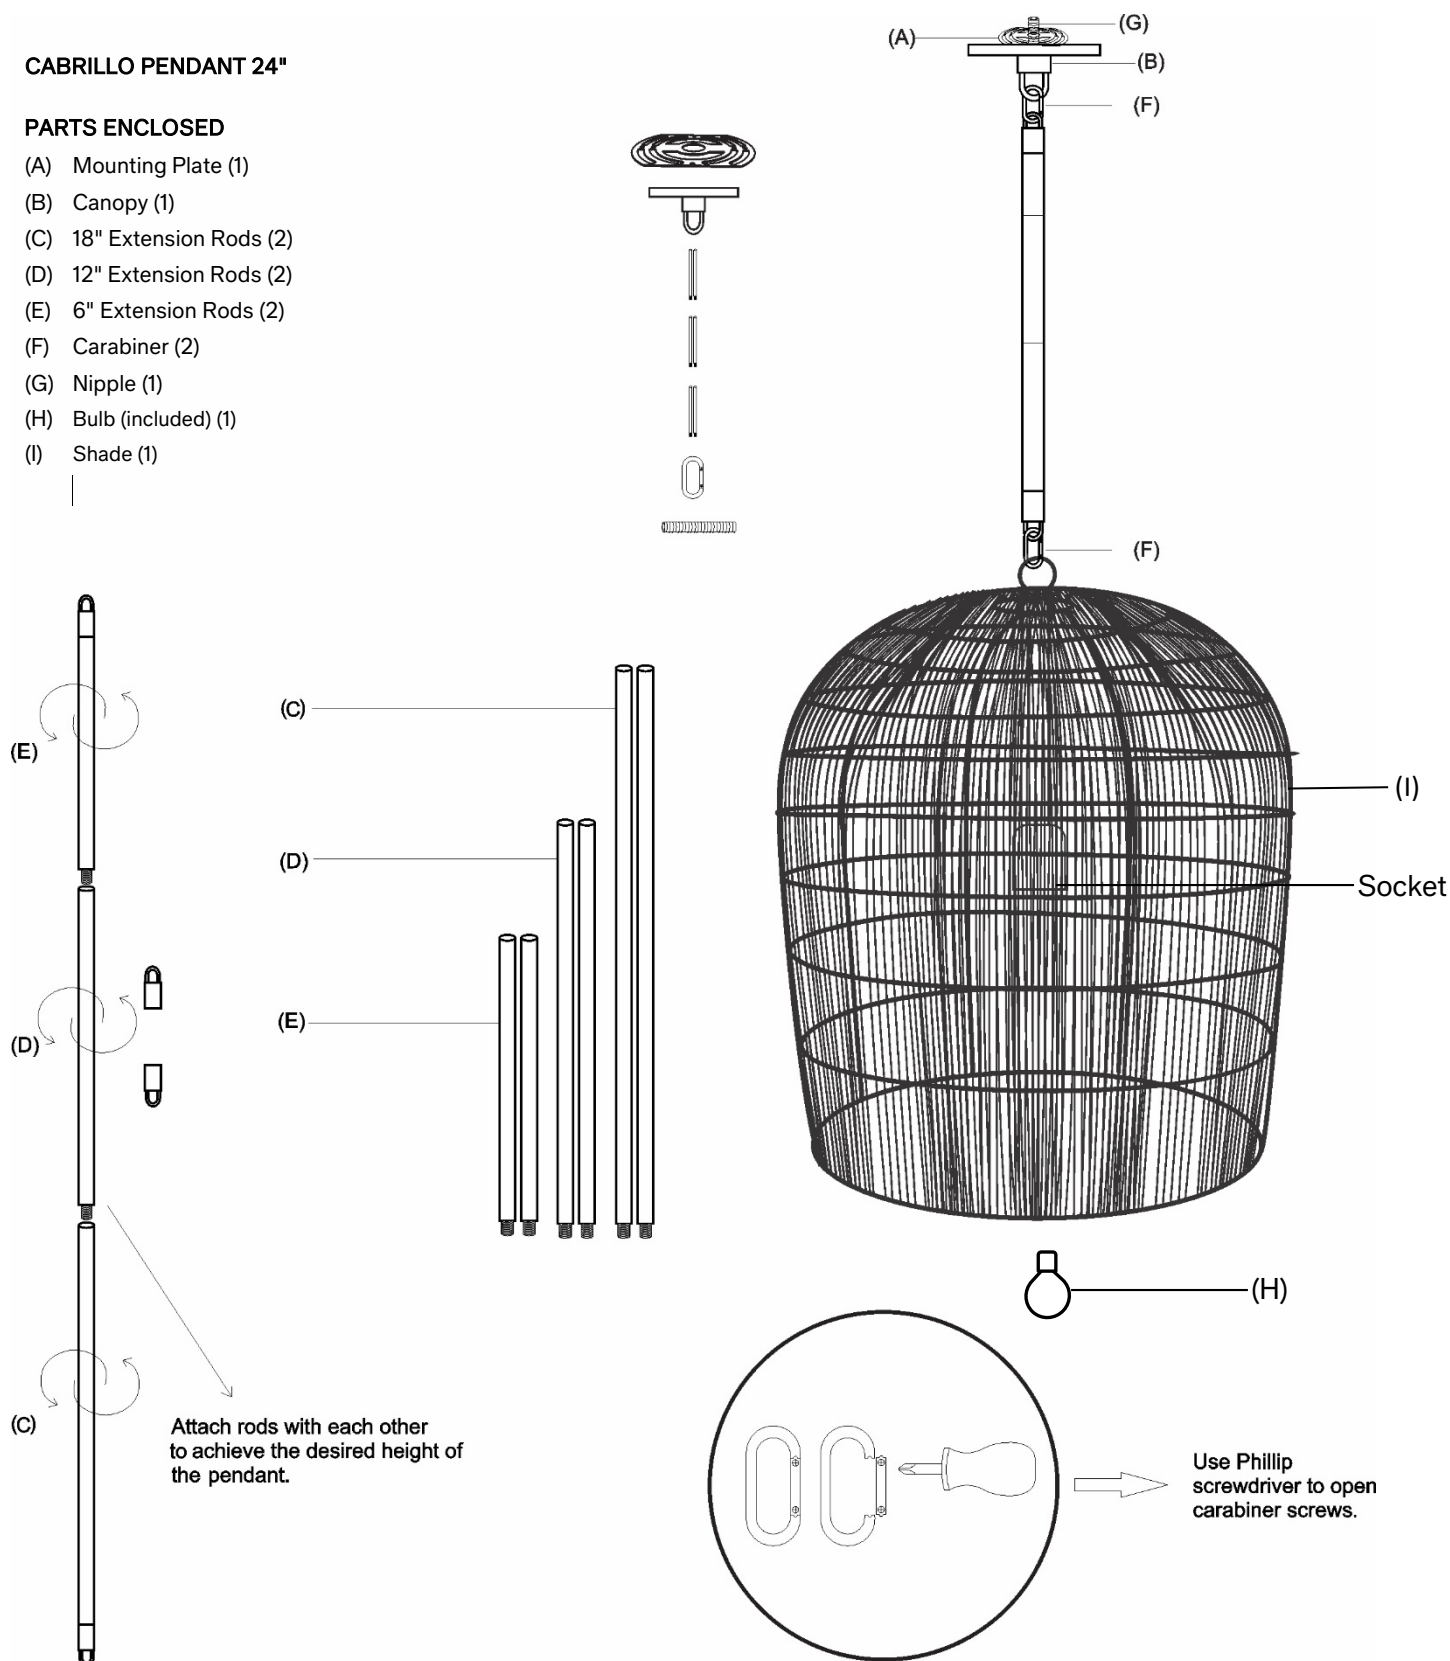

IMPORTANT: PLEASE READ

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR MOUNTING DIRECTLY TO A JUNCTION BOX. UNIQUE OR ALTERNATIVE INSTALLATION METHODS MAY REQUIRE DIFFERENT MOUNTING HARDWARE, WHICH HAS NOT BEEN INCLUDED. ALWAYS CONSULT WITH A LICENSED ELECTRICIAN BEFORE INSTALLATION.

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

IMPORTANT SAFETY FEATURES**BULBS**

This fixture has been rated for up to (1) 150-watt maximum Type A standard lightbulb (included). To avoid the risk of fire, do not exceed the recommended wattage.

VAULTED-CEILING COMPATIBILITY

This fixture is not vaulted-ceiling compatible.

DIMMER-SWITCH COMPATIBILITY

This fixture is not dimmer-switch compatible.

CEILING REINFORCEMENT

Fixtures weighing 50 lbs. or more will require additional reinforcement above the ceiling where they are to be installed.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch the bulb when fixture is turned on or look directly at lit bulbs. Keep flammable materials away from lit bulb.

WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

ASSEMBLY AND INSTALLATION**SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.**

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Determine the hanging length of the pendant. Attach the extension rods (C) (D) (E) according to the height needed.
3. Pass the wire through the connecting rods and pull it out through the back of the canopy (B).
4. Attach the mounting plate (A) to the ceiling and secure it with mounting screws and a suitable fastener from your local hardware store.
5. Attach nipple (G) to mounting plate (A).
6. Hook the carabiner onto the connecting rods (C) (D) (E) and the canopy loop (B).
7. Carefully inspect the two pendant attachment wires. One has very fine edges molded into the plastic coating - this is the NEUTRAL wire. The coating of the second wire is smooth - this is the HOT wire. The bare wire is the ground wire.
8. Connect the ground wire from the fixture to the ground wire (usually bare) from your ceiling box using a wire nut. If your home does not have a ground wire, attach the ground wire from the fixture to the green ground screw inside the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME IS PROPERLY GROUNDED.
9. Connect the NEUTRAL wire from your pendant with the neutral wire (usually white) from your ceiling box using a wire nut.
10. Connect the HOT wire from your light fixture to the hot (usually black) wire from your outlet box using a wire nut. DO NOT REVERSE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
11. Carefully insert the wire connection into the ceiling outlet box.
12. Attach canopy (B) with pendant light to attached mounting plate (A).
13. Insert the included bulb (H) into the socket.
14. Assembly is complete.

HEIGHT ADJUSTMENT INSTRUCTIONS

Determine drop measurement (ceiling to bottom of fixture) and adjust height by adding/removing extension rods (C) (D) (E).

ATTENTION: ADJUSTING THE HANG HEIGHT

Any adjustments or alterations to the fixture, cord, or overall hang height that differ from those detailed on RH.com will void the Laboratory Listing and Approvals (UL, ETL, CSA, etc.). If the listing is voided, this means the product may no longer be safe for use as modified. RH does not recommend modifying the product.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture.
Wipe clean with a soft, dry cloth.



 
CABRILLO PENDANT 36"

ASSEMBLY & INSTALLATION INSTRUCTIONS

UNITED STATES ENGLISH

CABRILLO PENDANT 36"**PARTS ENCLOSED**

- (A) Mounting Plate (1)
- (B) Canopy (1)
- (C) 18" Extension Rods (2)
- (D) 12" Extension Rods (2)
- (E) 6" Extension Rods (2)
- (F) Carabiner (2)
- (G) Nipple (1)
- (H) Bulb (included) (1)
- (I) Shade (1)

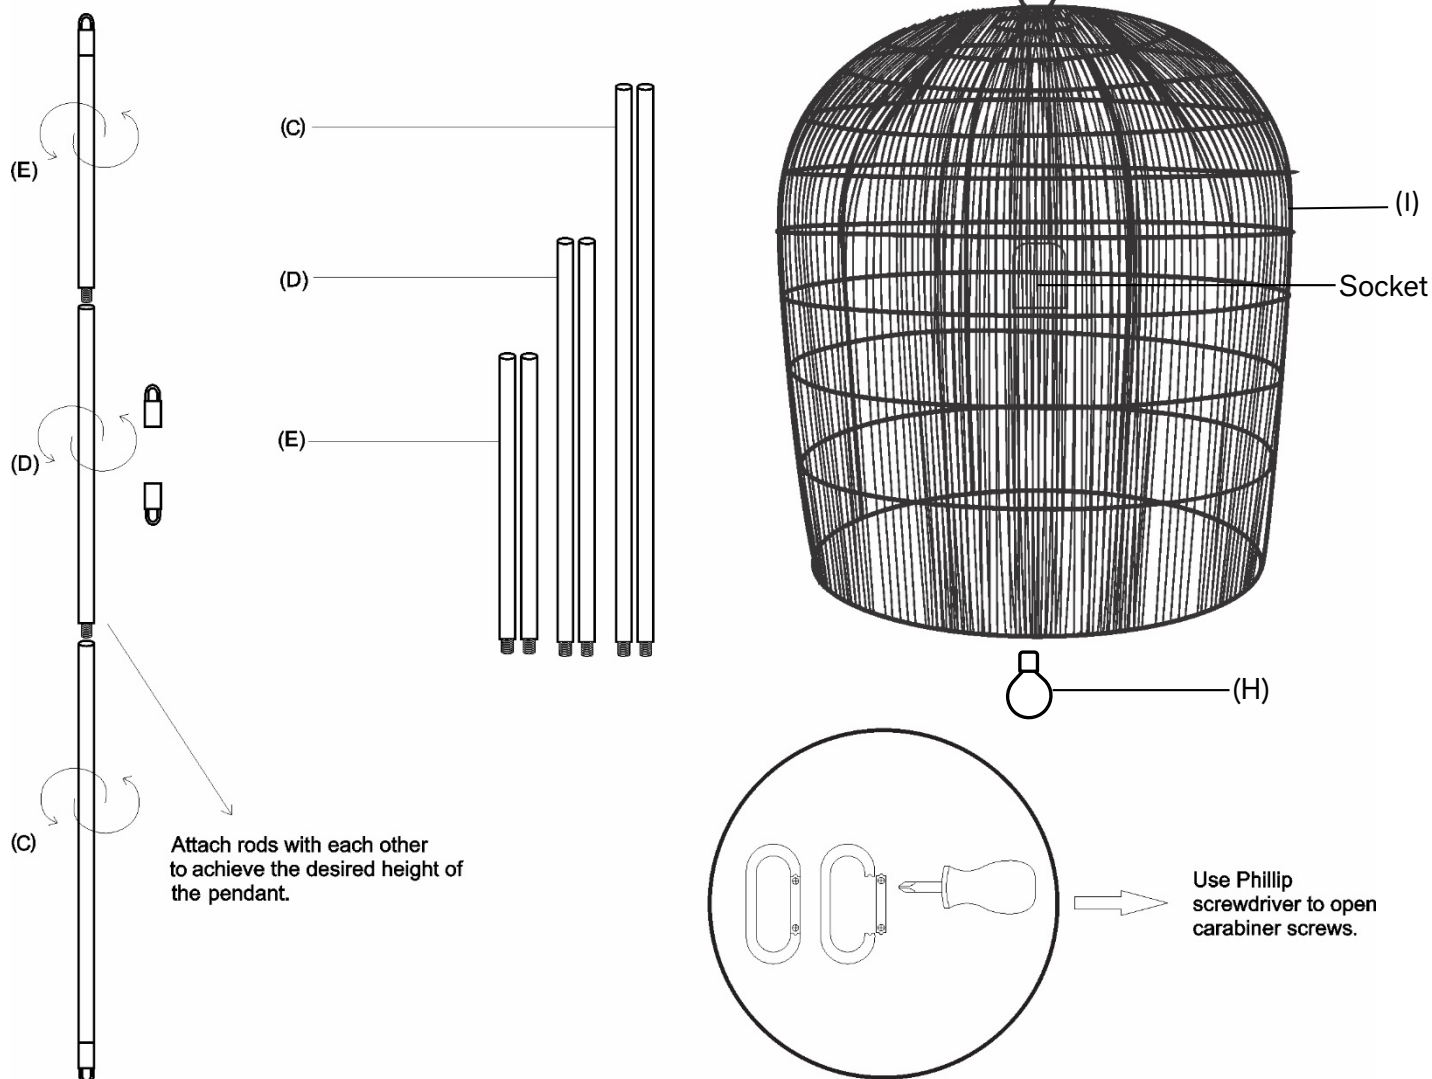

IMPORTANT: PLEASE READ

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR MOUNTING DIRECTLY TO A JUNCTION BOX. UNIQUE OR ALTERNATIVE INSTALLATION METHODS MAY REQUIRE DIFFERENT MOUNTING HARDWARE, WHICH HAS NOT BEEN INCLUDED. ALWAYS CONSULT WITH A LICENSED ELECTRICIAN BEFORE INSTALLATION.

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

IMPORTANT SAFETY FEATURES**BULBS**

This fixture has been rated for up to (1) 150-watt maximum Type A standard lightbulb (included). To avoid the risk of fire, do not exceed the recommended wattage.

VAULTED-CEILING COMPATIBILITY

This fixture is not vaulted-ceiling compatible.

DIMMER-SWITCH COMPATIBILITY

This fixture is not dimmer-switch compatible.

CEILING REINFORCEMENT

Fixtures weighing 50 lbs. or more will require additional reinforcement above the ceiling where they are to be installed.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch the bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.

WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

ASSEMBLY AND INSTALLATION**SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.**

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Determine the hanging length of the pendant. Attach the extension rods (C) (D) (E) according to the height needed.
3. Pass the wire through the connecting rods and pull the wire out from the back of the canopy (B).
4. Attach the mounting plate (A) to the ceiling and secure it with mounting screws and a suitable fastener from your local hardware store.
5. Attach nipple (G) to mounting plate (A).
6. Hook the carabiner to the connecting rods (C) (D) (E) and to the canopy loop (B).
7. Carefully inspect the two pendant attachment wires. One has very fine edges molded into the plastic coating - this is the NEUTRAL wire. The coating of the second wire is smooth - this is the HOT wire. The bare wire is the ground wire.
8. Connect the ground wire from the fixture to the ground wire (usually bare) from your ceiling box using a wire nut. If your home does not have a ground wire, attach the ground wire from the fixture to the green ground screw inside the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME IS PROPERLY GROUNDED.
9. Connect the NEUTRAL wire from your pendant with the neutral wire (usually white) from your ceiling box using a wire nut.
10. Connect the HOT wire from your light fixture to the hot (usually black) wire from your outlet box using a wire nut. DO NOT REVERSE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
11. Carefully insert the wire connection into the ceiling outlet box.
12. Attach canopy (B) with pendant light to attached mounting plate (A).
13. Insert the included bulb (H) into the socket.
14. Assembly is complete.

HEIGHT ADJUSTMENT INSTRUCTIONS

Determine drop measurement (ceiling to bottom of fixture) and adjust height by adding/removing extension rods (C) (D) (E).

ATTENTION: ADJUSTING THE HANG HEIGHT

Any adjustments or alterations to the fixture, cord, or overall hang height that differ from those detailed on RH.com will void the Laboratory Listing and Approvals (UL, ETL, CSA, etc.). If the listing is voided, this means the product may no longer be safe for use as modified. RH does not recommend modifying the product.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture.
Wipe clean with a soft, dry cloth.