




**CAMINO VINTAGE TWO-TIER CHANDELIER 38"**

ASSEMBLY & INSTALLATION INSTRUCTIONS

## CAMINO COLLECTION CAMINO VINTAGE TWO-TIER CHANDELIER 38"

## PARTS INCLUDED

- (A) Mounting Plate(1)
- (B1) Upper D-Ring(1)
- (B2) Carabiner(1)
- (B3) Lower D-Ring(1)
- (C) Canopy(1)
- (D) Canopy Ring(1)
- (E) Bottom Ring(1)
- (F) Tube(1)
- (G) Nuts(3)
- (H) Hook 3(3)
- (I) Hook 2(3)
- (J) Hook 1(3)
- (K) Extension Rods(4), 6" Rod(1)  
and 12" Rods(3)
- (M) 90 Degree Short Hooks(3)
- (N) Inline Short Hooks(3)
- (O) Top Ring(1)
- (a) Plastic Wire Connectors(3)
- (b) Small Ceiling Anchors(4)
- (c) Ceiling Screws(4)
- (d) Allen Key(1)
- (e) Ceiling Plate(1)
- (f) Steel Wire Connector(1)
- (g) Connector Screws(2)
- (h) Steel Wire(1)
- (j) Big Ceiling Anchors(2)
- (k) M6 Round Head Wall Screws(2)  
or G1/4-20T Round Head Screws(2)

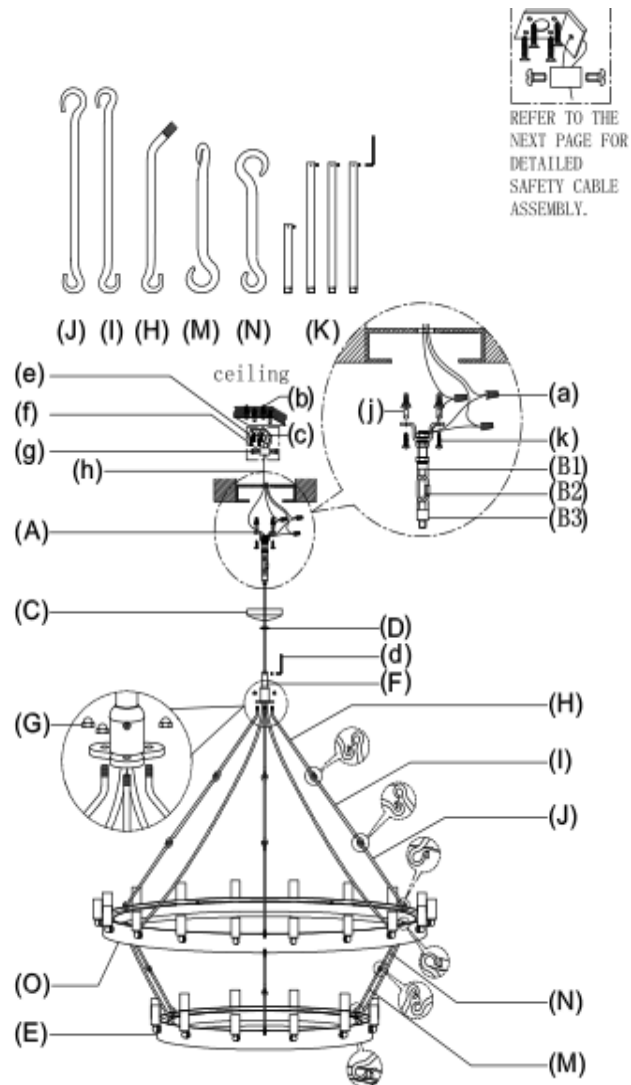

**IMPORTANT: PLEASE READ**

**PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR MOUNTING TO A WOODEN STRUCTURAL BEAM. UNIQUE OR ALTERNATIVE INSTALLATION TYPES MAY REQUIRE DIFFERENT MOUNTING HARDWARE, WHICH HAS NOT BEEN INCLUDED. ALWAYS CONSULT WITH A LICENSED ELECTRICIAN BEFORE INSTALLATION.**


**INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.**

**IMPORTANT SAFETY FEATURES****BULB**

This fixture has been rated for up to 15-watt maximum Type T or Type CA incandescent light bulbs. To avoid the risk of fire, do not exceed the recommended wattage.

**J-BOX SIZING**

The J-box width and length are 3.5 inches, depth is 1.5 inches, the detailed sizing pls refer to below sketch.

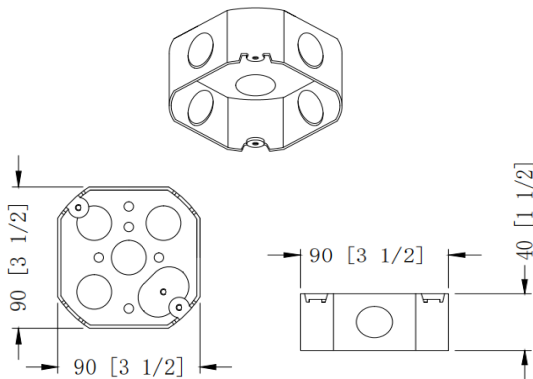**VAULTED CEILING COMPATIBILITY**

This fixture is vaulted-ceiling compatible, up to a maximum ceiling slope of any degrees.

**DIMMER SWITCH COMPATIBILITY**

This fixture is dimmer-switch compatible.

**CEILING REINFORCEMENT**

Fixtures weighing 50 lb. or more will require additional reinforcement above the ceiling where they are to be installed.

**WARNINGS**

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.




**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

**THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.**


**INSTALL SAFETY CABLE:**

1. Remove the Connector Screws (g) from Steel Wire Connector (f).
2. Pull the Steel Wire (h) to slide through one hole of the Steel Wire Connector (f) and side hole of the Ceiling Plate (e). Then connect to the other hole of the Steel Wire Connector (f).
3. Using two Connector Screws (g), secure the Steel Wire Connector (f) tightly based on desired hanging height.

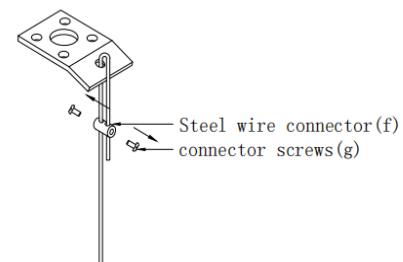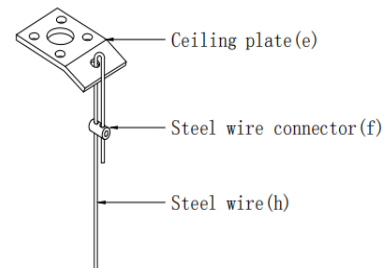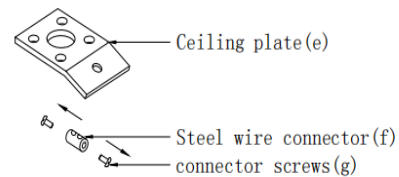

**HEIGHT ADJUSTMENT INSTRUCTIONS**


1. If you need to adjust the cord length, use a screwdriver to remove all screws on the metal cover (refer to illustration 1)

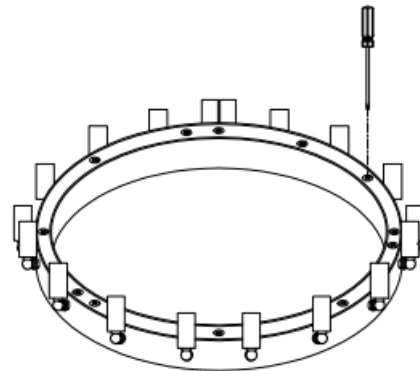**ILLUSTRATION 1**

2. Open and remove the metal cover to expose the cord connectors. Use the screwdriver to loosen the screws on the cord connectors, adjust the cord to the desired length (refer to illustration 2), then retighten the screws. Make sure all the cord lengths are the same to keep the fixture level.

3. Put the metal cover back on and make sure all screws are tight.

4. Keep the cord length as is unless an adjustment is necessary.

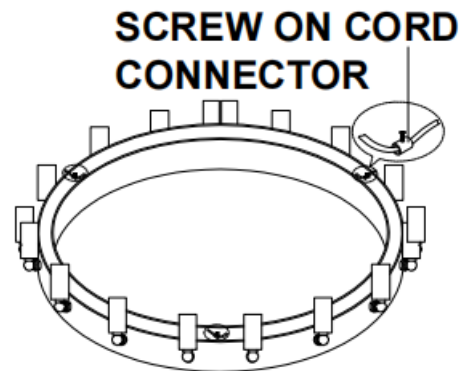**ILLUSTRATION 2**

**ASSEMBLY AND INSTALLATION****SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.**

1. Carefully remove all parts from the box and remove plastic coverings.
2. Turn OFF power to the junction box where the fixture will be installed.
3. Insert the 90 degree Short Hook (M) into the Bottom Ring (E).  
Insert the Inline Short Hook (N) into the Top Ring (O). Then connect Hook (M) and Hook (N).
4. Insert the Hook 1 (J) into the Top Ring (O) and Hook 2 (I).  
Connect Hook 2 (I) and Hook 3 (H). Then insert Hook 3 (H) into the hole of the Tube (F) using the Nut (G) to tighten it.
5. Connect the Extension Rod (K) in different lengths to the Connecting Tube (F). Then slide the Canopy Ring (D) and Canopy (C) onto the other end of Extension Rod (K).  
Determine how many extension rods need to be assembled according to the desired height.
6. Insert the Extension Rod (K) into the lower D-Ring (B3) and turn clockwise until the Extension Rod (K) screws into the lower D-Ring (B3). Secure the Extension Rod (K) by using the Allen Key (d) provided. Attach B1 to B2, B3 to B2.
7. Drill two holes in the ceiling to align with the holes on the Mounting Plate (A), and insert Big Ceiling Anchors (j). Then screw two Round Head Wall Screws (k) into anchors. If desired, use two G1/4-20T Round Head Screws (k) to fix the Mounting Plate (A) onto the outlet box.
8. Drill four holes in the ceiling to align with the holes on the Ceiling Plate (e), and insert Small Ceiling Anchors (b).
9. Screw four Ceiling Screws (c) into anchors.
10. Pull the Steel Wire (h) to thread through the Steel Wire Connector (f) and side hole of the Ceiling Plate (e). Then connect to the other hole of the Connector (f). Using two Connector Screws (g), secure tightly based on desired hanging height.
11. Connect the hot wire to the hot junction box wire (usually black or smooth) with a Plastic Wire Connector (a) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction box wire (usually white or ribbed) with Plastic Wire Connector (a) and wrap the connection with electrical tape.
12. Attach the ground wire from the fixture to the ground junction box wire from the outlet box (usually green or bare wire) with a Plastic Wire Connector (a) and wrap the connection with electrical tape.
13. Slide the Canopy Ring (D) up until it reaches underneath the canopy. Then screw tightly to hold the Canopy (C) against the ceiling.
14. Insert 30 bulbs into the threaded sockets.
15. Restore power to the junction box and test fixture.
16. Installation is complete.

**ATTENTION: ADJUSTING THE HANG HEIGHT**

Any adjustments or alterations to the fixture, cord, or overall hang height that differ from those detailed on RH.com will void the Laboratory Listing and Approvals (UL, ETL, CSA, etc.). If the listing is voided, this means the product may no longer be safe for use as modified. RH does not recommend modifying the product.

**CARE INSTRUCTIONS**

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.