
RH

FORTUNY® STUDIO FLOOR LAMP


PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. IF YOU ARE UNSURE ABOUT WHAT MOUNTING METHOD YOU SHOULD USE, CONSULT A QUALIFIED PROFESSIONAL OR YOUR LOCAL HARDWARE STORE.

PARTS ENCLOSED

- (A) Head
- (B) Rod
- (C) Fork Screw
- (D) Friction Lock
- (E) Stand
- (F) Pin
- (G) Knob
- (H) Base
- (I) Lightbulb
- (J) Bulb Cover
- (K) Knurled Screw
- (L) Cone
- (M) Electrical Cable

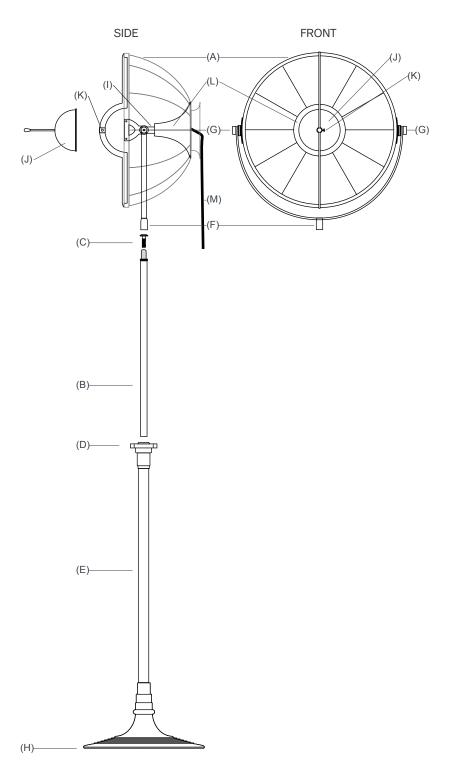

FORTUNY® STUDIO FLOOR LAMP

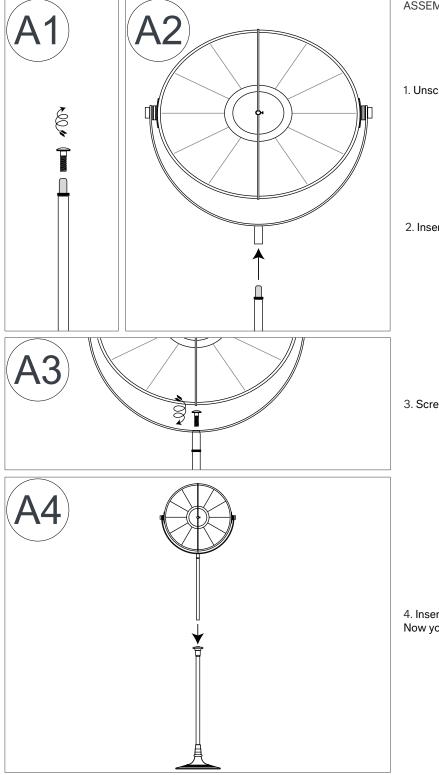


ASSEMBLY & INSTALLATION


1. Unscrew Screw (C) from Rod (B).

2. Insert Rod (B) into Pin (F) as shown.

3. Screw tight Screw (C) into Pin (F).

4. Insert Rod (B) into Friction Lock (D) on top of Stand (F). Now you can screw tight the Friction Lock (D).

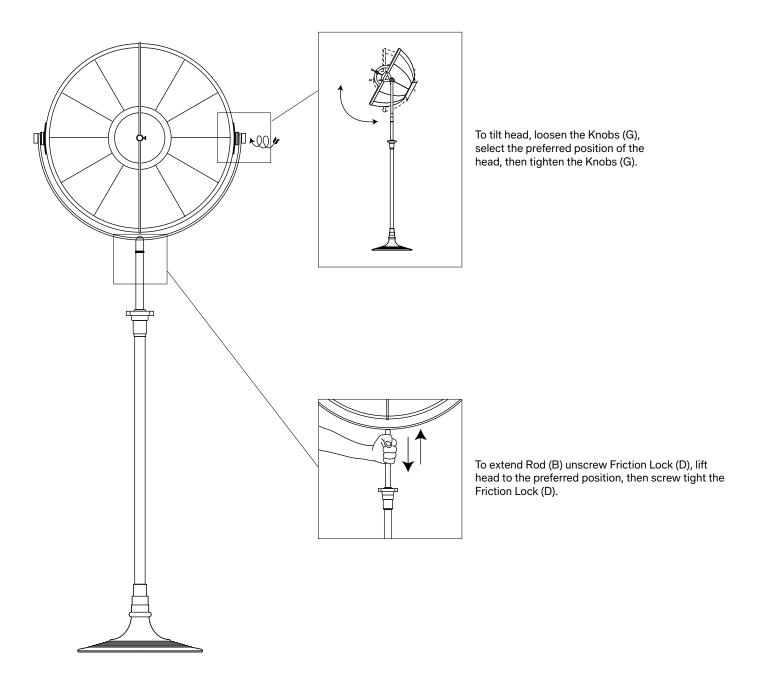

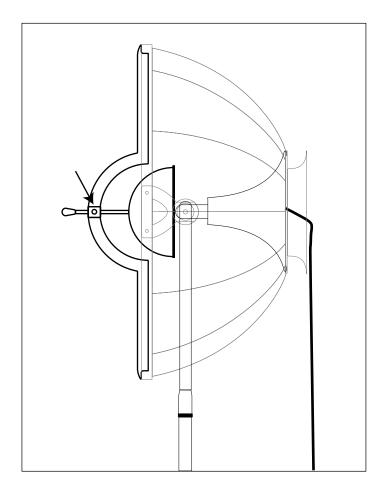

To replace the bulb, first turn off the electricity, then unscrew Knurled Screw (K) by hand and gently pull off the Bulb Cover (J). Remove Lightbulb (E).

Suggested wattage: halogen lamp max 70W-E12 / dimmable led lamp.

ATELIER 41 comes with crossbar and black bulb cover as shown in the drawing.

CARE INSTRUCTIONS

Wipe all surfaces with a soft, dry cloth.

Do not use any harsh cleaners (including ammonia-based products) or abrasives, as they will damage the finish.

The Cone should be cleaned periodically with a soft cloth dampened with water.

The inner part of the lamp should be cleaned periodically only with a soft cloth.