

RH

GARONNE SCONCE 18"

ASSEMBLY & INSTALLATION INSTRUCTIONS

UNITED STATES ENGLISH


GARONNE SCONCE 18"

PARTS INCLUDED

- (A) Mounting Plate (1)
- (B) Phillips Round-Head Screws 1"L (2)
- (C) Type A19 E26 Base LED Bulb (1)
- (D) Backplate (1)
- (E) Cap Nuts (2)
- (F) Thumb Screw (1)
- (G) Shade (1)
- (H) Hex Socket Cap Screw 5/8"L (1)
- (I) Allen Wrench (1)
- (J) Wire Nuts (3)

TOOLS NEEDED

- Phillips Screwdriver (1)

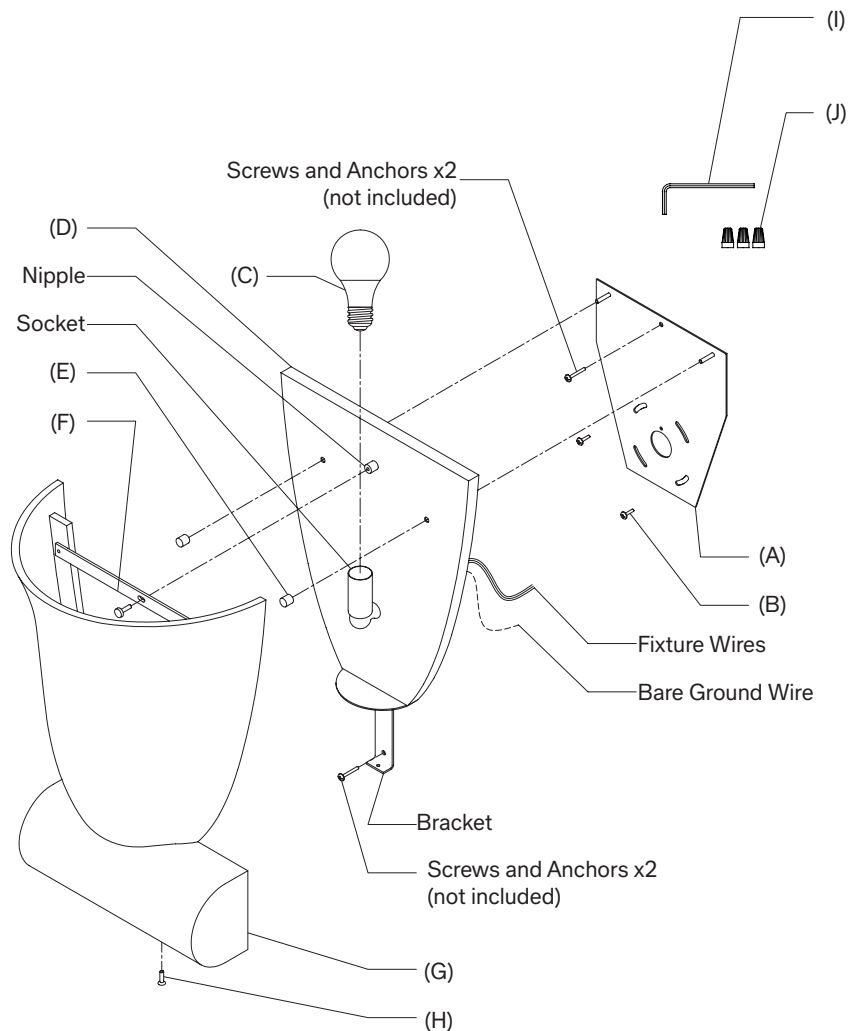

IMPORTANT: PLEASE READ

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR MOUNTING DIRECTLY TO A JUNCTION BOX. UNIQUE OR ALTERNATIVE INSTALLATION TYPES MAY REQUIRE DIFFERENT MOUNTING HARDWARE, WHICH HAS NOT BEEN INCLUDED. ALWAYS CONSULT WITH A LICENSED ELECTRICIAN BEFORE INSTALLATION.

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

IMPORTANT SAFETY FEATURES**BULBS**

This fixture has been rated for one (1) 9-watt-maximum Type A19 E26 Base LED Bulb (C). To avoid risk of fire, do not exceed the recommended wattage.

DIMMER SWITCH COMPATIBILITY

This fixture is dimmer-switch compatible, and may be used with a forward-phase (TRIAC) dimmer.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.

WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

ASSEMBLY AND INSTALLATION**SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.**

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Secure the Mounting Plate (A) to the wall's outlet box with the Phillips Round-Head Screws 1"L (B) provided. Mark the Anchor location. Remove the Mounting Plate (A) from the wall's outlet. Install the appropriate anchor (not included) at the marked location. Reinstall the Mounting Plate (A) onto the wall's outlet box with the Phillips Round-Head Screws 1"L (B). Make sure the Mounting Plate (A) is aligned and leveled before installing the anchor.
3. Attach the Backplate (D) to the affixed Mounting Plate (A) with the Cap Nuts (E). Mark the Backplate (D) bracket anchor location on the wall. Remove Cap Nuts (E) and Backplate (D) from the Mounting Plate (A) and install the anchor (not included) at the marked location on the wall. Make sure the fixture is aligned and leveled before installing the anchor.
4. Carefully inspect the wires on the fixture. White wire is the NEUTRAL WIRE. Black wire is the HOT WIRE. Bare wire is the GROUND WIRE.
5. Bring the Backplate (D) close to the wall's outlet box for wiring.
6. Connect the GROUND WIRE from the fixture with the ground wire (usually bare) from your outlet box using a Wire Nut (J). If your house does not have a ground wire, attach the GROUND WIRE from the fixture to the green grounding screw inside of the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
7. Connect the NEUTRAL WIRE from your fixture with the neutral wire (usually white) from your outlet box using a Wire Nut (J).
8. Connect the HOT WIRE from your fixture with the hot wire (usually black) from your outlet box using a Wire Nut (J). DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
9. Tuck the wire connection neatly into the wall's outlet box.
10. Attach the Backplate (D) to the affixed Mounting Plate (A) and secure with the Cap Nuts (E) then secure the bracket with the appropriate screw (not included).
11. Secure the Shade (G) onto the Backplate's (D) Nipple with the Thumb Screw (F) then align and secure the Shade (G) onto the bracket with the Allen Wrench (I) and the Hex Socket Cap Screw 5/8"L (H).
12. Insert the Type A19 E26 Base LED Bulb (C) into the socket.
13. Assembly is complete.

CARE INSTRUCTIONS

Wipe all surfaces with a soft, dry cloth. Clean glass with a mild soap and water mixture. Do not use any harsh cleaners (including ammonia-based products) or abrasives, as they will damage the finish.