


RH

IXTAPA FIRE TABLES

OWNER'S MANUAL MODELS 42100332, 42100335, 42100334, 42100337,
90100030, 90100026, 90100022, 42100167 & 42100190

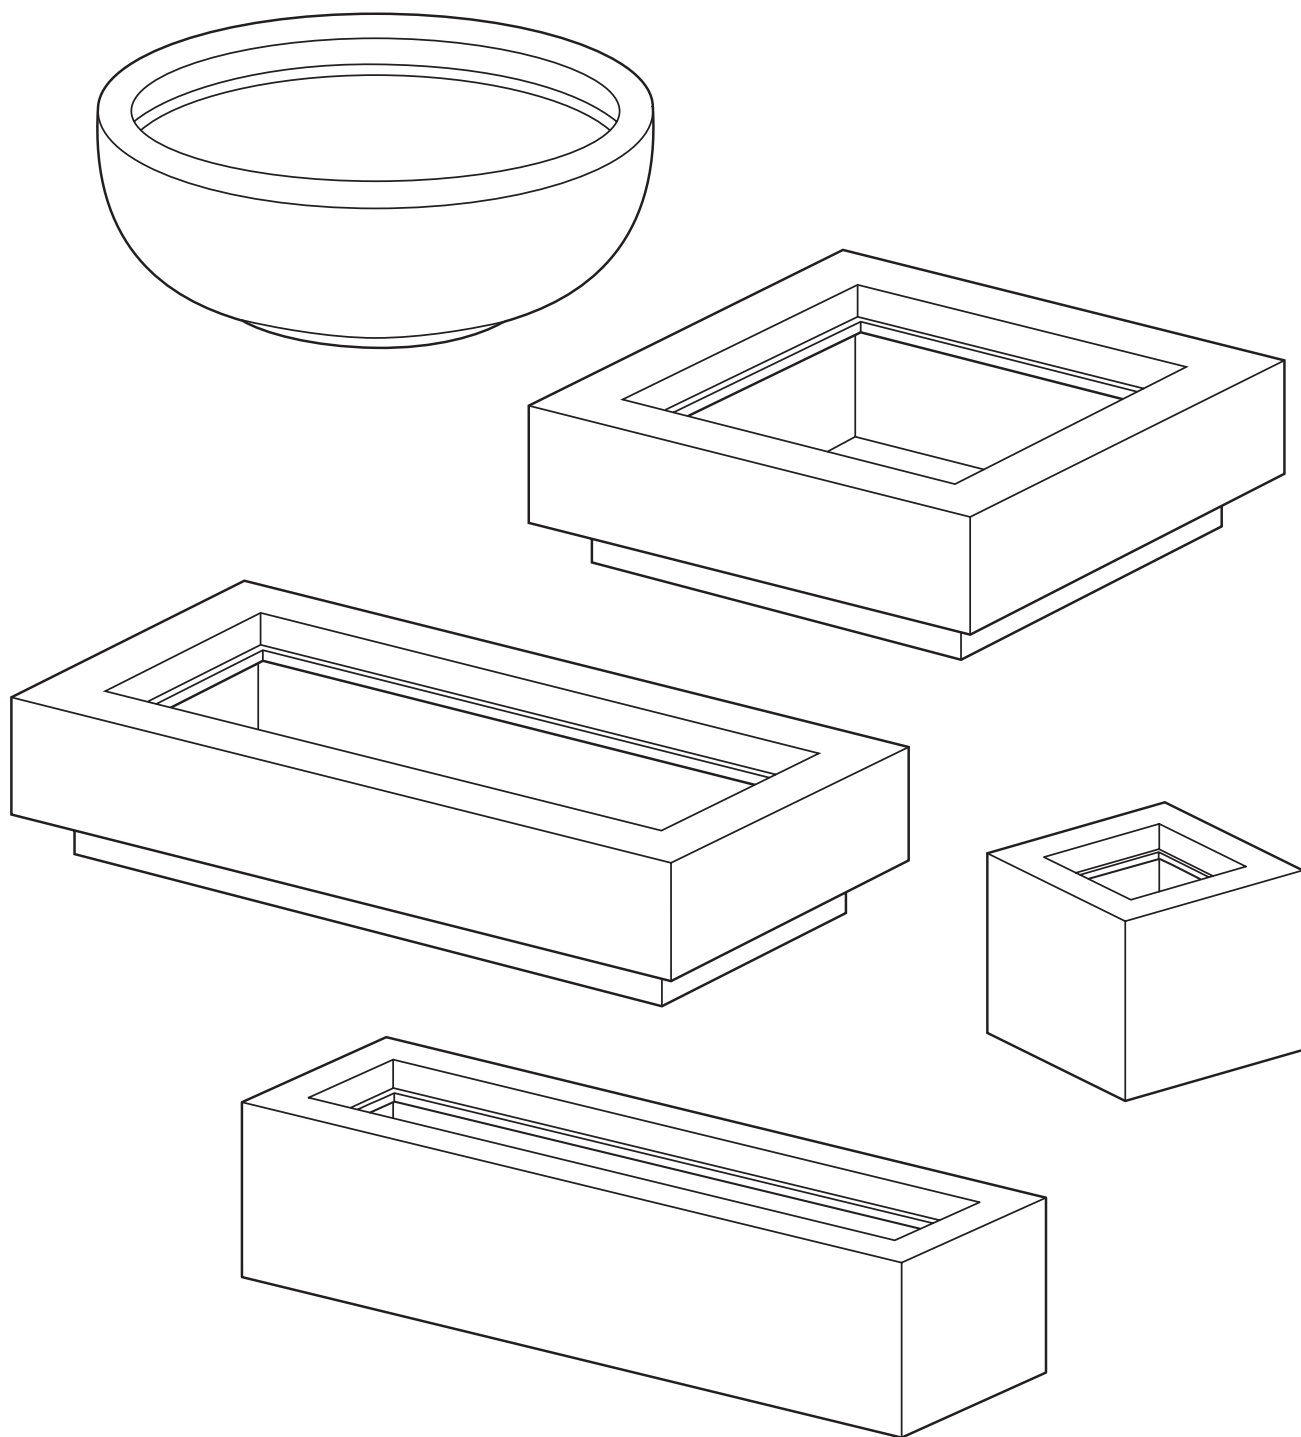

Ixtapa Fire Tables are manufactured under license by Eldorado Stone®
For repair and replacement parts, contact Eldorado Stone at 800-925-1491.

Burners comply with:
ANSI Z21.97/CSA 2.41-2014 *Outdoor Decorative Gas Appliances*



Tested by RADCO, an independent third party testing laboratory, and certified by ICC-ES® an accredited certification body.
The burners in this fire bowl have been evaluated and certified for both Canadian and USA Markets (CSA Standards). The
following information regarding safe operation and maintenance of this appliance is a result of the tests performed by
RADCO and certified by ICC-ES.

CONTENTS

SAFETY INSTRUCTIONS	4
GAS REQUIREMENTS	7
LIQUID PROPANE	7
SET-UP	8
PLACE FIRE TABLE IN DESIRED LOCATION	8
CONNECT A GAS LINE	9
PERFORM A LEAK TEST	10
PLACE DECORATIVE STONE IN FIRE TABLE	11
OPERATING THE FIRE TABLE	12
TROUBLESHOOTING	13
CLEANING, MAINTENANCE & STORAGE	14
WARRANTY	15
IXTAPA FIRE TABLE DIMENSIONS & PART LISTS	16
MODELS 42100332 / 42100335	16
MODELS 42100334 / 42100337	18
MODEL 90100030	20
MODEL 90100026	22
MODEL 90100022	24
MODEL 42100167	26
MODEL 42100190	28

SAFETY INSTRUCTIONS

⚠ WARNING

FOR OUTDOOR USE ONLY.

Do not store or use gasoline, or other flammable vapors and liquids, in the vicinity of this or any other appliance.

A liquid propane cylinder must not be stored in the vicinity of this or any other appliance, even if disconnected.

Failure to exactly follow all instructions may result in fire or explosion, causing property damage, personal injury or loss of life.

Improper installation, operation or maintenance can cause injury or property damage. Read all instructions thoroughly.

We recommend installation is completed by a locally licensed professional. Follow all local codes.

We suggest that our products be serviced annually by a professional Gas Specialist certified in the US by the National Fireplace Institute (NFI).

The burner must be replaced prior to operating the appliance if there is evidence of damage. The replacement burner must come from the original manufacturer.

Failure to install the parts in accordance with these instructions may result in property damage or personal injury, as will the installation of parts other than those specified for use with this appliance.

Only use the fuel type specified for this fire table. Verify the correct fuel type and pressure by checking the label on the back side of the burner assembly pan. Never use an alternative fuel beyond those specified for use with this appliance.

CALIFORNIA PROPOSITION 65 WARNING:

Chemicals known to the State of California to cause cancer, birth defects or other reproductive harm are found in and/or created by the combustion of natural gas, propane, butane and other fuels. Always operate this unit as described in the owner's manual and in well-ventilated areas.


⚠ DANGER

CARBON MONOXIDE HAZARD

This appliance can produce carbon monoxide, an odorless flammable gas. Using it in an enclosed space such as a camper, tent, car or the inside of your home can result in personal injury and/or death.

If you smell gas:

- Shut off gas to the appliance.
- Extinguish any open flame.
- If odor continues, keep away from the appliance and immediately call your gas supplier or fire department.

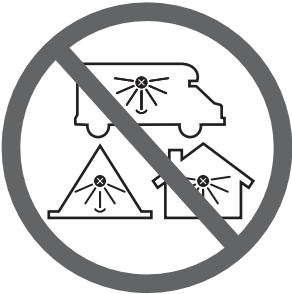

⚠ CAUTION

Do not remove the metal data plates attached to the underside of the fire table burner. These plates contain important information.

Do not use charcoal or any other solid fuel in gas-burning appliances.

Do not use your fire table for cooking. Do not heat any unopened glass or metal containers of food on the fire table. Pressure may build up and cause the containers to burst, possibly resulting in serious personal injury or damage to the fire table.

Never use the fire table in windy conditions. If used in a consistently windy area, a windbreak is required. Always adhere to the specified clearances listed in this manual.

Never allow clothing or other flammable materials to come in contact with any hot surface until it has fully cooled. Never wear loose-fitting or hanging garments while using your fire table. Fabric may ignite and result in personal injury.

When handling propane gas line and connectors, do not allow them to come in contact with any metal surfaces. Do not drop propane connectors.

⚠ SAFETY

In the event that the burner goes out, turn burner knobs to the full **OFF** position and let it air out. Do not attempt to use the fire table until the gas has had time to dissipate.

The propane gas source to the fire table must be installed with a regulator. Do not operate if the regulator has been removed, as a fire or explosion can occur.

When using the fire table, do not touch the rock, fire screen, or outside surface of the unit, as these areas can become extremely hot and cause burns.

Close supervision of children is necessary when any appliance is in use. Never leave the fire table unattended when in close proximity to children.

Do not reach over your fire table when hot or in use.

Do not store items of interest to children around or below the fire table.

Never allow children to sit or stand on any part of the fire table.

Keep all electrical supply cords away from the heated areas of the fire table.

Clothing or any other flammable materials should not be hung on or near the appliance.

Installation and repair should be done by a qualified service technician. The appliance should be inspected once before initial use and at least once annually by a qualified service technician. More frequent cleaning may be required. It is imperative that the control compartment, burner and circulating air passageways of the appliance be kept clean.

It is the installer’s responsibility to ensure safe installation and to educate the end user on the proper operation of the burner unit. The installer must leave the owner’s manual, metal plate with operating instructions and valve key with the end user.

Read this section before installation. It explains what you need to know about liquid propane prior to setting up your fire table.

LIQUID PROPANE

Your fire table is not provided with a propane tank; it must be purchased separately, following the specifications below.

SPECIFICATIONS

The 20 lb propane gas supply cylinder is constructed and marked in accordance with the specifications for propane gas cylinders as required by the U.S. Department of Transportation (DOT), *Specifications for LP-Gas Cylinders or the Standard for Cylinders, Spheres and Tubes for Transportation of Dangerous Goods and Commission*, CAN/CSA B339, as applicable.

Manifold Pressure: For plumbed-in liquid propane installation, use a regulator.

Supply Pressure: Maximum line pressure for plumbed-in propane is 14” W.C. psi (3.5 kPa). Minimum line pressure for propane is 11” W.C.

Pressure Regulator: The unit must be used with the supplied gas pressure regulator and hose assembly. The regulator will control and maintain a uniform gas pressure in the manifold. The burner orifice has been sized for the gas pressure delivered by the regulator. Replacement pressure regulator and hose assemblies must be those specified in this manual.

Cylinder Specification: Any propane gas supply cylinder used with this fire table must be approximately 12” in diameter and 18” in height, with a maximum fuel capacity of 20 lb (5 gal). Full cylinder weight should be approximately 38 lb (43.7 lb nominal water capacity.) Always make sure the cylinder dust cap on the valve outlet is sealed during transport and whenever the cylinder is not connected to the fire table. The cylinder must include a collar to protect the cylinder valve.

Filler Valve: If you do not have an updated filler valve on your existing propane tank, you will need to purchase one at your local hardware store in order to be able to refill the tank at any filling station.

Transporting Gas Cylinder: Only one cylinder should be transported at a time. Transport the cylinder in an upright and secure manner with the control valve turned off and the dust cap in place.

PRESSURE	LIQUID PROPANE
MINIMUM	8.0” W.C.
NOMINAL	11.0” W.C.
MAXIMUM	½ psi (14.0” W.C.)

*** PRESSURE TESTING**

If this fire table is installed with a fixed fuel piping system and equipped with an appliance gas pressure regulator, the fire table and its individual shut-off valve must be disconnected from the gas supply piping system during any pressure testing of the system at test pressures in excess of ½ psi (3.5 kPa).

The fire table must be isolated from the gas supply piping system by closing its individual manual shut-off valve during any pressure testing of the gas supply piping system at test pressures equal to or less than ½ psi (3.5 kPa).

SET-UP

Set-up of your Ixtapa Fire Table consists of 4 easy steps:

- 1. Place Fire Table in Desired Location
- 2. Connect Gas Line
- 3. Perform a Leak Test
- 4. Place Decorative Stone in Fire Table

This appliance, when installed, must be electrically grounded in accordance with local codes or, in the absence of local codes, with the National Electrical Code, ANSI/NFPA 70; or the Canadian Electrical Code, CSA C22.1, if applicable.

1 PLACE FIRE TABLE IN DESIRED LOCATION

IXTAPA FIRE TABLES ARE DESIGNED FOR OUTDOOR USE ONLY.

Never install this appliance in a building, garage or other enclosed room, or under a sealed overhead structure, such as a shed or breezeway. Keep clear of trees and shrubs.

Do not place fire table near windows or vents that can be opened into your home.

Maintain sufficient distance from any overhead area so as to not overheat any combustible material such as a patio cover. The area surrounding your fire table should be kept clean and free from flammable liquids such as solvents, cleaning fluids, and gasoline, or other combustible materials such as mops, rags or brooms.

Do not block the vents located near the base of your fire table, as gas may build up in the case of a leak and cause serious damage.

Do not install appliance where it may get excessively wet. Do not use this appliance if any part has been underwater. Immediately call a qualified service technician to inspect the unit and to replace any part of the control system or gas control that has been underwater.

Place your fire table on a flat, stable surface in an outdoor location such as a patio or deck. Maintain the following clearances to combustible materials:

- Sides & Back48 inches (122 cm)
measured from side
- Top120 inches (305 cm)
measured from hearth
- Adjustable Legs½ inch (1.27 cm)
measured from bottom of fire table to flooring surface (for ventilation)

VENTILATION


Fresh air must be able to pass though the fire table vents to safeguard against residual gas accumulation.

Failure to allow proper ventilation may cause fire or explosion. Place the fire table on a solid surface such as concrete to allow air flow through the vents underneath and on the side of the unit. The vents must never be obstructed.

Using the adjustable feet on the base, maintain a ½" clearance from the bottom of the fire table to the flooring surface. See figures below.



(External View)

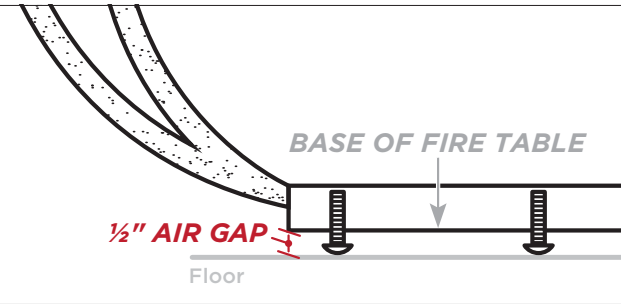

2 CONNECT A GAS LINE

LOCATION OF GAS INLET

Your fire table will arrive with the burner and burner plate preset in the unit, as shown in Figure A. Lift them up to access the gas inlet.

The gas line between the burner and the gas valve on the side of the fire table has been connected for your convenience.

We recommend installation be performed by a locally licensed professional. Follow all local codes.

Unless you have a permanent liquid propane gas line installed, you will need to run the black liquid propane gas line under the fire table and through the air gap space between the base of the unit and the flooring surface. See Figure B.

Note: Some units have mesh wire at the base of the fire table. Cut the mesh wire to allow access for the gas line to pass under the base of the unit. See Figure C.

The flex line that runs from the gas valve to the burner has already been connected for you. You will only need to connect the propane line from the gas valve to the propane tank, as shown in Figure D.

Perform a leak test before replacing the burner plate. (See page 10).

Connect the black liquid propane line to the gas cylinder. Use an OCC-1 propane connector with a regulator. (See page 7 for description).

When you connect the regulator to the tank valve, tighten the black OCC-1 nut clockwise by hand. **DO NOT** use a wrench to tighten.

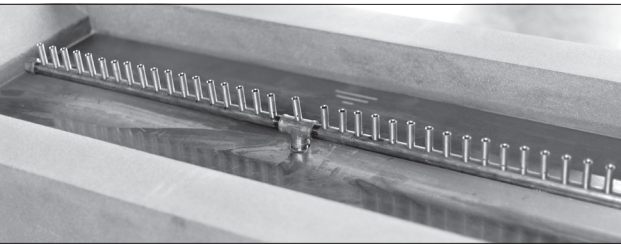


Figure A (External View)

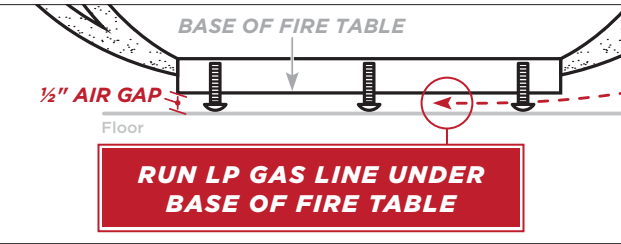


Figure B

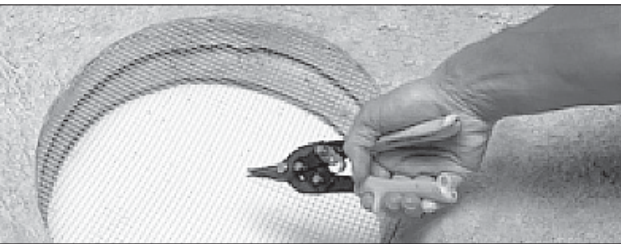


Figure C (Internal View)

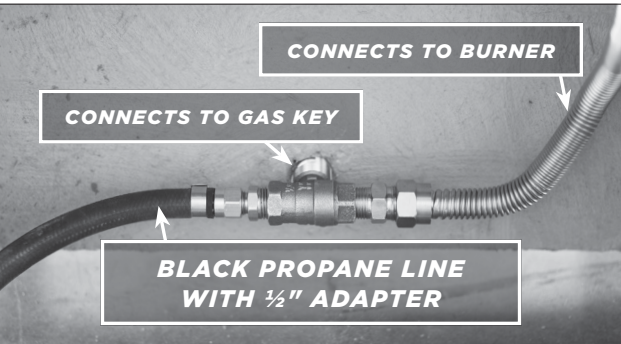


Figure D (Internal View)

3 PERFORM A LEAK TEST

Perform a leak test at least once a year whether the gas supply cylinder has been disconnected or not. In addition, whenever the gas cylinder is connected to the regulator or any part of the gas system is disconnected or replaced, perform a leak test.

As a safety precaution, remember to always test for leaks outdoors in a well-ventilated area.

Never smoke or permit sources of ignition in the area while doing a leak test. Do not use a flame, such as a lit match, to test for leaks.

1. Prepare a leak testing solution by mixing equal amounts of liquid soap and water in a spray bottle.
2. Make sure all the control knobs are in the **OFF** position.
3. Turn on the gas.
4. Apply the leak-testing solution by spraying it on the joints of the gas delivery system. The appearance of bubbles in the soap solution indicates that a leak is present.

5. Stop the leak by tightening the loose joint or, if caused by a faulty part, replace with a part recommended by the manufacturer. If the cylinder valve is damaged, do not attempt to repair it, as it must be replaced.
6. Turn the control knob back to the full **OFF** position.

If you are unable to stop a leak:

7. Turn the control knob back to the full **OFF** position.
8. Shut off the gas supply to the fire table and release the pressure from the hose and the manifold.
9. Remove the propane gas cylinder from the fire table.
10. Call an authorized gas appliance service technician or a liquid propane gas dealer.

Do not use the appliance until the leak is fixed.

4 PLACE DECORATIVE STONE IN FIRE TABLE

After you have completed the plumbing installation, you can fill the fire table with the decorative filler material provided.

The type of filler placement, such as lava rock, decorative stone or glass, is entirely your choice, but it must be rated for use with fire. It will not affect the operation of the fire table in any way. The filler material may be placed on the burner, but must not exceed 1" in height. Excessive filler material can impede gas flow and cause a build-up, potentially resulting in an explosion.



(External View)

OPERATING THE FIRE TABLE

Upon completing the gas line connection, a small amount of air will be in the lines. When operating the burner for the first time, it will take a few seconds for the lines to purge themselves of this air.

Once cleared of air, the burner will light and operate as indicated in the instructions. Subsequent uses of the appliance will not require purging the lines unless the gas supply has been disconnected.

Inspect the gas hose before each use of the fire table. If the hose shows evidence of excessive abrasion, wear or any other damage, it must be replaced before using the fire table.

Inspect the burner before each use of the fire table. If there is any evidence that the burner is damaged, it must be replaced before operating.

Never allow the ON/OFF valve to remain in the open position without placing a burning match on top of the burner *FIRST!*

In order to safely turn off the burner, you must have clear and easy access to the ON/OFF valve *AFTER* the appliance is installed and connected to the gas supply.

Make sure the burner is in place prior to using the appliance. If the burner is damaged, install a replacement burner as specified by the manufacturer.

FOR YOUR SAFETY, READ BEFORE LIGHTING

- Before operating the fire table, smell for gas odors. Be sure to smell the surrounding floor area, as some gases are heavier than air and will settle on the ground.
- Use only your hand to turn the manual gas control valve. Never use tools. If the valve will not turn by hand, do not try to repair it. Call a qualified service technician. Excessive force or faulty repair may result in a fire or explosion.

LIGHTING INSTRUCTIONS

1. Turn the ON/OFF valve located on the side of fire table to the full **ON** position.
2. Make sure fuel supply is properly connected and turned on at the valve.
3. When you hear gas flowing, use either a long wooden match or a butane fireplace lighter to place a flame near the burner.
4. If the burner does not light or stay lit, or if the flame is very low, shut off the gas supply and wait five minutes to allow all fumes to clear. Start again from Step 1, making sure all gas valves are completely open.

TURNING OFF GAS

Turn the ON/OFF valve on the unit to the **OFF** position, then close the valve on the propane tank.

NOTE

The propane regulator in this appliance is equipped with a low flow protection device. Unless the propane cylinder valve is opened before the valve on the unit, the gas flow will be reduced, resulting in a very small flame.

To reset this device, shut off the valve on the unit, disconnect the hose from the cylinder to relieve the pressure, then close the propane cylinder valve.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSES	REMEDY
Will not light	Air in gas line	If newly installed, may take several attempts to purge air
	Debris in gas line	Confirm gas line is clear (of insulation, dirt, plastic, excessive pipe sealer, etc.)
	Improper gas pressure	Confirm proper gas pressure
Will not stay lit	Improper gas pressure	Confirm proper gas pressure
	Improperly applied media	Review media application
Noise <i>Note: The movement and combustion of gas will create low, unavoidable levels of noise</i>	Passage of air/gas across irregular surfaces	Remove any tight bends or kinks in gas supply line
Unit is producing excess smoke/soot <i>Note: It is natural and unavoidable for appliance sets to produce moderate levels of carbon (soot) where flames contact the media</i>	Excessive flame impingement or blockage	Separate the media to allow more flame passage
	Improper fuel and/or air mixture	Remove any foreign items from the flame pattern and check for proper orifice sizing
Burner flame is too low or too high	Incorrect gas supply or pressure	Check for proper gas supply pressure
	Blocked burner orifice or ports	Free burner orifice or ports of any debris or blockage
	Improper burner orifice size	Verify proper burner orifice sizing
Unit produces unwanted odors	Gas leak, see <i>Warning Statement</i>	Check for and seal all gas leaks

CLEANING, MAINTENANCE & STORAGE

CLEANING

Inspect the appliance before initial use. Clean the appliance and have it inspected by a qualified field service technician at least once a year.

Periodically examine the burner. If the burner is dirty, clean it with a soft wire brush. Also examine the area around the burner air shutter. Remove any dirt or debris in this area to ensure long life and trouble-free operation of the appliance.

The easiest way to clean the fire table burner is to let it cool off completely after heating and then spray the enclosure with water. *DO NOT* spray water directly onto the burner.

For routine cleaning of the fire table, wipe down with a damp cloth or sponge. Avoid using any cleaners, as they may contain chemicals that could cause discoloration. To remove stains, use a marble or granite stain remover, available at any home improvement store.

When no longer in use and after completely cooling off, cover your fire table with a full-length cover to protect from detrimental weather effects and environmental pollutants.

Before placing the cover on the fire table, make sure the unit is shut off and has had sufficient time to cool. Also make sure the gas lines are disconnected. Then, place the cover over the unit, using the straps to secure it against the wind.

More frequent cleaning may be required. It is imperative that the control compartment, burner and circulation passageways be kept clean and free of any obstruction.

MAINTENANCE

Periodically check the hose connecting the propane gas cylinder to ensure it is not cracked or damaged in any way.

Spiders and insects can nest in the burners and block the gas and airflow to the ports. This can create a dangerous obstruction that can cause a fire from behind the valve panel. Inspect and clean the burners periodically.

Any guard or other protective device removed for servicing must be replaced prior to operating the appliance.

If there is excessive abrasion or wear of any of the components, or if the fuel supply hose is cut or cracked, they must be replaced prior to operating the appliance.

Inspect the fuel supply connection for signs of leakage before each use of the appliance.

Do not attempt to repair or replace any part of the fire table on your own. Have a qualified technician perform all service. Any repairs made by a non-approved service technician will void your warranty.

STORAGE

When your fire table is not in use, turn off the gas at the source.

This appliance can only be stored indoors if it has been disconnected from its fuel supply.

Store propane cylinders outdoors in a well-ventilated area and out of the reach of children. Disconnected cylinders must have threaded valve plugs firmly installed and must not be stored in a building, garage or any other enclosed area.

To extend the life of your fire table, protect and cover it from the elements when not in use. Before installing the storage cover, ensure the appliance has had ample time to cool off. Damage caused to the storage cover due to heat or burns is not covered by the warranty.

WARRANTY

FIRE TABLE

The fire table is warranted to be free from defects in material and workmanship for one year from the date of purchase.

If a part proves to be defective under normal use, the part will be repaired or replaced. Our obligation under this warranty is to repair or replace defective parts at our discretion. If we determine that repair of a covered item is not feasible, we reserve the right to replace the defective merchandise with merchandise equal in value to the original purchase price.

Warranty repair or replacement are the sole discretion of Eldorado Stone and this warranty does not cover costs therein, including but not limited to: freight, removal, re-installation, etc.

There will be no charge for parts on a covered item. However, cost of labor is the responsibility of the owner. Shipping and handling charges will apply to all warranted replacement parts. The service agent may assess a reasonable travel or mileage charge per service call.

This limited warranty applies only to fire tables normally used for personal, family, or household purposes and specifically excludes rental or commercial applications.

This warranty is non-transferable.

Decorative stones and decorative glass are not covered by this warranty.

This warranty is void if the fire table has been subject to negligence, alteration, misuse, repairs, dings, dents, scratches, or incorrect and/or prohibited applications as specified in the owner's manual.

Natural gas lines must be installed by a licensed plumber only or local gas company agent.

The original purchaser acknowledges and agrees that this product is a handmade, hand-finished product. Each piece is unique. Any samples provided are typical of texture, finish, individual characteristics, and color but they should not be considered exact representations of the final product. There can be up to a 15% variation in color and texture from piece to piece. In addition, shape detail can vary as much as ¼" in size. The texture created by entrapped air ranges from smooth to randomly indented. Minor chipping, water staining, and non-structural hairline cracks are also traditional characteristics of this product. As with natural stone, color will vary on individual orders and among individual pieces in the same order. As with natural stone, excessive heat exposure may cause discoloration. As fire tables age, color may lighten or darken according to specific field or storage conditions such as humidity, temperature, and exposure to sunlight

BRASS BURNER

Manufacturer warrants the burner to be free from defective material and workmanship for 10 years from the date of purchase. The burner warranty covers manufacturing defects only and does not cover defects due to normal wear and tear; it does not warrant any product or part that has been altered, accidentally damaged, damaged in shipping, disassembled, modified, misused, neglected, failure to maintain, not installed, or not kept in continuous service after installation. Manufacturer's liability shall be restricted to the purchase price of the product only and makes no other warranty, express or implied, but not limited to, the implied warranties of salability and appropriateness for a specified purpose, with respect to its products and parts, whether used along or in combination with others. Manufacturer is free of liability for any damages caused by the unit, as well as inconvenience expenses, material or labor charges incurred by any service call, repair, removal or re-installation of any unit. Incidental or consequential damages are not covered by this warranty. All burners must be covered when not in use or warranty is null and void. Warranty does not cover damage to systems due to debris in the gas lines or damage to system due to water.


Owner is responsible for reading and understanding warranty for full terms and conditions. Manufacturer, at its discretion, agrees to repair or replace defective product if returned to manufacturer within the warranty period. The respective warranty time periods are effective from the original date of purchase. The warranty is non-transferable and applies only to the original purchaser. In addition, this warranty is automatically void if the unit's serial number has been removed or altered in any way.

No dealer, distributor, or other person has the authority to represent or warrant burner product beyond the terms contained within this warranty, and manufacturer assumes no liability for such warranty representations. Any questions concerning this warranty should be directed to the manufacturer's corporate office..


RETURN POLICY OF BURNER PRODUCT

Any burner product deemed by manufacturer as defective and covered by the warranty may be returned to manufacturer for assessment to determine if repair or replacement is necessary. In order to return a product, you must have a Return Merchandise Authorization number (RMA#). Please contact a manufacturer representative at the corporate office to obtain an RMA#. All returned merchandise must have the RMA# clearly printed on the outside of the package. Return shipping costs are the purchaser's responsibility. Manufacturer is not responsible for product damaged or lost in transit. It is recommended that return items are shipped via a delivery service that can be tracked and/or insured to confirm receipt.

DIMENSIONS

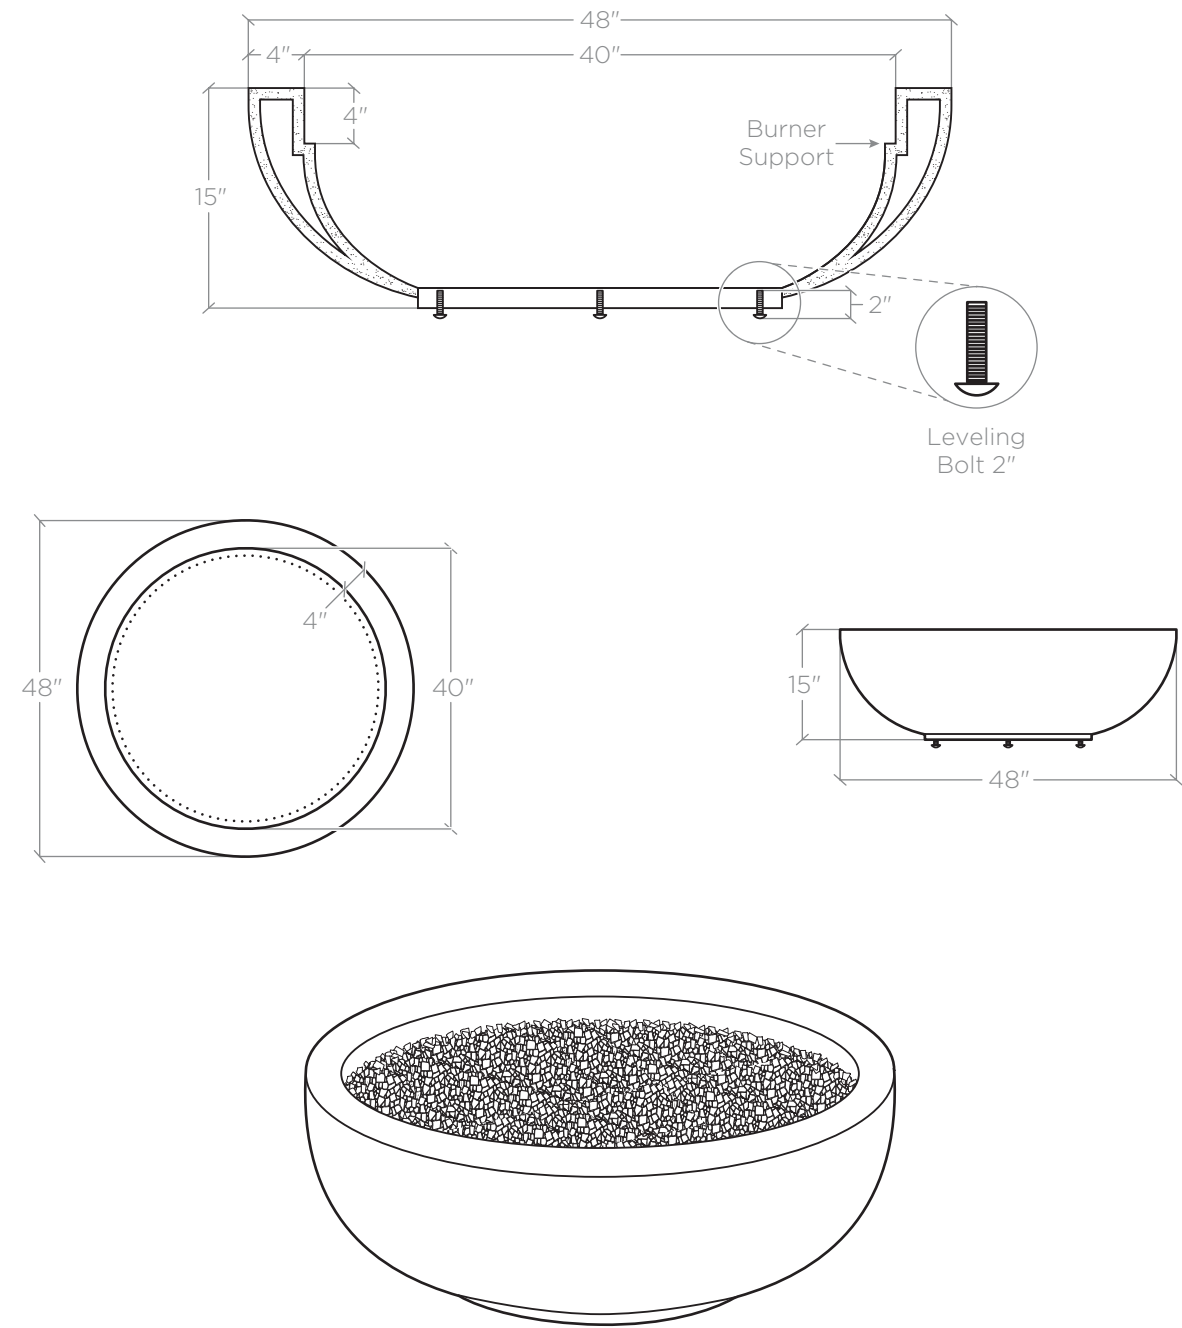


PARTS LIST

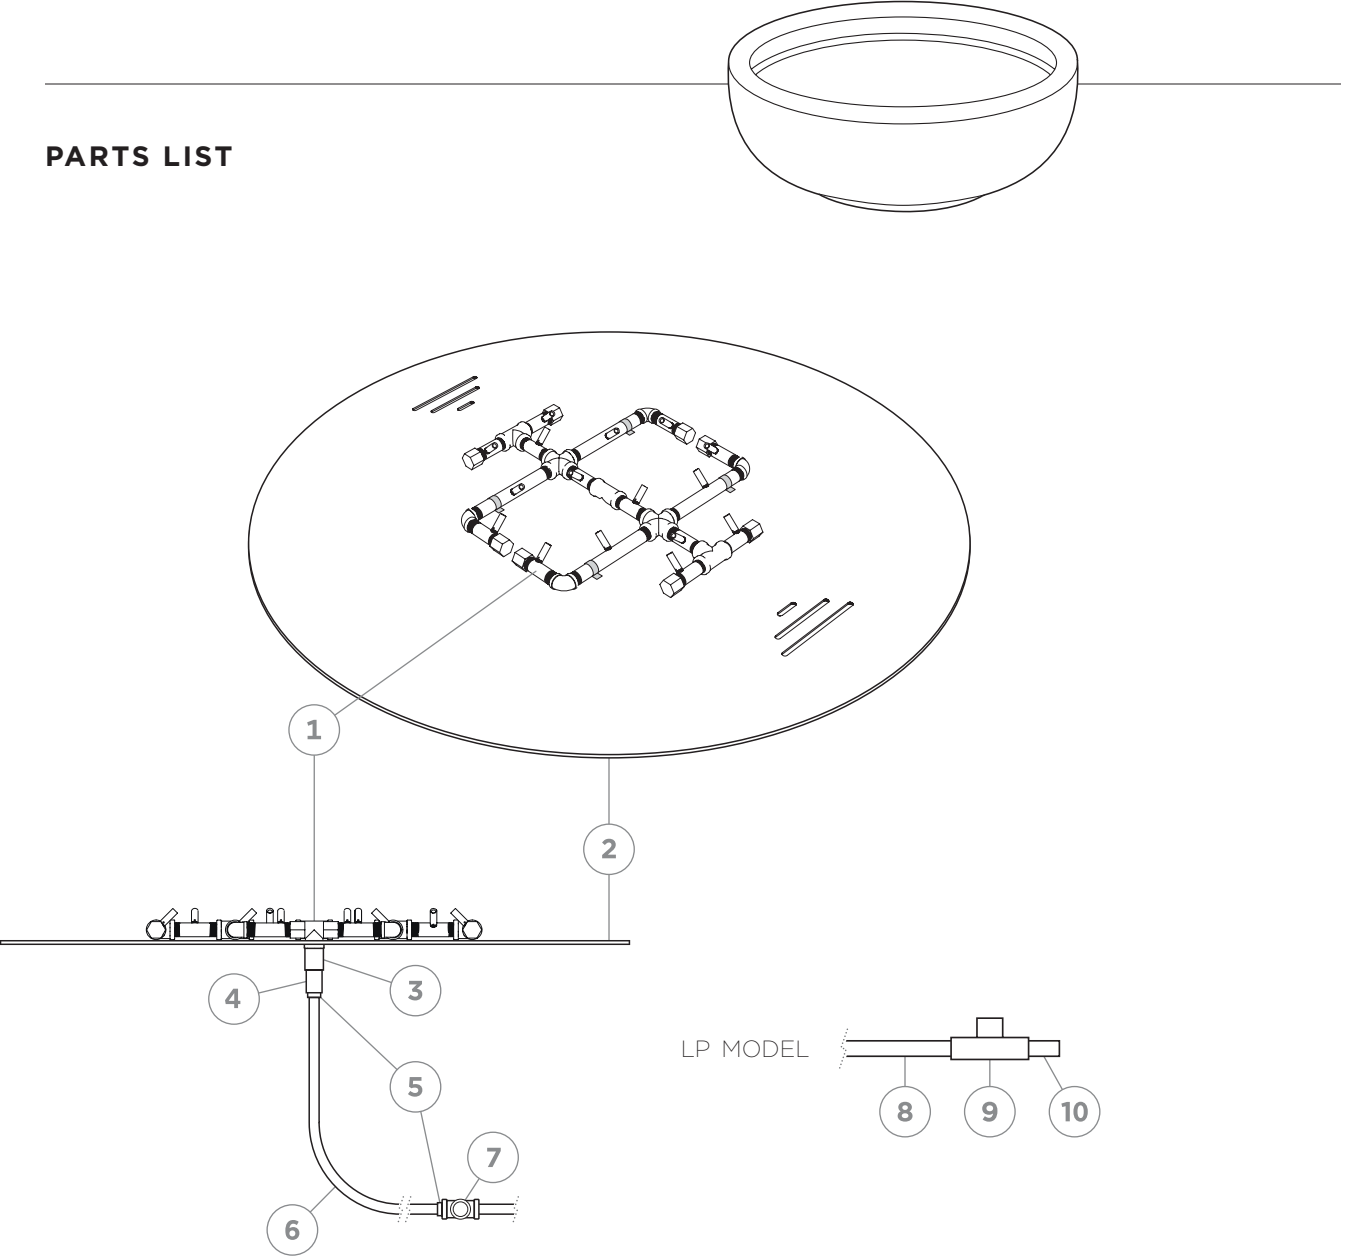


ITEM NO.	PART	QTY.	ITEM NO.	PART	QTY.
1	15" x 17" Burner	1	8	3/8" Propane Hose—10' Length	1
2	39 3/4" Diameter Burner Plate	1	9	65,000BTU LP Regulator	1
3	1/2" Coupling	1	10	1/2" Quick-Connect Fitting	1
4	2" Orifice Fitting	1	—	48" Round Fire Table	1
5	1/2" Male Flared Fitting	2	—	Gas Valve Key	1
6	1/2" Flex Hose—3' Length	1	—	Lava Rock	1
7	Key Valve	1	—	Vinyl Cover	1

DIMENSIONS

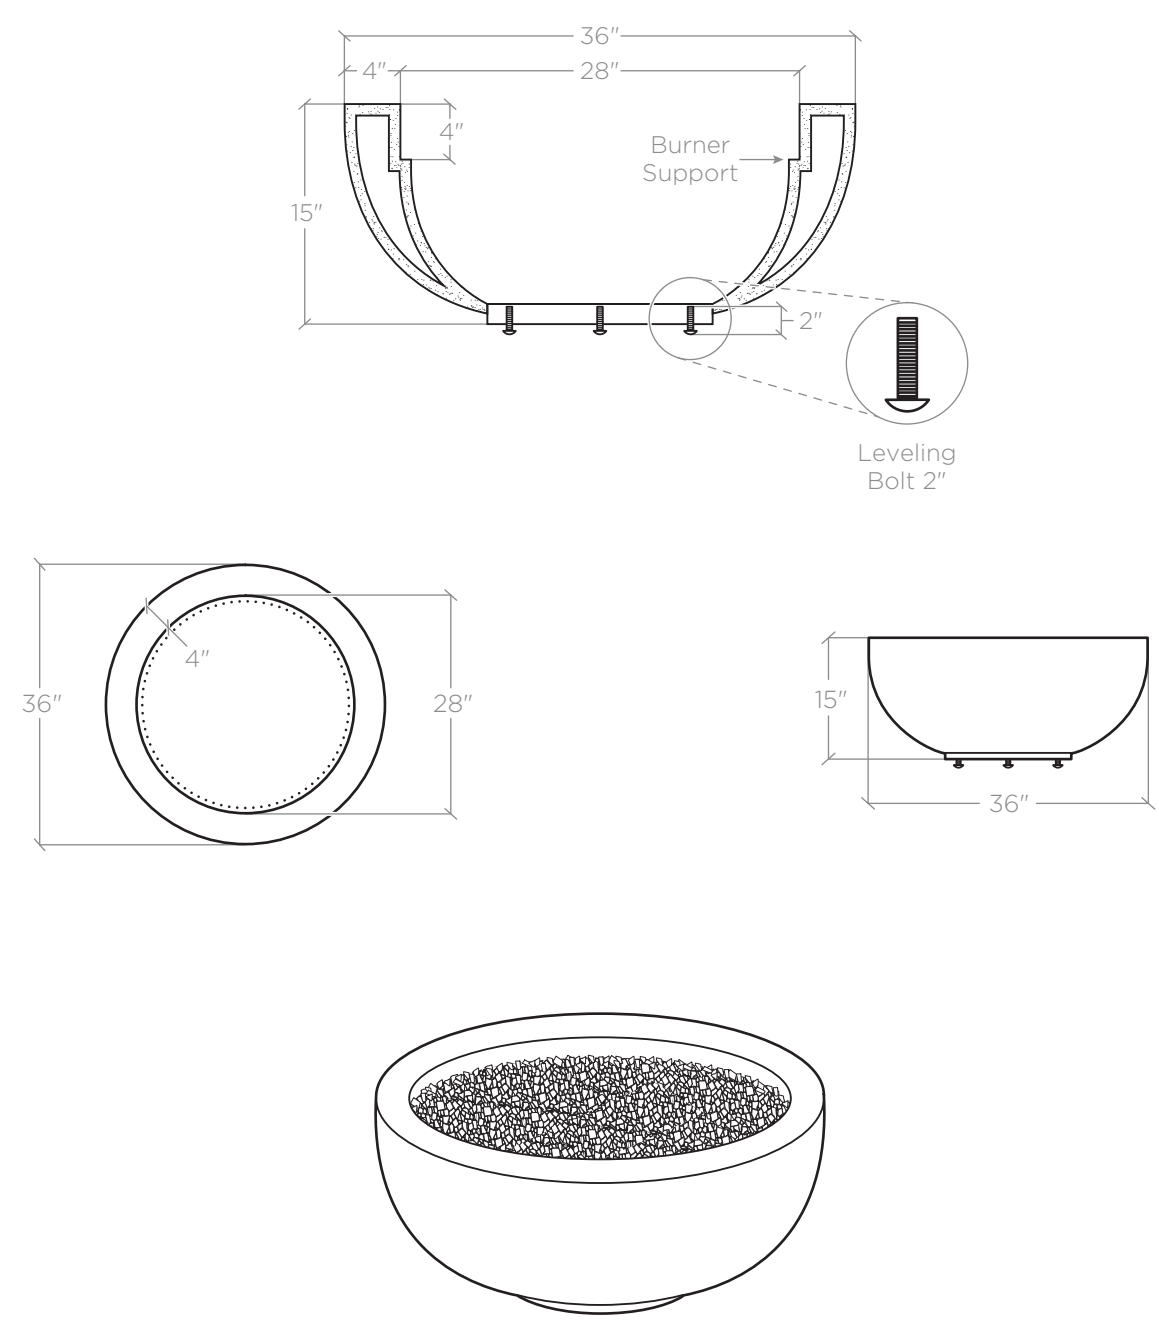


PARTS LIST

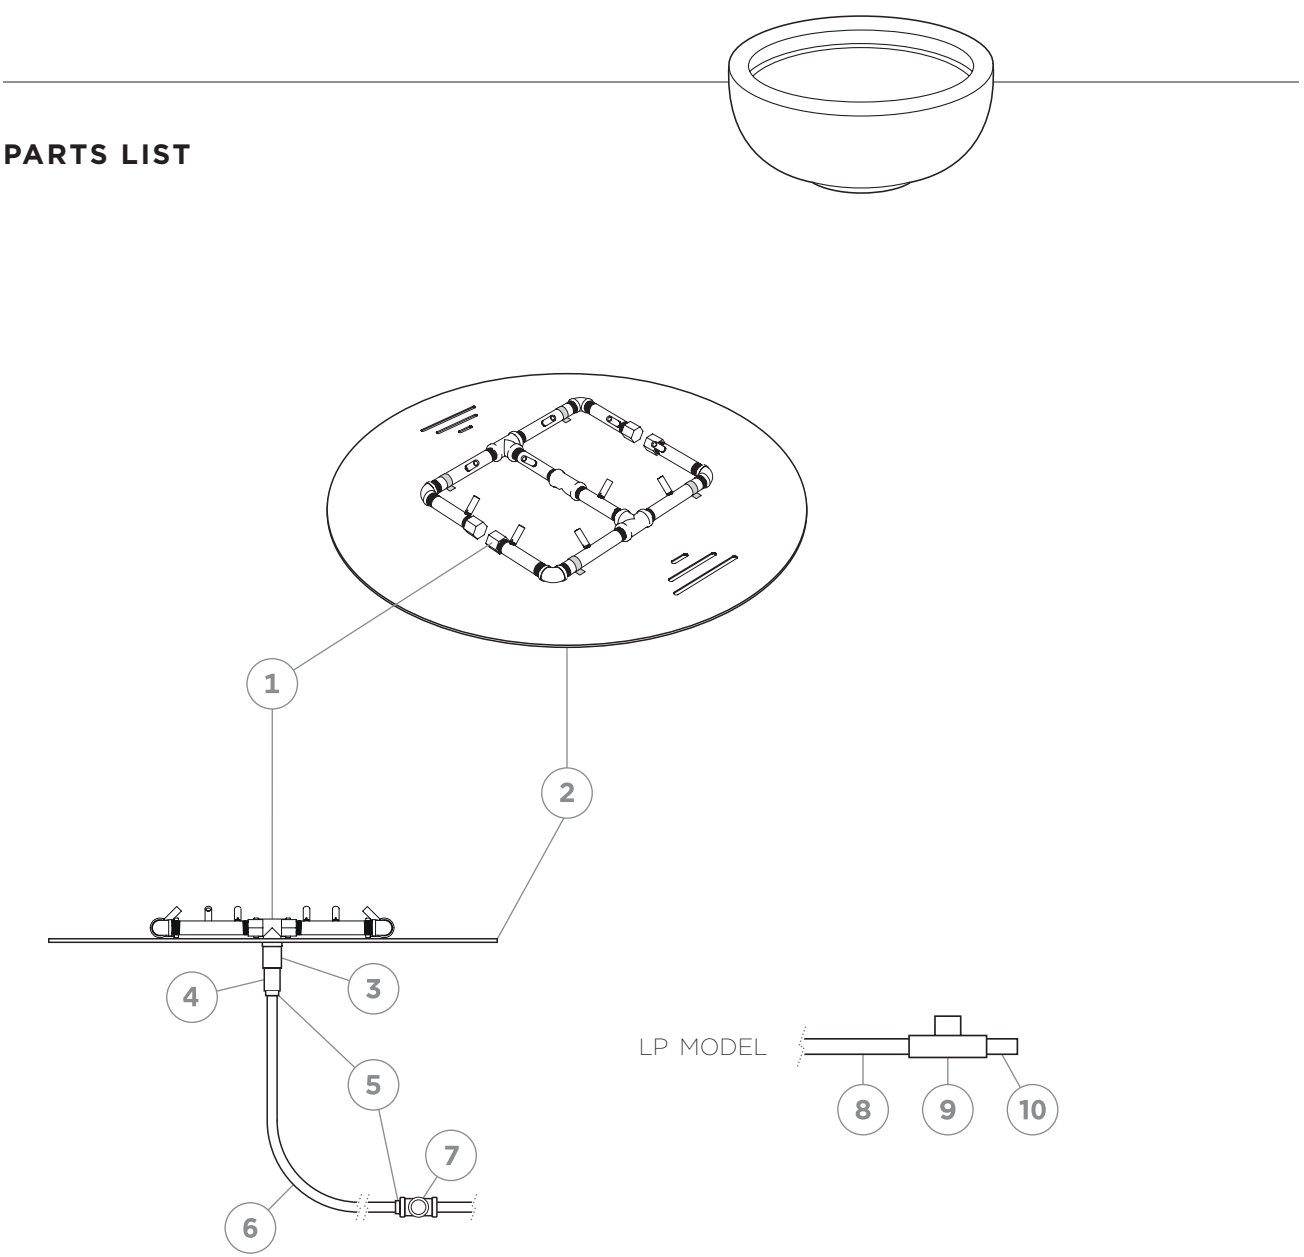


ITEM NO.	PART	QTY.	ITEM NO.	PART	QTY.
1	13" x 13" Burner	1	8	3/8" Propane Hose—10' Length	1
2	27 3/4" Diameter Burner Plate	1	9	65,000BTU LP Regulator	1
3	1/2" Coupling	1	10	1/2" Quick-Connect Fitting	1
4	2" Orifice Fitting	1	—	36" Round Fire Table	1
5	1/2" Male Flared Fitting	2	—	Gas Valve Key	1
6	1/2" Flex Hose—3' Length	1	—	Lava Rock	1
7	Key Valve	1	—	Vinyl Cover	1

DIMENSIONS

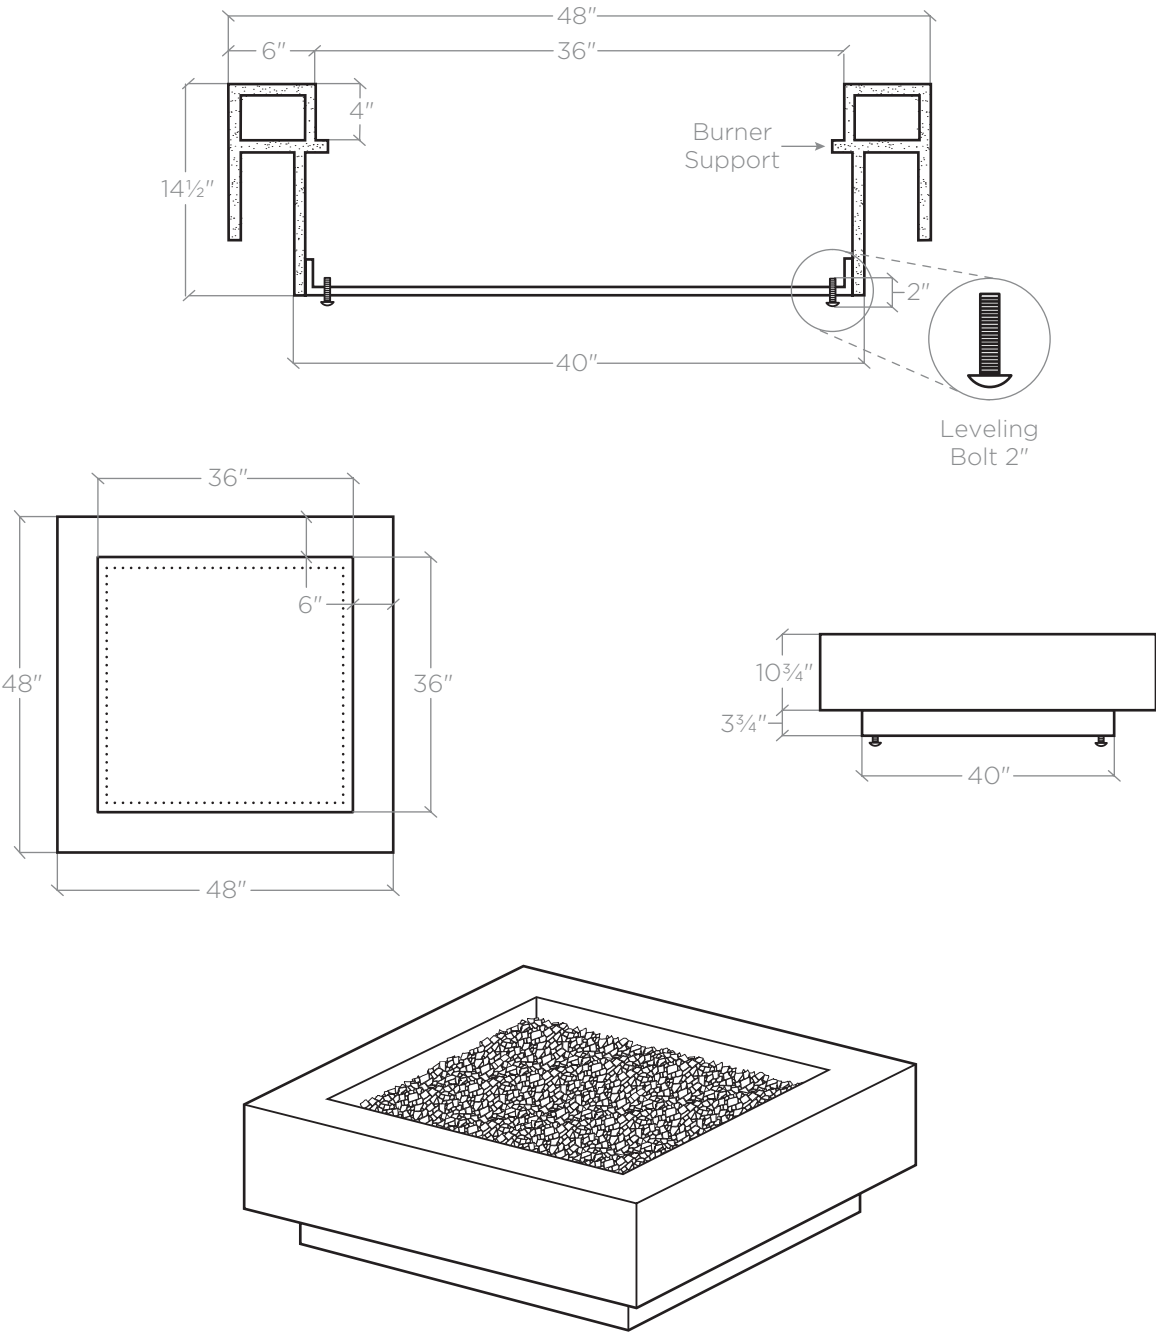


PARTS LIST

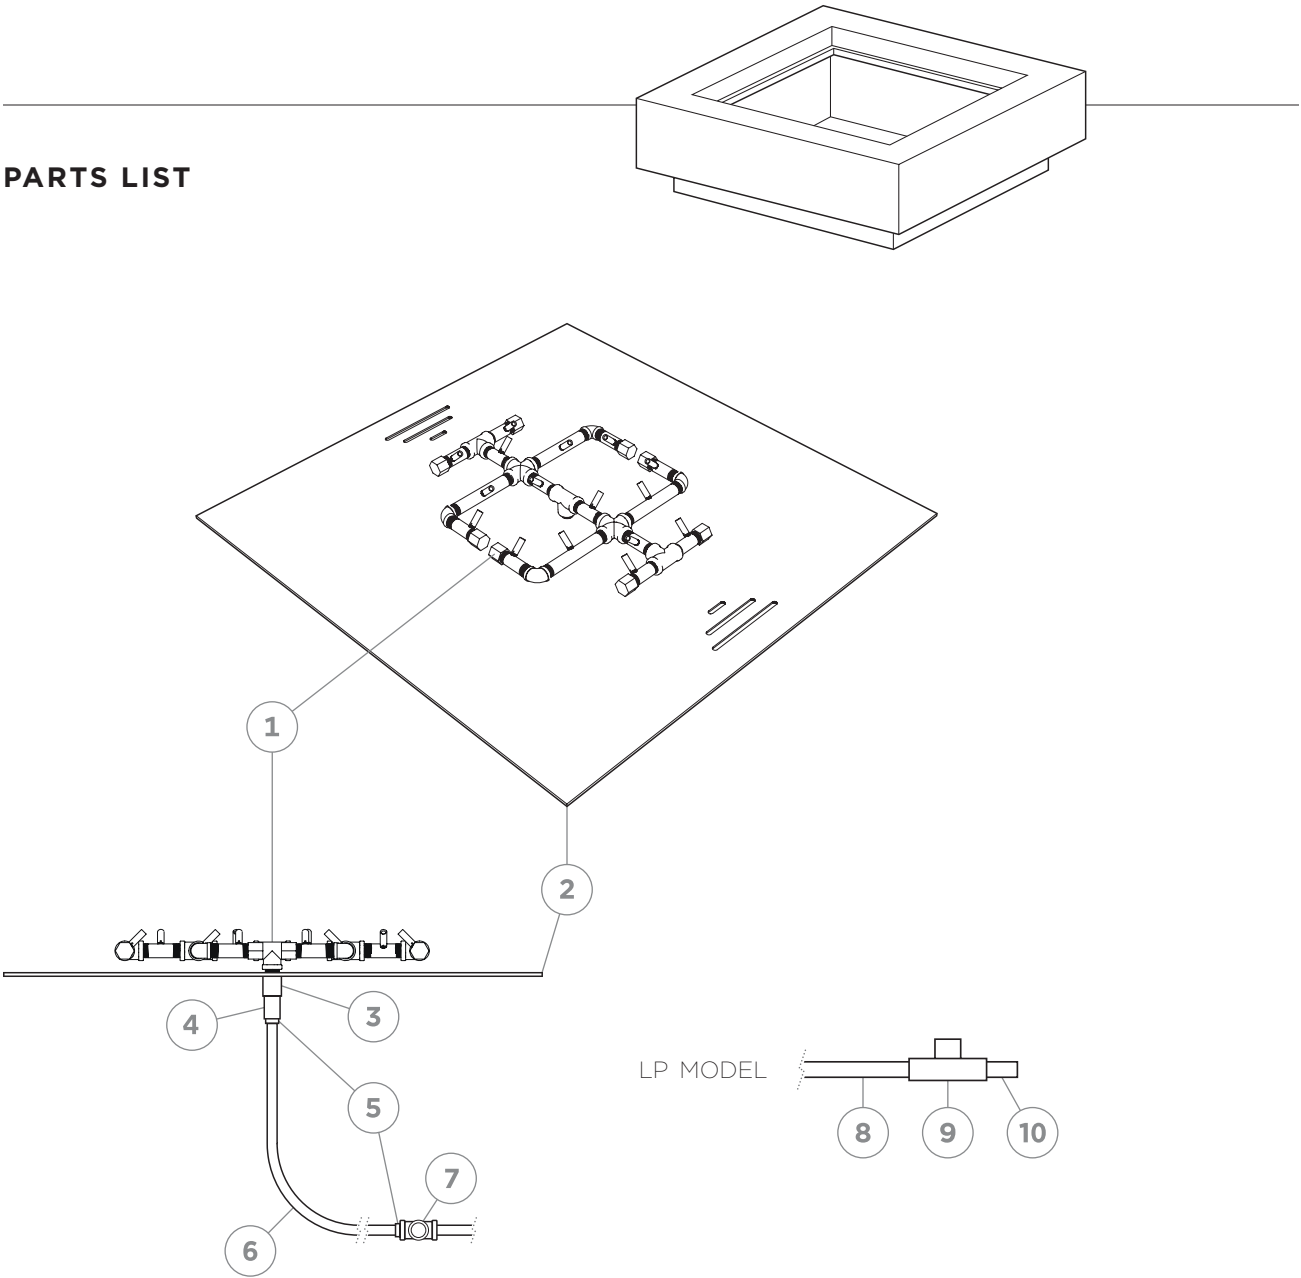


ITEM NO.	PART	QTY.
1	15 1/4" x 19" Burner	1
2	35 3/4" x 35 3/4" Burner Plate	1
3	1/2" Coupling	1
4	2" Orifice Fitting	1
5	1/2" Male Flared Fitting	2
6	1/2" Flex Hose—3' Length	1
7	Key Valve	1

ITEM NO.	PART	QTY.
8	3/8" Propane Hose—10' Length	1
9	65,000BTU LP Regulator	1
10	1/2" Quick-Connect Fitting	1
—	48" Square Fire Table	1
—	Gas Valve Key	1
—	Lava Rock	1
—	Vinyl Cover	1

DIMENSIONS

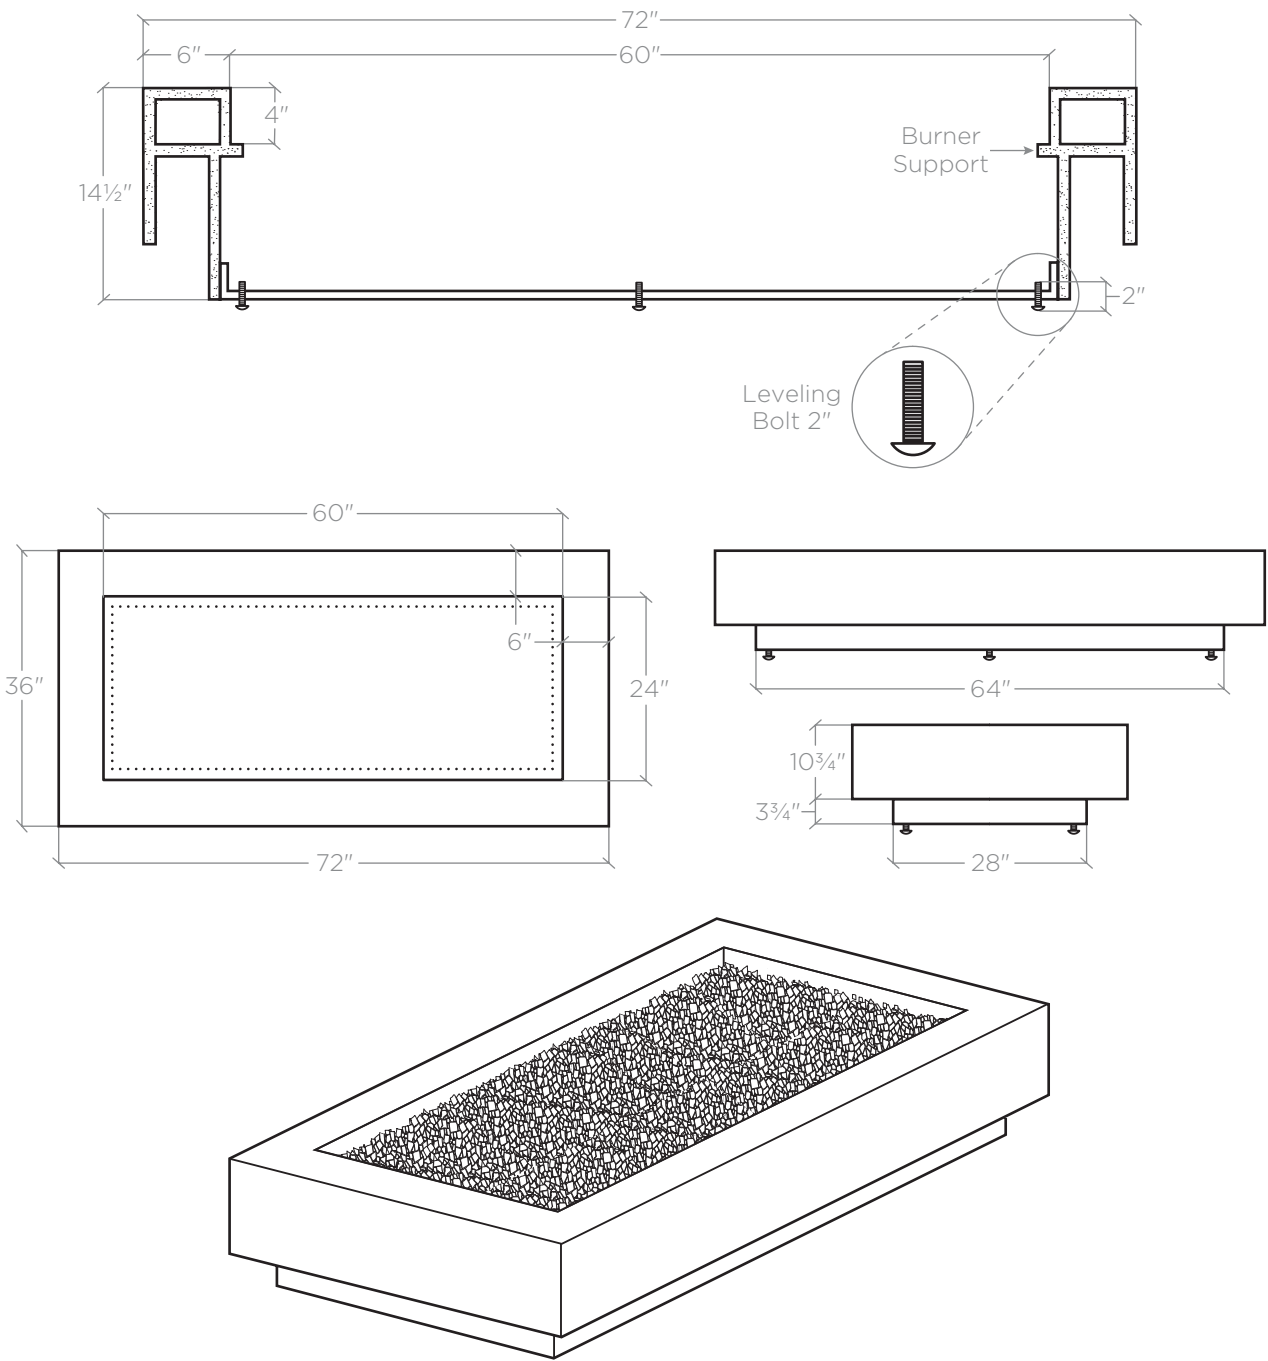


PARTS LIST

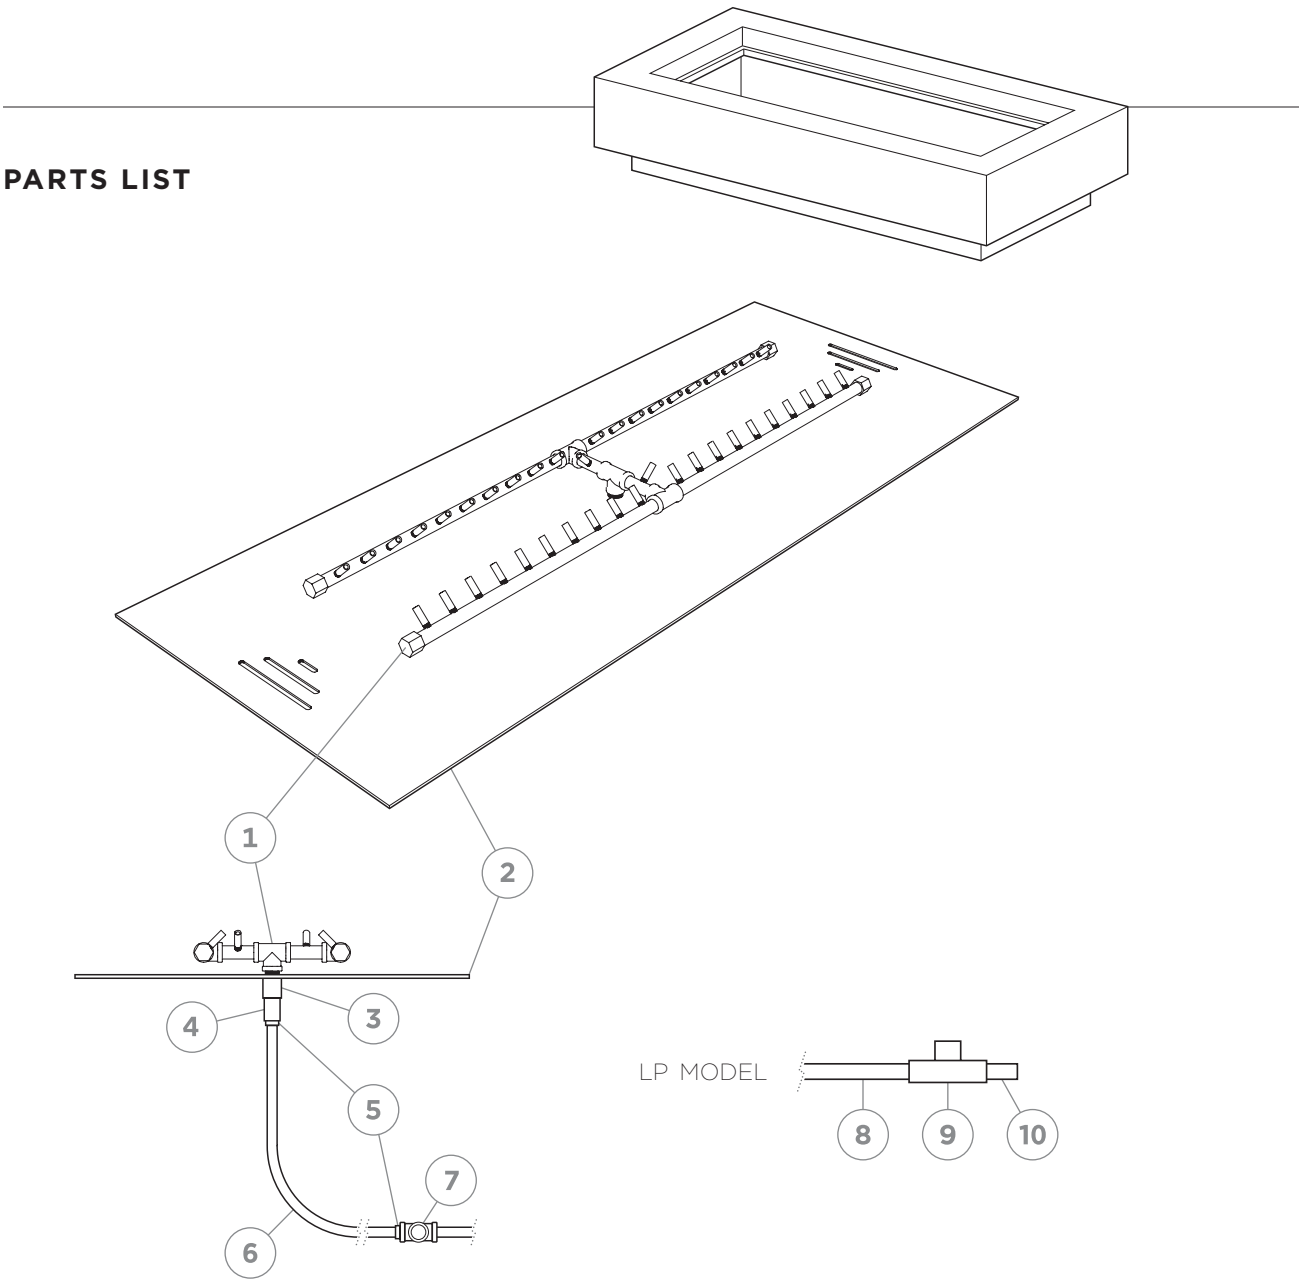


ITEM NO.	PART	QTY.
1	9 3/4" x 44" Burner	1
2	23 3/4" x 59 3/4" Burner Plate	1
3	1/2" Coupling	1
4	2" Orifice Fitting	1
5	1/2" Male Flared Fitting	2
6	1/2" Flex Hose—3' Length	1
7	Key Valve	1

ITEM NO.	PART	QTY.
8	3/8" Propane Hose—10' Length	1
9	65,000BTU LP Regulator	1
10	1/2" Quick-Connect Fitting	1
—	72" x 36" Fire Table	1
—	Gas Valve Key	1
—	Lava Rock	1
—	Vinyl Cover	1

DIMENSIONS

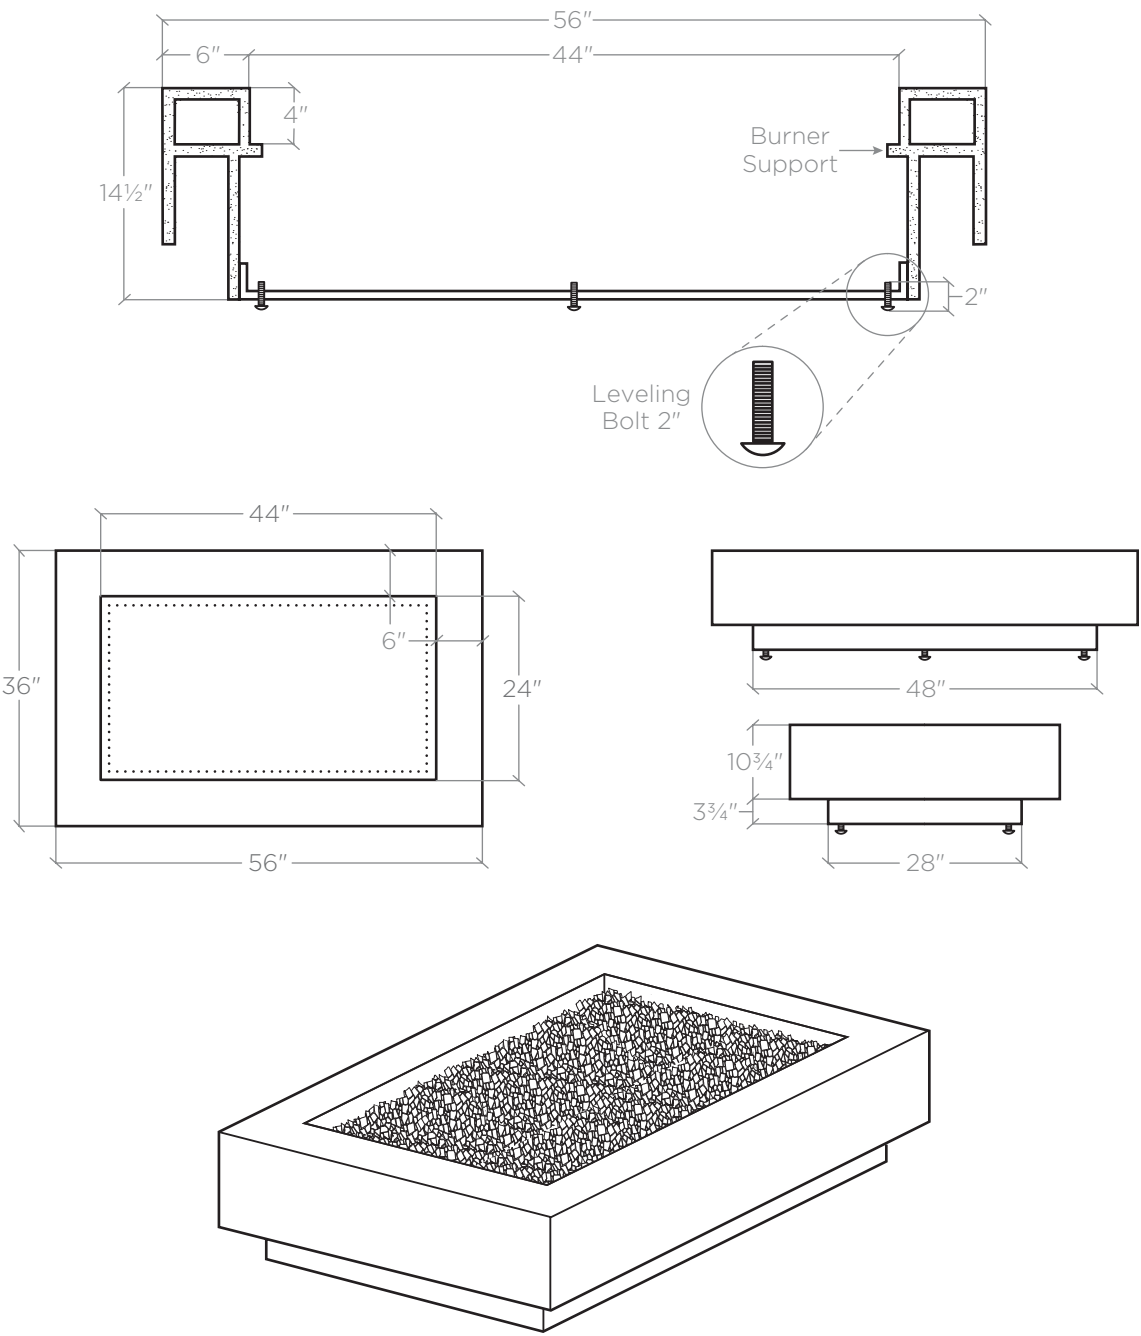


PARTS LIST

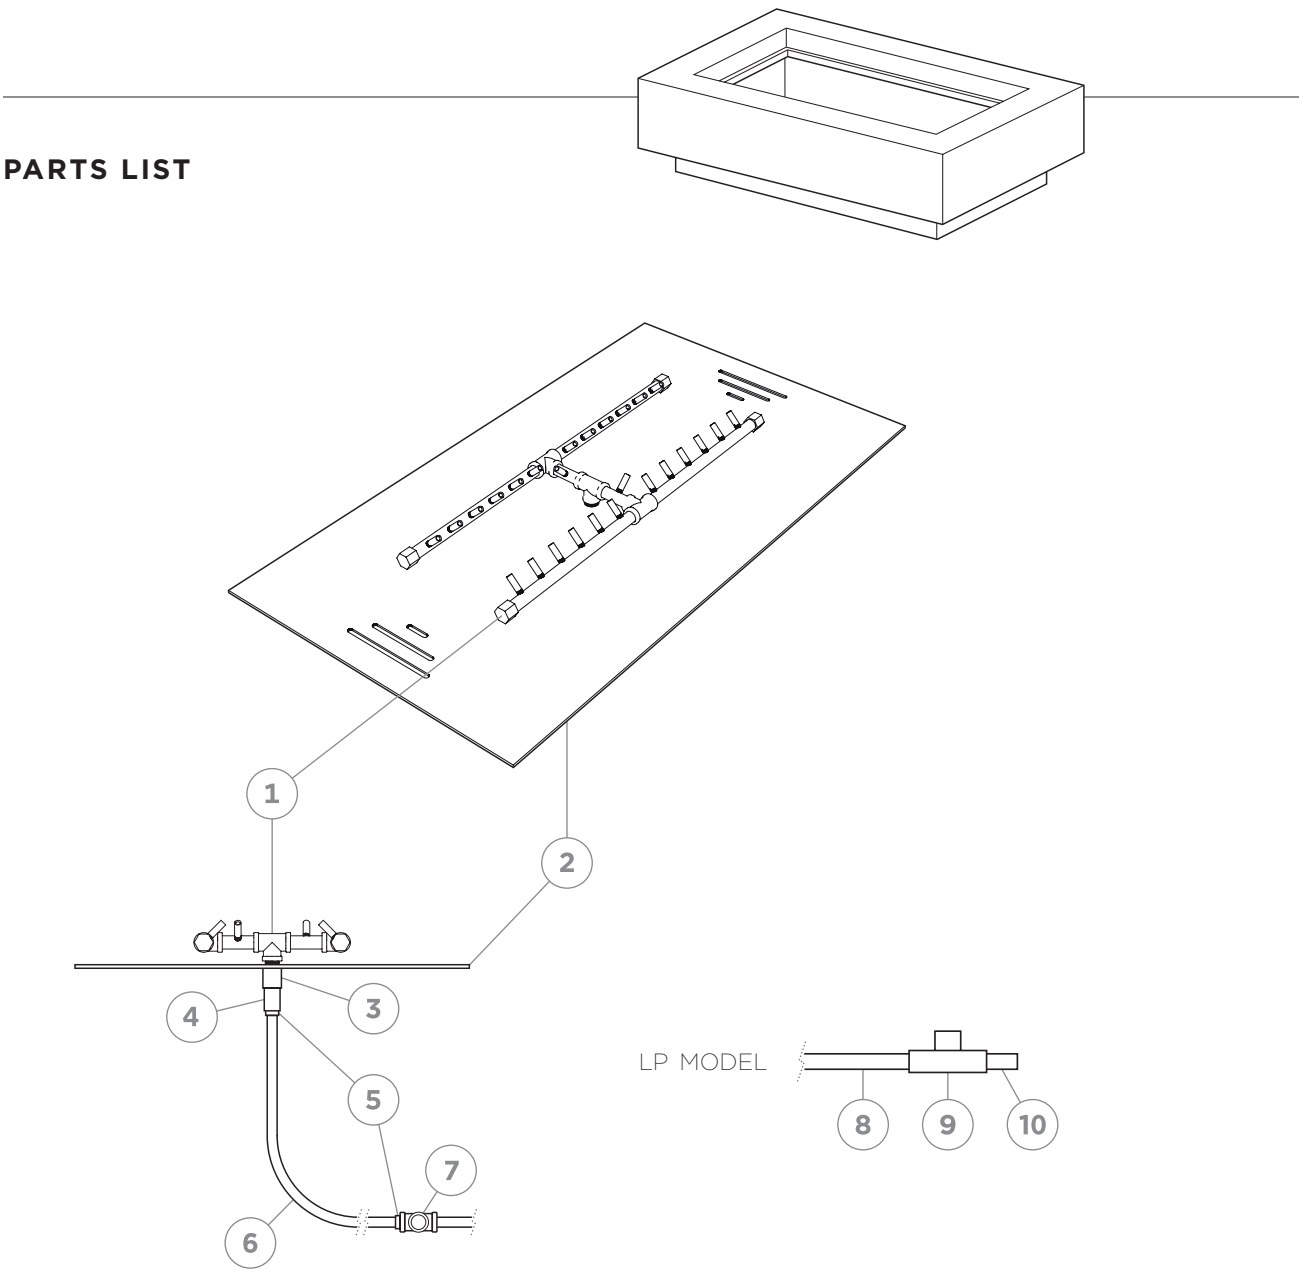


ITEM NO.	PART	QTY.	ITEM NO.	PART	QTY.
1	9 3/4" x 28" Burner	1	8	3/8" Propane Hose—10' Length	1
2	23 3/4" x 43 3/4" Burner Plate	1	9	65,000BTU LP Regulator	1
3	1/2" Coupling	1	10	1/2" Quick-Connect Fitting	1
4	2" Orifice Fitting	1	—	56" x 36" Fire Table	1
5	1/2" Male Flared Fitting	2	—	Gas Valve Key	1
6	1/2" Flex Hose—3' Length	1	—	Lava Rock	1
7	Key Valve	1	—	Vinyl Cover	1


DIMENSIONS

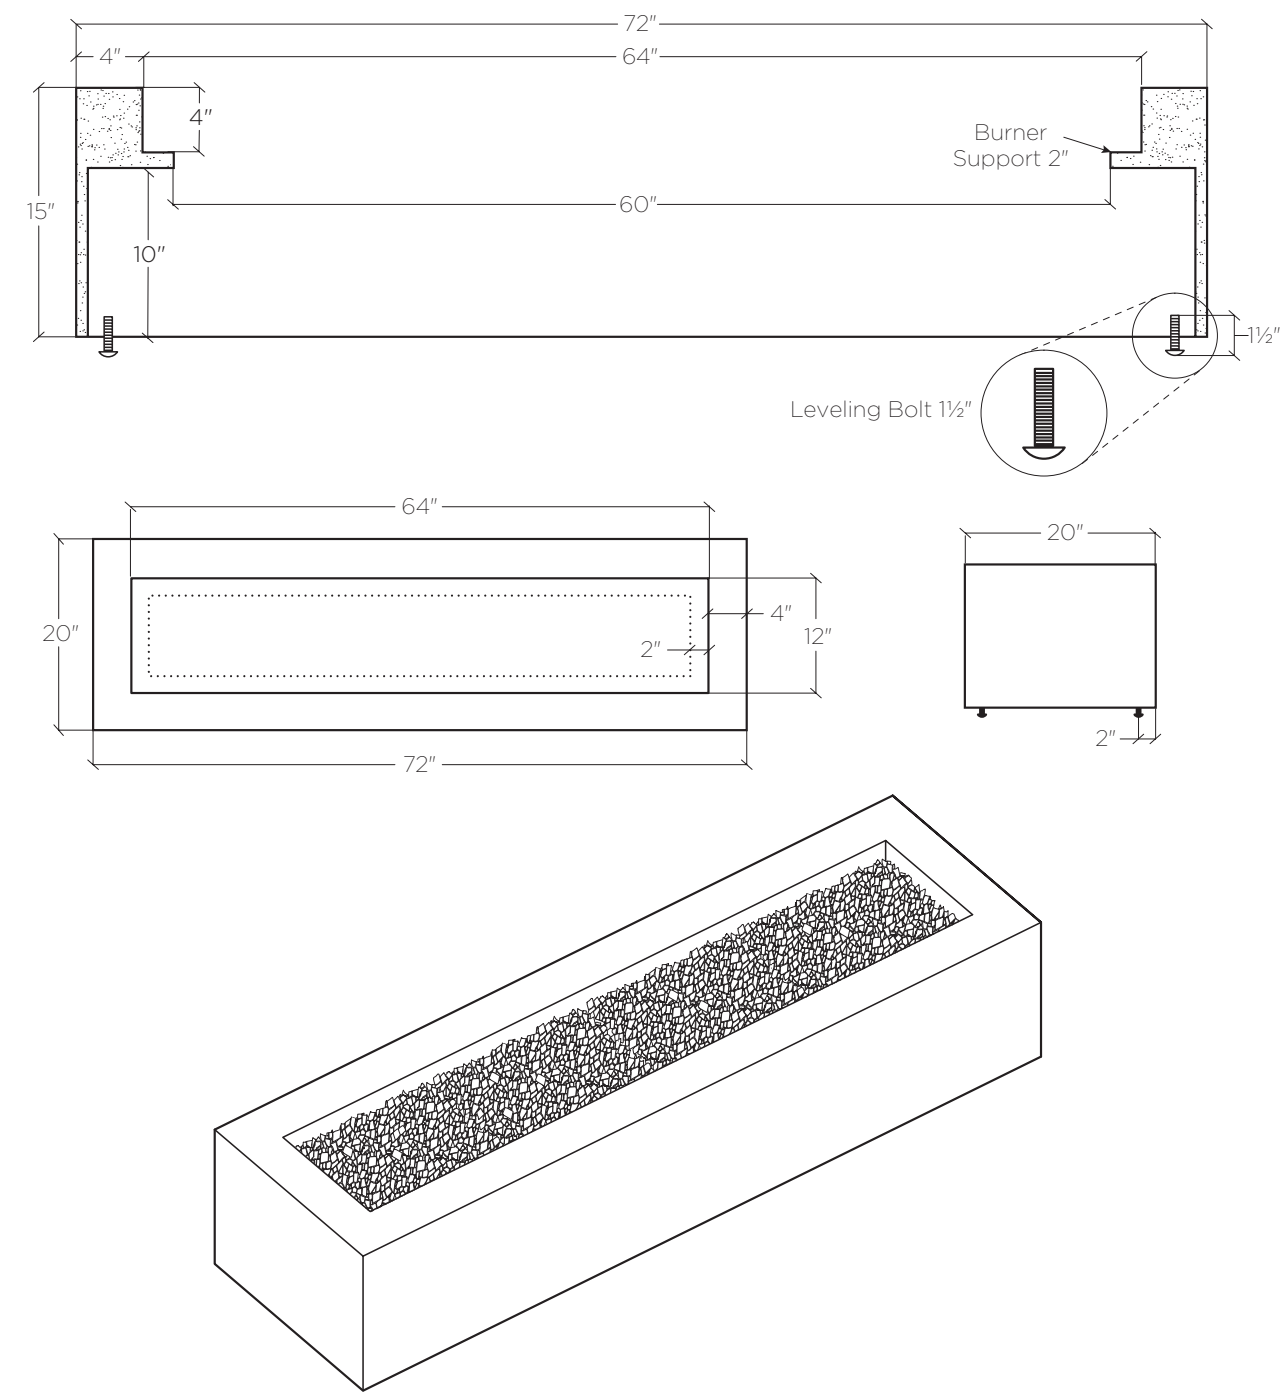

PARTS LIST

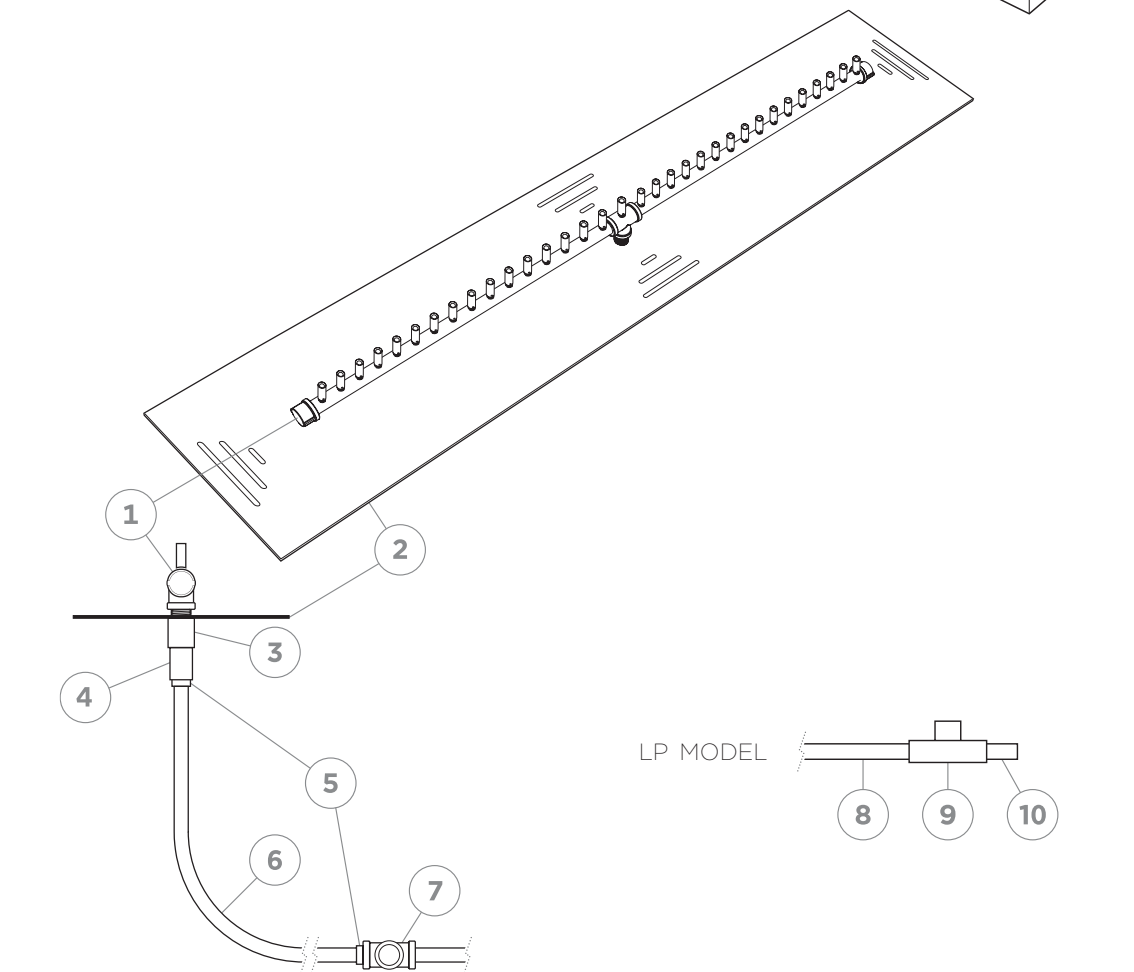


ITEM NO.	PART	QTY.
1	51 3/4" x 1" Burner	1
2	63 1/2" x 11 1/2" Burner Plate	1
3	1/2" Coupling	1
4	2" Orifice Fitting	1
5	1/2" Male Flared Fitting	2
6	1/2" Flex Hose—3' Length	1
7	Key Valve	1

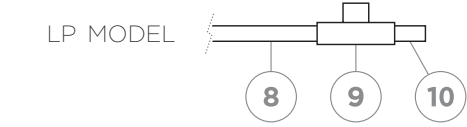


ITEM NO.	PART	QTY.
8	3/8" Propane Hose—10' Length	1
9	65,000BTU LP Regulator	1
10	1/2" Quick-Connect Fitting	1
—	72" x 20" x 15" Fire Table	1
—	Gas Valve Key	1
—	Lava Rock	1
—	Vinyl Cover	1


DIMENSIONS

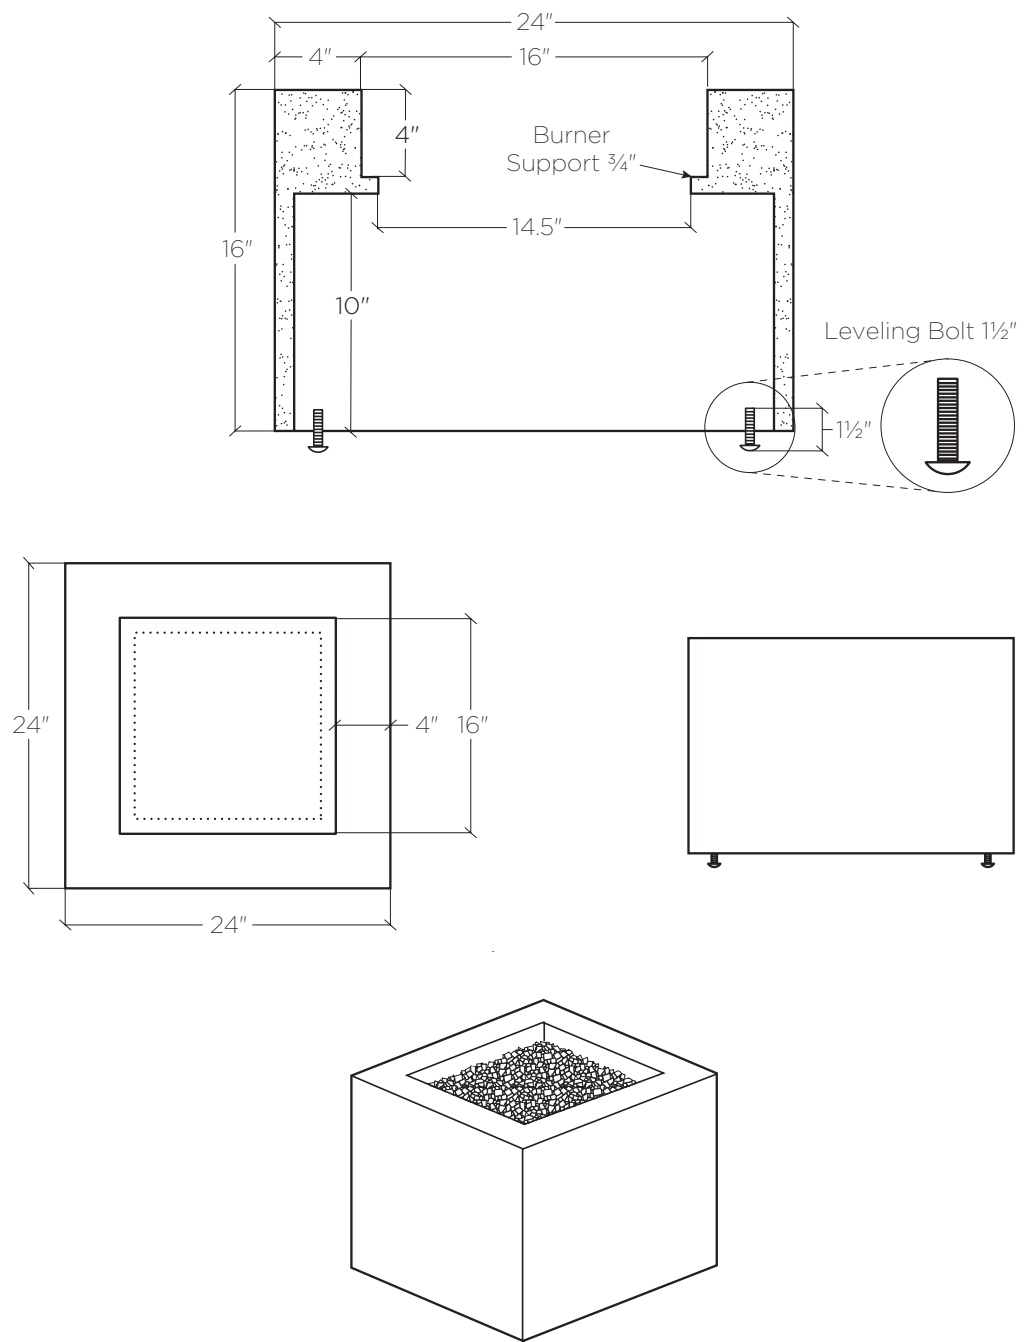

PARTS LIST

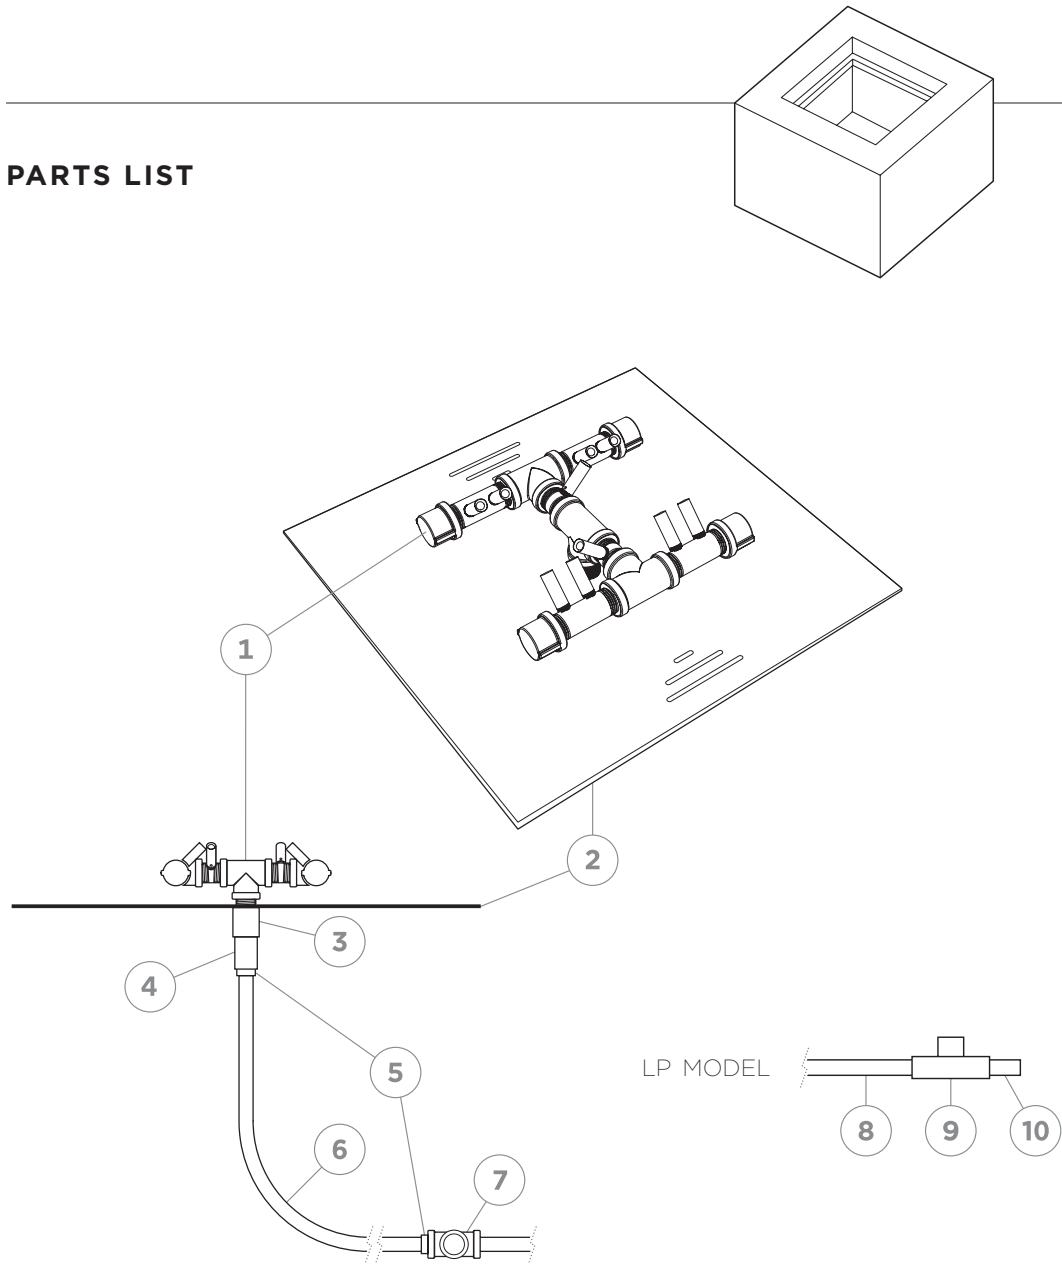

ITEM NO.	PART	QTY.
1	8" x 7" Rectangular Burner	1
2	14 3/4" Square Burner Plate	1
3	1/2" Coupling	1
4	2" Orifice Fitting	1
5	1/2" Male Flared Fitting	2
6	1/2" Flex Hose—3' Length	1
7	Key Valve	1

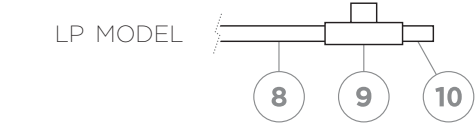

ITEM NO.	PART	QTY.
8	3/8" Propane Hose—10' Length	1
9	65,000BTU LP Regulator	1
10	1/2" Quick-Connect Fitting	1
—	24" x 16" Fire Table	1
—	Gas Valve Key	1
—	Lava Rock	1
—	Vinyl Cover	1

THESE PAGES INTENTIONALLY LEFT BLANK

