

MACHINIST SWING-ARM SCONCE


ASSEMBLY & INSTALLATION INSTRUCTIONS UNITED STATES ENGLISH



MACHINIST TASK SCONCE

PARTS INCLUDED

- (A) Plastic Anchors (6)
- (B) Portable Mounting Plate (1)
- (C) Wood Screws (6)
- (D) Fixture Base (1)
- (E) Set Screws (E)
- (F) Screwdriver (1)
- (G) Adjustment Key (1)
- (H) Fixture Arm (1)
- (I) Bulb (1)
- (J) Direct Wire Plug (1)
- (K) Wire Nuts (3)
- (L) Hardware Mounting Plate (1)
- (M) Mounting Screws (2)

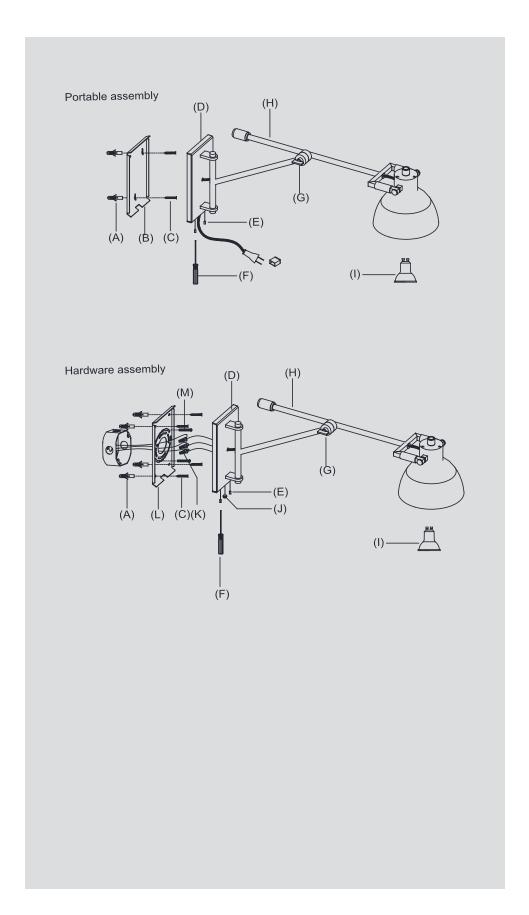



IMPORTANT: PLEASE READ

IMPORTANT SAFETY FEATURES

BULBS

This fixture has been rated for up to one (1) 6-watt maximum Type PAR 16 Lightbulb. To avoid the risk of fire, do not exceed the recommended wattage.

DIMMER SWITCH COMPATIBILITY

This fixture is dimmer-switch compatible and may only be used with a forward-phase dimmer switch.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.

WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

ASSEMBLY AND INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

PORTABLE ASSEMBLY:

- Carefully remove all parts from the box and remove all plastic coverings.
- Remove Portable Mounting Plate (B) from Fixture Base (D) by removing Set Screws (E) using Screwdriver (F).
- Using Portable Mounting Plate (B) as a guide, mark anchor positions on the wall.
- Using a drill bit slightly smaller than one of Plastic Anchors
 (A), drill holes in the marked positions. Install Plastic
 Anchors (A) into the holes using a hammer (not included).
- Install Portable Mounting Plate (B) onto Plastic Anchors

 (A) using Wood Screws (C). Secure Fixture Base (D) to
 Portable Mounting Plate (B) using Set Screws (E). Tighten using Screwdriver (F).
- 6. Insert Bulb (I) into the threaded socket.
- Loosen Adjustment Key (G) and swing Fixture Arm (H) to adjust the shade to desired position, then tighten Adjustment Key (G) to secure.
- 8. Restore power and plug into proper electrical outlet to test the fixture.
- 9. Assembly is complete.

REVISION 04-13-23 RH.COM



HARDWARE ASSEMBLY:

- 1. Follow Steps 1-2 from the Portable Assembly section.
- 2. Using Hardware Mounting Plate (L) as a guide, mark anchor positions on the wall.
- Using a drill bit slightly smaller than one of Plastic Anchors
 (A), drill holes in the marked positions. Install Plastic
 Anchors (A) into the holes using a hammer (not included).
- Install Hardware Mounting Plate (L) to the junction box and secure with Mounting Screws (M), then insert Wood Screws (C) to Plastic Anchors (A) to secure Hardware Mounting Plate (L) to the wall.
- Remove the portable cord and cord covers by removing Wire Nuts (K).
- 6. Insert Direct Wire Plug (J) into the bottom of the Fixture Base (D).
- Wrap fixture GROUND WIRE (bare copper) around the green grounding screw and tighten. Continue feeding fixture GROUND WIRE and connect to supply ground wire (usually green or bare copper) using a Wire Nut (K). NOTE: IT IS IMPERATIVE THAT THE FIXTURE IS GROUNDED.
- 8. Connect fixture NEUTRAL WIRE (white) to the supply neutral wire (usually white) using a Wire Nut (K).
- Connect fixture HOT WIRE (black) to the supply hot wire (usually black) using a Wire Nut (K). CAUTION: DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS.
- Ensure all wire connections are tight, then carefully tuck all wires neatly into the junction box.
- Install Fixture Base (D) to Hardware Mounting Plate (L) and secure with Set Screws (E). Tighten using Screwdriver (F).
- 12. Insert Bulb (I) into the threaded socket.
- Loosen Adjustment Key (G) and swing Fixture Arm (H) to adjust the shade to desired position, then tighten Adjustment Key (G) to secure.
- 14. Restore power to junction box and test fixture.
- 15. Assembly is complete.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.

REVISION 04-13-23 RH.COM