

MÉLANGE LINEAR SCONCE 28"

ASSEMBLY & INSTALLATION INSTRUCTIONS UNITED STATES ENGLISH



MÉLANGE 28" LINEAR SCONCE

PARTS INCLUDED

- (A) Anchors (3)
- (B) Mounting Plate (1)
- (C) Wood Screws (3)
- (D) Mounting Screws (2)
- (E) Wire Nuts (3)
- (F) Bracket (1)
- (G) Side Screws (4)
- (H) Washers (4)
- (I) Nuts (4)
- (J) Fixture Body (1)
- (K) Alabaster Panel (1)

TOOLS NEEDED (IF APPLICABLE)

Phillips Screwdriver


Drill

Hammer

Wrench

Pencil

Slotted Screwdriver

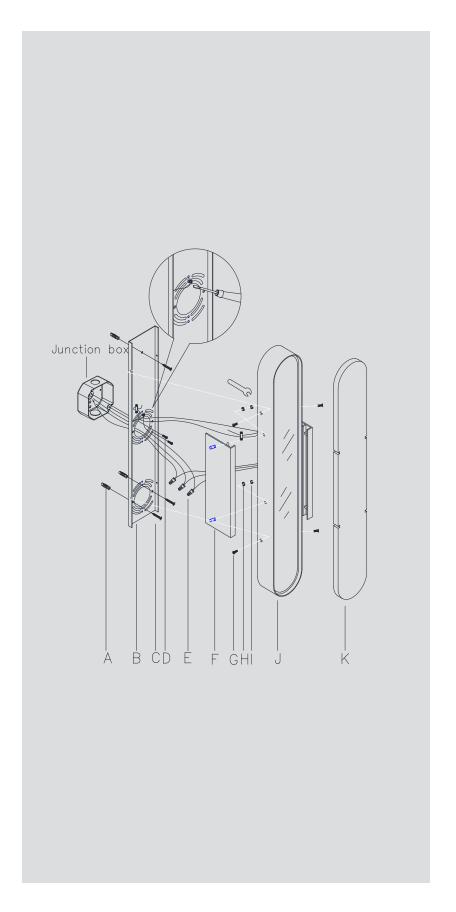



IMPORTANT: PLEASE READ

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR MOUNTING TO A WOODEN STRUCTURAL BEAM. UNIQUE OR ALTERNATIVE INSTALLATION TYPES MAY REQUIRE DIFFERENT MOUNTING HARDWARE, WHICH HAS NOT BEEN INCLUDED. ALWAYS CONSULT WITH A LICENSED ELECTRICIAN BEFORE INSTALLATION.

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

IMPORTANT SAFETY FEATURES

BULBS

This fixture has been rated for up to 22-watt maximum LED. To avoid the risk of fire, do not exceed the recommended wattage.

DIMMER SWITCH COMPATIBILITY

This fixture is dimmer-switch compatible, and may only be used with a TRIAC dimmer switch.

WALL REINFORCEMENT

www.P65Warnings.ca.gov.

Fixtures weighing 25 lb. or more will require additional wall reinforcement behind the wall where they are to be installed.

WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to

WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

ASSEMBLY AND INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

- Carefully remove all parts from the box and remove all plastic coverings.
- 2. Remove Mounting Plate (B) from Fixture Body (J) by loosening Side Screws (G).
- 3. Remove Bracket (F) from Fixture Body (J) by loosening Nuts (I) and Washers (H).
- 4. Install Alabaster Panel (K) to Bracket (F), then install Bracket (F) to Fixture Body (J) and secure with Washers (H) and Nuts (I).
- 5. Using Mounting Plate (B) as a guide, line up with the junction box and make anchor positions.
- 6. Using a drill bit slightly smaller than anchor, drill holes in the marked positions. Install Anchors (A) into the holes using hammer.
- Install Mounting Plate (B) to the junction box and secure with Mounting Screws (D), then secure Wood Screws (C) to Anchors (A).
- Connect the ground wire (bare copper) from the fixture to the ground wire from the outlet box (usually green or copper in color).

 IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.
- Connect the hot wire (black) from the fixture to the hot wire from the wall outlet box (usually black). Fasten them together with a Wire Nut (E) and wrap the connection with electrical tape.
- Connect the neutral wire (white) from the fixture to the neutral wire from the outlet box (usually white). DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
- Make sure all wire connections are tight, then carefully tuck into the outlet box.
- Attach Fixture Body (J) to Mounting Plate (B) and secure with Side Screw (G).
- 13. Installation is complete; turn on power at fuse or circuit breaker.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.

REVISION 07-27-23 RH.COM



FCC COMPLIANCE:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC COMPLIANCE:

This Class B digital apparatus complies with CAN ICES-005 (B) /NMB-005(B).

RESTORATION HARDWARE 15 KOCH ROAD CORTE MADERA, CA 94925 1-800-762-1005

REVISION 07-27-23 RH.COM