

NATURAL ANTLER CHANDELIER 48"

 $\begin{array}{c} \textbf{ASSEMBLY \& INSTALLATION INSTRUCTIONS} \\ \textbf{ENGLISH} \end{array}$

PARTS INCLUDED

- (A) GROUND SCREW (1)
- (B) MOUNTING BRACKET (1)
- (C) LOCK NUT (1)
- (D) THREADED JOINT (2)
- (E) CANOPY (1)
- (F) LOOP COLLAR (1)
- (G) CANOPY LOOP (1)
- (H) FIXTURE LOOP (1)
- (I) CHAIN (1)
- (J) FIXTURE (1) (NOT PICTURED)
- (K) BULBS (8) (NOT PICTURED)
- (L) MOUNTING SCREWS (2) (NOT PICTURED)

TOOLS NEEDED


PLIERS


PHILLIPS-HEAD SCREWDRIVER

WIRE CUTTERS

WIRE STRIPPERS

WIRE NUTS

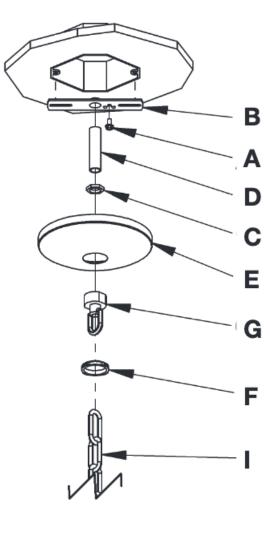

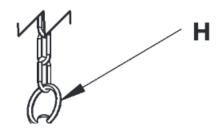



IMPORTANT PLEASE READ

PLEASE FOLLOW THE ASSEMBLY
INSTRUCTIONS CLOSELY. IMPROPER
ASSEMBLY OR INSTALLATION CAN RESULT
IN PERSONAL OR PROPERTY DAMAGE.
MOUNTING HARDWARE HAS BEEN
PROVIDED FOR MOUNTING TO A WOODEN
STRUCTURAL BEAM. UNIQUE OR
ALTERNATIVE INSTALLATIONS TYPES MAY
REQUIRE DIFFERENT MOUNTING
HARDWARE, WHICH HAS NOT BEEN
INCLUDED. ALWAYS CONSULT WITH A
LICENSED ELECTRICIAN BEFORE
INSTALLATION.

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

IMPORTANT SAFETY FEATURES

BULBS

This fixture has been rated for twelve (12) 40-watt maximum E-12 Candelabra Bulbs. To avoid the risk of fire, do not exceed the recommended wattage.

VAULTED CEILING COMPATIBILITY

This fixture is vaulted-ceiling compatible up to a maximum ceiling slope of 45 degrees.

DIMMER SWITCH COMPATIBILITY

This fixture is dimmer-switch compatible and may only be used with a UL listed dimmer switch.

CEILING REINFORCEMENT

Fixtures weighing 50 lbs or more will require additional reinforcement above the ceiling where they are to be installed.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulbs. Do not touch or look directly at the bulbs when fixture is illuminated. Keep flammable materials away from lit bulbs.

WARNING: STRANGULATION HAZARD

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

INSTALLING THE SAFETY CABLE:

- Remove the adjuster from the safety cable.
- 2. Route safety cable through electrical box and center hole in canopy, weaving through the chain.
- 3. Guide safety cable exiting canopy through the opening in mounting bracket and into ceiling outlet box. From above the ceiling outlet box, loop safety cable around an appropriate load bearing structure.
- 4. Use cable lock to secure position of safety cable, ensuring there is enough tension to readjust when install is complete.





ASSEMBLY & INSTALLATION:

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

- Carefully remove all parts from the box and remove all plastic coverings.
- Determine the hanging length of chandelier. Remove links from chain, if needed.
- Run wires from chandelier up the chain, through loop collar (F), canopy loop (G), canopy (E), lock nut (C), and threaded joint (D). Leave it all sitting for now.
- 4. Attach mounting bracket (B) to ceiling and secure with mounting screws (L).
- 5. Lift entire unit assembled in step 3 and push the wire end through the hole in mounting bracket (B). Then screw threaded joint (D) into mounting bracket (B) and attach lock nut (C) to threaded joint (D). Lift up canopy (E) and screw canopy loop (G) onto the bottom of threaded joint (D). Screw loop collar (F) onto canopy loop (G).
- Connect the chain to canopy loop (G) and fixture loop (H). The chandelier should hang freely at this point.
- 7. Leave everything loose enough to attach the wiring at the ceiling.
- Carefully inspect the chandelier's fixture wires. The NEUTRAL WIRE has very fine ridges molded into the covering. The HOT WIRE has a smooth covering.
- Connect the NEUTRAL WIRE from your fixture with the neutral wire (usually white) from your ceiling box using a wire nut.
- 10. Connect the HOT WIRE from your fixture with the hot wire (usually black) from your outlet box using a wire nut. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
- Tuck the wire connection neatly into the ceiling outlet box.
- Attach canopy (E) and fixture to affixed mounting bracket (B) and secure with loop collar (F).
- 13. Insert bulbs into sockets.
- 14. Assembly is complete.

ATTENTION: ADJUSTING THE HANG HEIGHT

Any adjustments or alterations to the fixture, cord, or overall hang height that differ from those detailed on RH.com will void the Laboratory Listing and Approvals (UL, ETL, CSA, etc.). If the listing is voided, this means the product may no longer be safe for use as modified. RH does not recommend modifying the product.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.