


RH

NATURAL ANTLER FLOOR LAMP

PARTS ENCLOSED

- (A) Finial
- (B) Lampshade (not included)
- (C) Finial Screw
- (D) Harp
- (E) Harp Saddle
- (F) Lamp
- (G) Polarized Plug
- (H) Bulb Socket
- (I) Lightbulb
- (J) Dimmable Switch

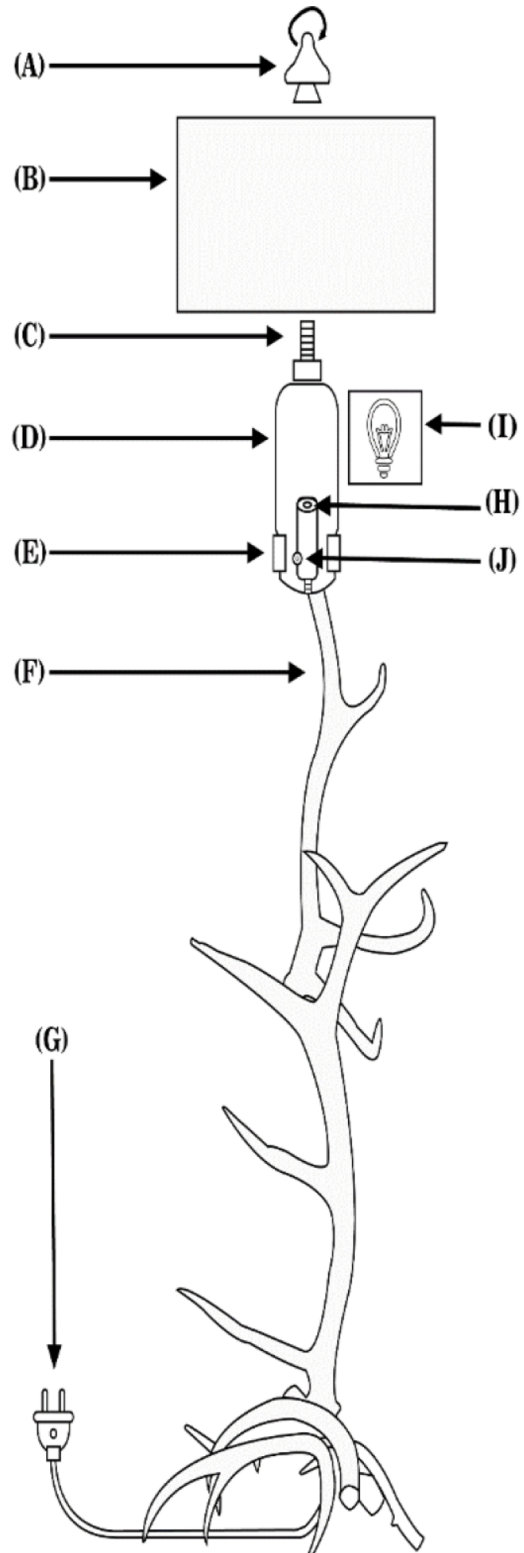



NATURAL ANTLER FLOOR LAMP

IMPORTANT SAFETY INSTRUCTIONS


INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED

This fixture has been rated for up to one Type A 60-watt bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

No special tools are necessary for the installation of this lamp.

WARNINGS

When unpacking and installing, be careful not to pull wires/plug as a bad connection may result. Do not connect to electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch the bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.

 **WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

 **WARNING: STRANGULATION HAZARD**

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

ASSEMBLY & INSTALLATION

1. Carefully remove all parts from the box and remove all plastic covering.
2. Install Harp (D) into Harp Saddle (E).
3. Install Lightbulb (I) (not included) into the Bulb Socket (H).
4. Place Lampshade (B) (not included) onto Finial Screw (C) and secure with the Finial (A)
5. Plug Polarized Plug (G) into wall socket. **NOTE:** This portable lamp has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to work around this safety feature.
6. Now turn fixture on using the dimmable switch (J) and adjust to desired brightness.
7. Assembly is now complete.

CARE INSTRUCTIONS

Do not use polishes or cleaners on your lamp. Just wipe clean with a soft cloth.