


# RH

## OSBORNE DOME SHADE TASK FLOOR LAMP

### PARTS ENCLOSED

- (A) Upper Pole (1)
- (B) Break (1)
- (C) Lower Pole (1)
- (D) Metal Disk (1)
- (E) Lamp Base (1)
- (F) Bolts (2)
- (G) Wrench (1)
- (H) Bulb (1)

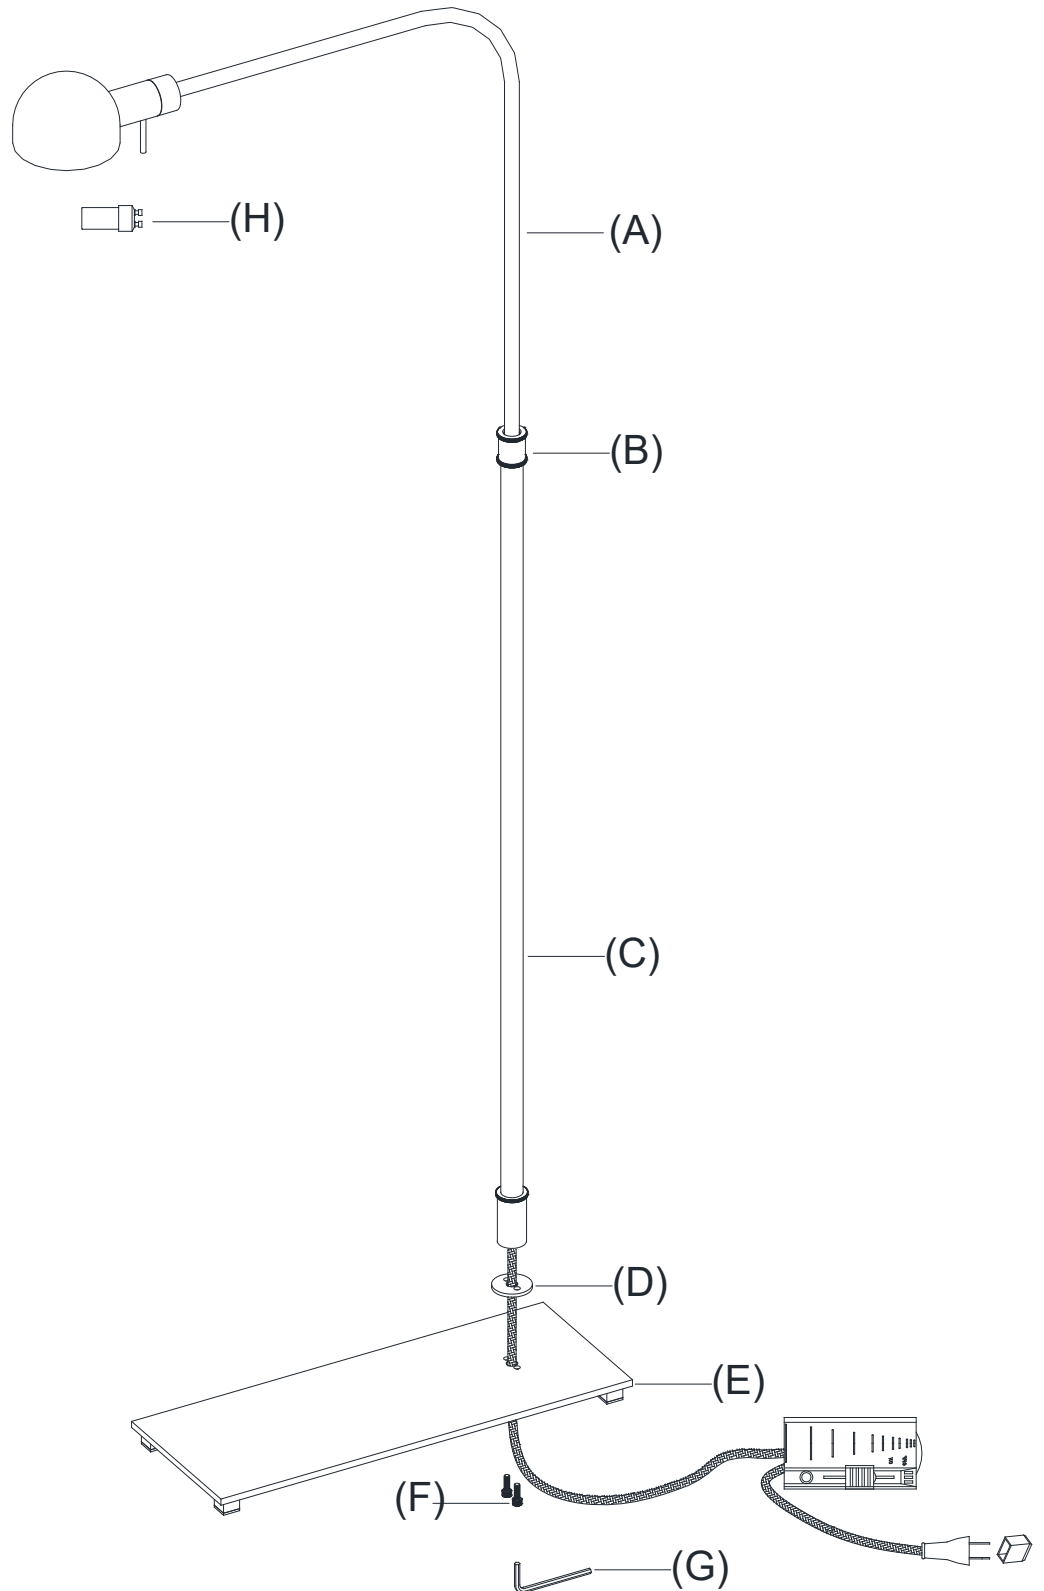

## OSBORNE DOME SHADE TASK FLOOR LAMP

## IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for one (1) 5-Watt LED lightbulb (included). To avoid the risk of fire, do not exceed the recommended wattage.

## WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



**WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

## ASSEMBLY &amp; INSTALLATION

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Join Lower Pole (C), Metal Disk (D), and Lamp Base (E) together by aligning the holes. Insert Bolts (F) into the holes to secure and tighten using Wrench (G).
3. Insert Bulb (H) into threaded socket.
4. Plug into proper electrical outlet and test fixture.
5. Assembly is complete.

## ADJUSTMENT INSTRUCTIONS

1. Turn Break (B) in a counter-clockwise direction to loosen Upper Pole (A).
2. Pull or push Upper Pole (A) up or down to desired height.
3. Secure by turning Break (B) in a clockwise direction to secure in place.

## CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.