
RH

OSBORNE DOME SHADE TASK TABLE LAMP

PARTS ENCLOSED

- (A) Upper Pole (1)
- (B) Adjustment Collar (1)

(C) Bulb (1)

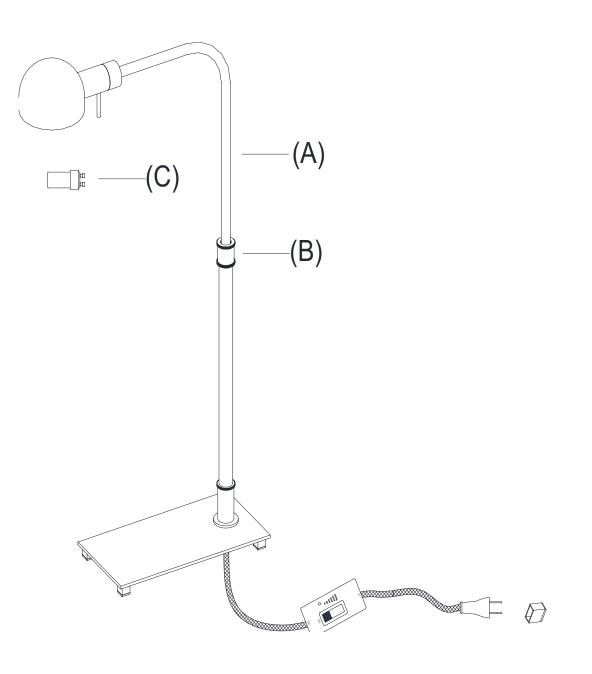

RH

IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

This fixture has been rated for one (1) 5-watt Type T LED lightbulb (included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.

WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

\bigwedge warning: strangulation hazard

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

ASSEMBLY & INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

- Carefully remove all parts from the box and remove all plastic coverings.
- 2. Insert Bulb (C) into the threaded socket.
- 3. Plug into proper electrical outlet and test lamp.
- 4. Assembly is complete.

TO ADJUST:

- Turn Adjustment Collar (B) in a counter-clockwise direction, then pull or push Upper Pole (A) up or down to the desired height.
- Secure by turning Adjustment Collar (B) in a clockwise direction.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the lamp. Wipe clean with a soft, dry cloth.