


RH

PAUILLAC ROUND CHANDELIER 36"
ASSEMBLY & INSTALLATION INSTRUCTIONS
ENGLISH

PAUILLAC ROUND CHANDELIER 36"

PARTS INCLUDED

- (A) Mounting Strap (1)
- (B) Mounting Screws (2)
- (C) Mounting Loop (1)
- (D) Canopy (1)
- (E) Canopy Ring (1)
- (F) 20" Connection Rod (1)
- (G) 18" Connection Rods (2)
- (H) 12" Connection Rods (4)
- (I) 6" Connection Rods (2)
- (J) Connectors (8)
- (K) Hub (1)
- (L) Shades (8)
(packed separately)
- (M) Fixture Body (1)
- (N) Bulbs (8)

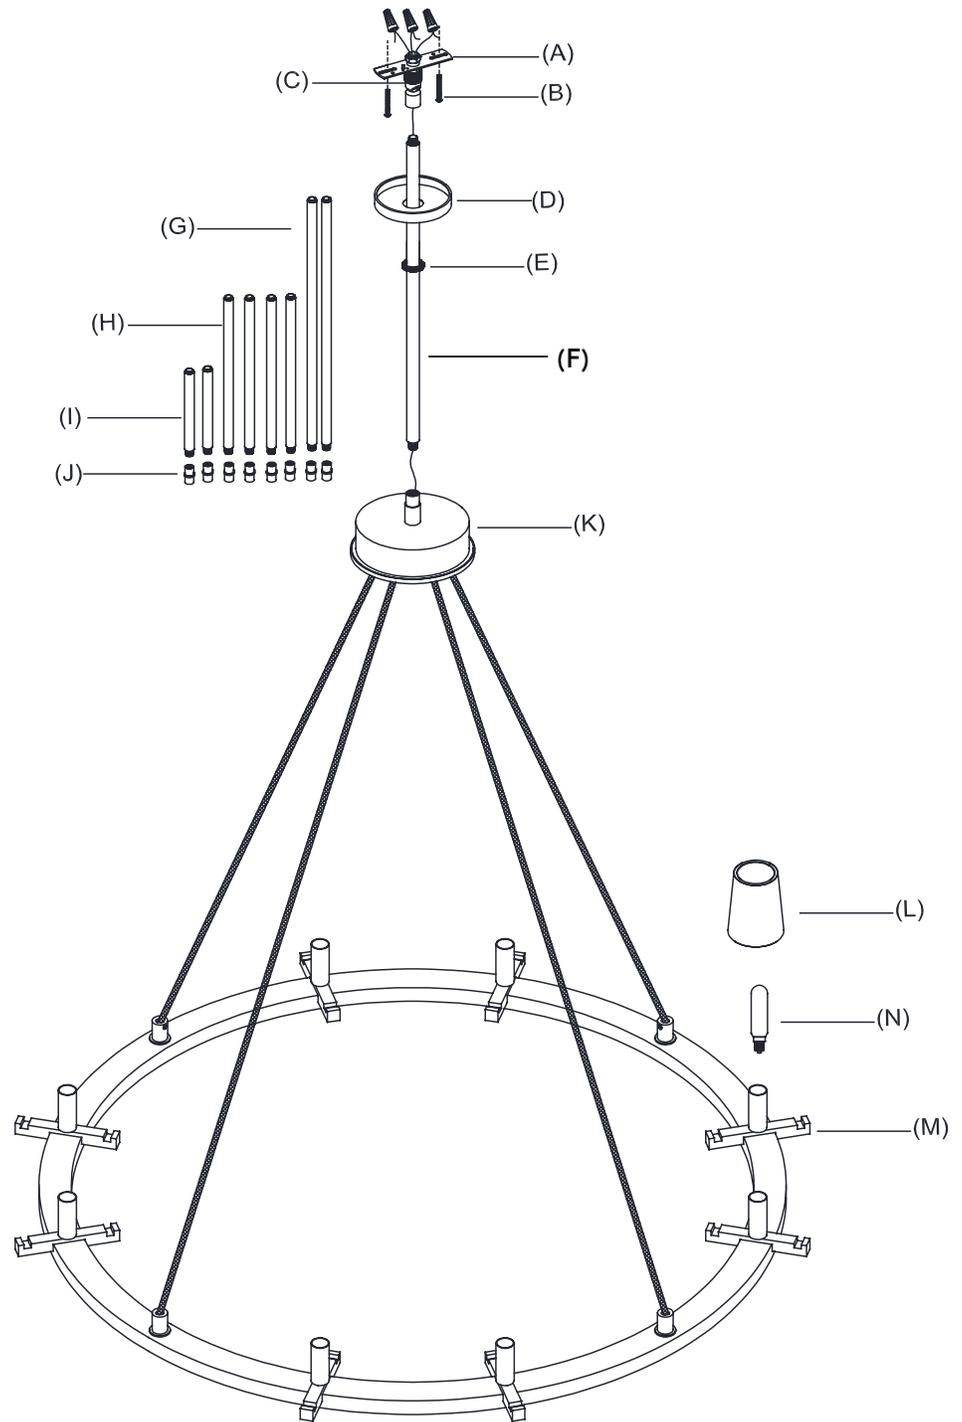

IMPORTANT: PLEASE READ

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR MOUNTING TO A WOODEN STRUCTURAL BEAM. UNIQUE OR ALTERNATIVE INSTALLATION TYPES MAY REQUIRE DIFFERENT MOUNTING HARDWARE, WHICH HAS NOT BEEN INCLUDED. ALWAYS CONSULT WITH A LICENSED ELECTRICIAN BEFORE INSTALLATION.

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

IMPORTANT SAFETY FEATURES**BULBS**

This fixture has been rated for eight (8) 25-watt maximum Type T lightbulbs (included) or eight (8) 13-watt compact fluorescent lightbulbs (not included). To avoid the risk of fire, do not exceed the recommended wattage.

VAULTED CEILING COMPATIBILITY

This fixture is vaulted-ceiling compatible up to a maximum ceiling slope of 20 degrees.

DIMMER SWITCH COMPATIBILITY

This fixture is dimmer-switch compatible and may only be used with a forward-phase dimmer switch.

CEILING REINFORCEMENT

Fixtures weighing 50 lbs or more will require additional reinforcement above the ceiling where they are to be installed.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulbs. Do not touch or look directly at the bulbs when fixture is illuminated. Keep flammable materials away from lit bulbs.



WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

ASSEMBLY AND INSTALLATION**SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM
THE FUSE BOX OR CIRCUIT BREAKER PANEL.**

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Thread 20" Connection Rod (F) into the center Hub (K) by turning in a clockwise direction until tight.
3. Determine the hanging length of fixture. Connect some or all Connection Rods (G) (H) (I) and Connectors (J) to 20" Connection Rod (F) according to the height needed. (See height adjustment instructions on the following page).
4. Feed wires through Connection Rods (F) (G) (H) (I).
5. Unscrew Canopy Ring (E). Slide Canopy Ring (E) and Canopy (D) onto 20" Connection Rod (F).
6. Thread the inner rod of 20" Connection Rod (F) to the bottom opening of Mounting Loop (C) by turning in a clockwise direction.
7. Attach Mounting Strap (A) to ceiling and secure with Mounting Screws (B).
8. Attach the fixture ground wire (green) and outlet ground wire (usually green or bare) to wall outlet box with the green grounding screw. Connect fixture wires to corresponding house wires with a wire nut. Carefully tuck the wires back into the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
9. Connect the fixture neutral wire (white) to the outlet neutral wire (usually white) with a wire connector and wrap the connection with electrical tape.
10. Connect the fixture hot wire (black) to the outlet hot wire (usually black) with a wire connector and wrap the connection with electrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
11. Raise Canopy (D) up to the affixed Mounting Strap (A) and secure with Canopy Ring (E).
12. Screw Bulbs (N) into each of the sockets.
13. Place Shades (L) onto Fixture Body (M).
14. Restore power to outlet box and check operation of fixture.
15. Assembly is complete.



CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture.

Wipe clean with a soft, dry cloth.

HEIGHT ADJUSTMENT INSTRUCTIONS

1. Unscrew the rod coupler and remove the cap and disk from the wire box.
2. Unscrew the wire nuts and remove the wire locker by unscrewing the screws.
3. Unscrew the safety cord locker.
4. Pull out wires to the same length.
5. Adjust the length of the wires to make sure all wires are the exact same length to keep the fixture body balanced.
6. Lock wires with safety cord locker.
7. Pull the safety cables out to make sure all safety cables are shorter than the wires. (Please use safety cables, and not fixture wires, to support the fixture weight.)
8. Adjust the length of safety cables to make sure all cables are the exact same length.
9. Re-lock safety cables with the safety cord locker.
10. Cut excess wires and re-connect them with the main wire from the center rod.
11. Re-install the cap by screwing the rod coupler and disk back onto the wire box.

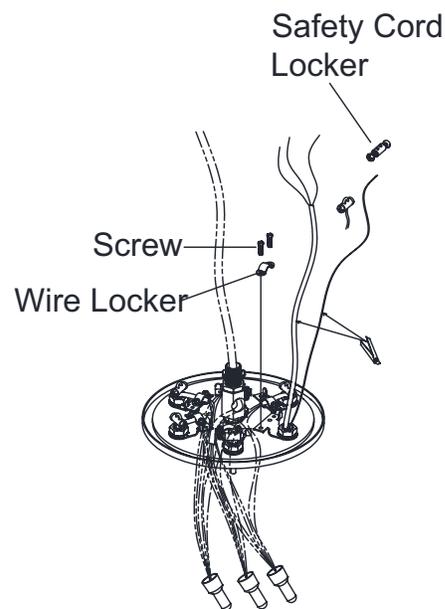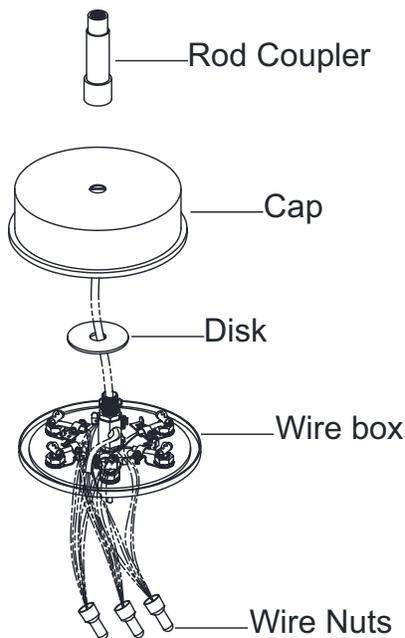

ADJUSTING THE HANG HEIGHT

Any adjustments or alterations to the fixture, cord, or overall hang height that differ from those detailed on RH.com will void the Laboratory Listing and Approvals (UL, ETL, CSA, etc.). If the listing is voided, this means the product may no longer be safe for use as modified. RH does not recommend modifying the product.