


RH

PEDRA ROUND CHANDELIER 40"

PARTS ENCLOSED

- (A) Wire Nuts (3)
- (B) Mounting Plate (1)
- (C) Mounting Screws (2)
- (D) Metal Cap (1)
- (E) Canopy (1)
- (F) Lock Collar (1)
- (G) Chain (1)
- (H) Top Ring (1)
- (I) Rod (1)
- (J) Threaded Pipe (1)
- (K) Alabaster (9)
- (L) Lamp Body (1)
- (M) Green Screw (1)
- (N) Wire Holders (2)
- (O) Crossbar (1)
- (P) Ceiling Loop (1)
- (Q) LED Driver (1)

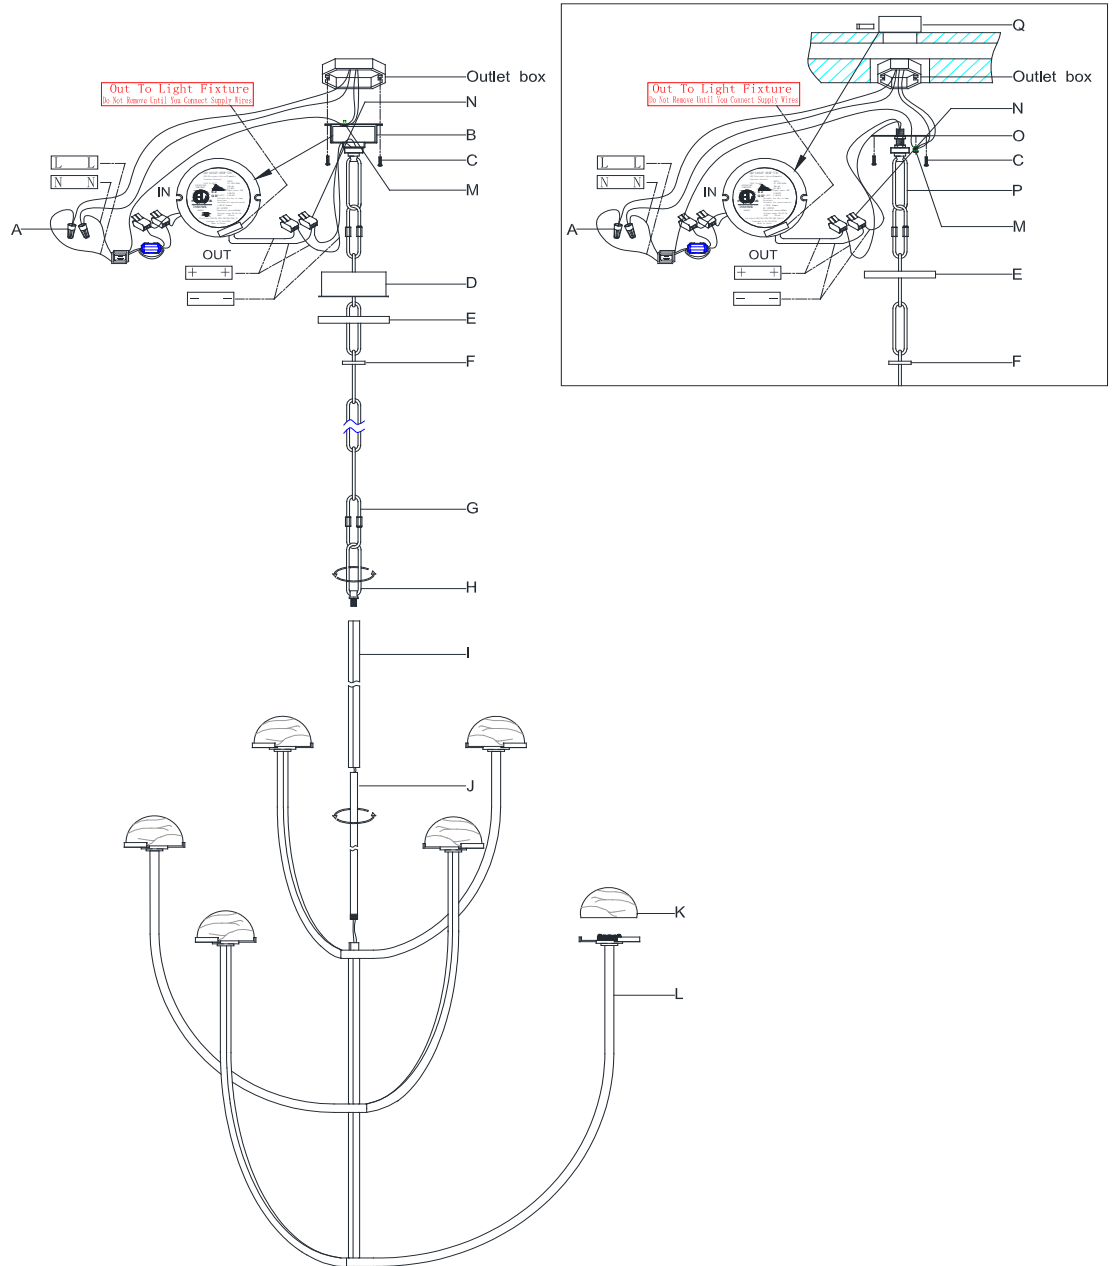

PEDRA ROUND CHANDELIER 40"

IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulbs. Do not touch or look directly at the bulbs when fixture is illuminated. Keep flammable materials away from lit bulbs.



WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

ASSEMBLY & INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

Assembly 1:

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Let the wire pass through Threaded Pipe (J), Rod (I), and Top Ring (H). Connect the bottom of Threaded Pipe (J) to Fixture Body (L), then attach Rod (I) to Threaded Pipe (J) and connect Top Ring (H) to the top of Threaded Pipe (J).
3. Install Mounting Plate (B) to the ceiling outlet box and secure with Mounting Screws (C).
4. Install the ground wire from the ceiling outlet box to Mounting Plate (B) and secure with Green Screws (M).
5. Let Metal Cap (D), Canopy (E), and Lock Collar (F) go through Chain (G). Unscrew the threaded collar on the carabiners, then attach a carabiner to Ceiling Loop (P) and Top Ring (H). Close the threaded collar to secure.
6. Weave the power supply cord through Chain (G), Lock Collar (F), Canopy (E), Metal Cap (D) and Mounting Plate (B).
7. Connect the hot wire (smooth edge, markings or black) from the fixture to the hot wire from the LED Driver (Q) (usually red). Fasten them together with a Wire Holder (N).
8. Connect the neutral wire (ribbed edge, no markings or white) from the fixture to the neutral wire from LED Driver (Q) (usually black). DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
9. Connect the hot wire (black) from the filter to the hot wire from the ceiling

ASSEMBLY & INSTALLATION CONT.

- outlet box (usually black). Fasten them together with a Wire Nut (A) and wrap the connection with electrical tape.
10. Connect the neutral wire (white) from the filter to the neutral wire from the outlet box (usually white). DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
 11. Connect the ground wire (bare copper) from the filter to Mounting Plate (B) and secure with Green Screws (M). IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.
 12. Tuck these wire connections neatly into the outlet box to secure.
 13. Put Metal Cap (D) and Canopy (E) to Ceiling Loop (P) and secure with Lock Collar (F).
 14. Install Alabaster Shades (K) to Fixture Body (L).
 15. Installation is complete. Turn on power at fuse or circuit breaker.

Assembly 2:

1. Follow Steps 1-2 from Assembly 1.
2. Install Crossbar (O) to the ceiling outlet box and secure with Mounting Screws (C).
3. Install the ground wire from the ceiling outlet box to Crossbar (O) and secure with Green Screws (M).
4. Let Canopy (E) and Lock Collar (F) go through Chain (G). Unscrew the threaded collar on the carabiners, then attach a carabiner to Ceiling Loop (P) and Top Ring (H). Close the threaded collar to secure.
5. Weave the power supply cord through Chain (G), Lock Collar (F), Canopy (E), and Crossbar (O).
6. Connect the hot wire (smooth edge, markings or black) from the fixture to the hot wire from LED Driver (Q) (usually red). Fasten them together with a Wire Holder (N).
7. Connect the neutral wire (ribbed edge, no markings or white) from the fixture to the neutral wire from LED Driver (Q) (usually black). DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
8. Connect the hot wire (black) from the filter to the hot wire from the ceiling outlet box (usually black). Fasten them together with a Wire Nut (A) and wrap the connection with electrical tape.
9. Connect the neutral wire (white) from the filter to the neutral wire from the ceiling outlet box (usually white). DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
10. Connect the ground wire (bare copper) from the fixture to Crossbar (O) and secure with Green Screws (M). IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.
11. Tuck these wire connections neatly into the ceiling outlet box to secure.
12. Affix Canopy (E) to Ceiling Loop (P) and secure with Lock Collar (F).
13. Install Alabaster Shades (K) to Fixture Body (L).
14. Installation is complete. Turn on power at fuse or circuit breaker.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.

FCC COMPLIANCE:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC COMPLIANCE:

This Class B digital apparatus complies with CAN ICES-005 (B) / NMB-005(B).

RESTORATION HARDWARE

15 KOCH ROAD

CORTE MADERA, CA 94925

1-800-762-1005