


RH

PETITE CANDLESTICK LINEN SHADE SWING-ARM FLOOR LAMP

PARTS ENCLOSED

- (A) Socket Ring (1)
- (B) Threaded Socket (1)
- (C) Lamp Arm (1)
- (D) Upper Pole (1)
- (E) Threaded Collar (1)
- (F) Lower Pole (1)
- (G) Lamp Base (1)
- (H) Base Weight (1)
- (I) Washer (1)
- (J) Nut (1)
- (K) Wrench (1)
- (L) LED Bulb (1)

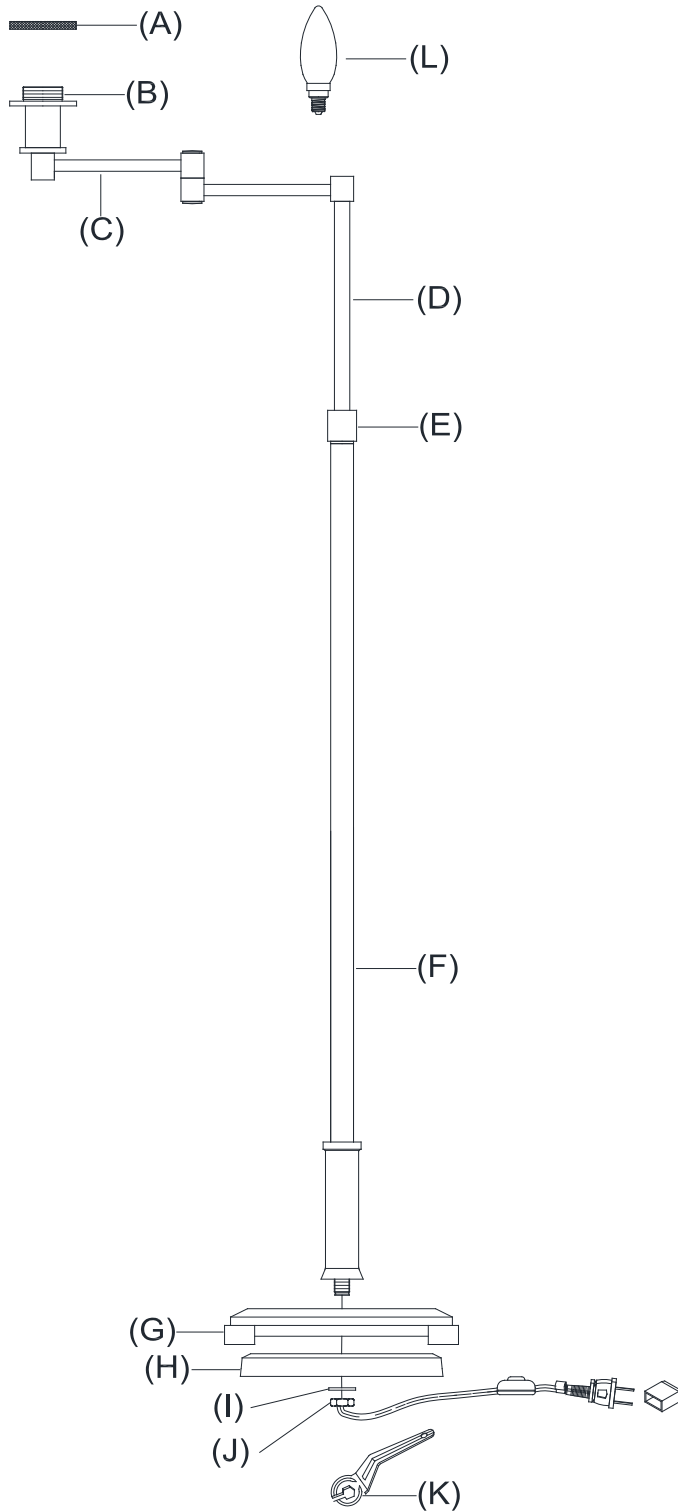

PETITE CANDLESTICK LINEN SHADE SWING-ARM FLOOR LAMP

IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for one (1) 60-Watt max Type B standard lightbulb (not included), 13-Watt compact fluorescent lightbulb (not included) or one 5.5-Watt SBLED lightbulb (included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

ASSEMBLY & INSTALLATION

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Remove white plastic bushing from inside the bottom opening of Lower Pole (F) and the top of Lamp Base (G) before assembling.
3. Join Lower Pole (F), Lamp Base (G) and Base Weight (H) together. Slide Washer (I) over the threaded nipple protruding from the bottom of Base Weight (H). Screw Nut (J) onto the threaded nipple to secure Lamp Base (G) to Lower Pole (F) and tighten using Wrench (K).
4. Pull the wire until tight.
5. Remove Socket Ring (A) from Threaded Socket (B). Attach lamp shade (not included) over top of the threaded section of Threaded Socket (B). Secure shade onto Threaded Socket (B) with Socket Ring (A).
6. Insert LED Bulb (L) into Threaded Socket (B).
7. Plug into proper electrical outlet and test fixture.
8. Assembly is complete.

TO ADJUST HEIGHT:

1. Loosen Threaded Collar (E) in a counterclockwise direction.
2. Adjust lamp by pulling or pushing Upper Pole (D) up or down to desired height.
3. Tighten Threaded Collar (E) in a clockwise direction.

TO ADJUST SHADE POSITION:

4. Adjust the shade position by swinging Lamp Arm (C) if needed.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the lamp. Wipe clean with a soft, dry cloth.