




ROUSSEAU ROUND CHANDELIER 38"
ASSEMBLY & INSTALLATION INSTRUCTIONS
ENGLISH

ROUSSEAU ROUND CHANDELIER 38"

PARTS INCLUDED

- (A) Mounting Plate (1)
- (B) Mounting Screws (2)
- (C) Driver (1)
- (D) Wire Nuts (6)
- (E) Swivel Ball (1)
- (F) Canopy (1)
- (G) Canopy Ring (1)
- (H) 18" Connection Rods (2)
- (I) 12" Connection Rods (2)
- (J) 6" Connection Rods (2)
- (K) Fixture Body (1)
- (L) Shades (8)
- (M) Sockets (8)
- (N) 3" Connection Rod (1)

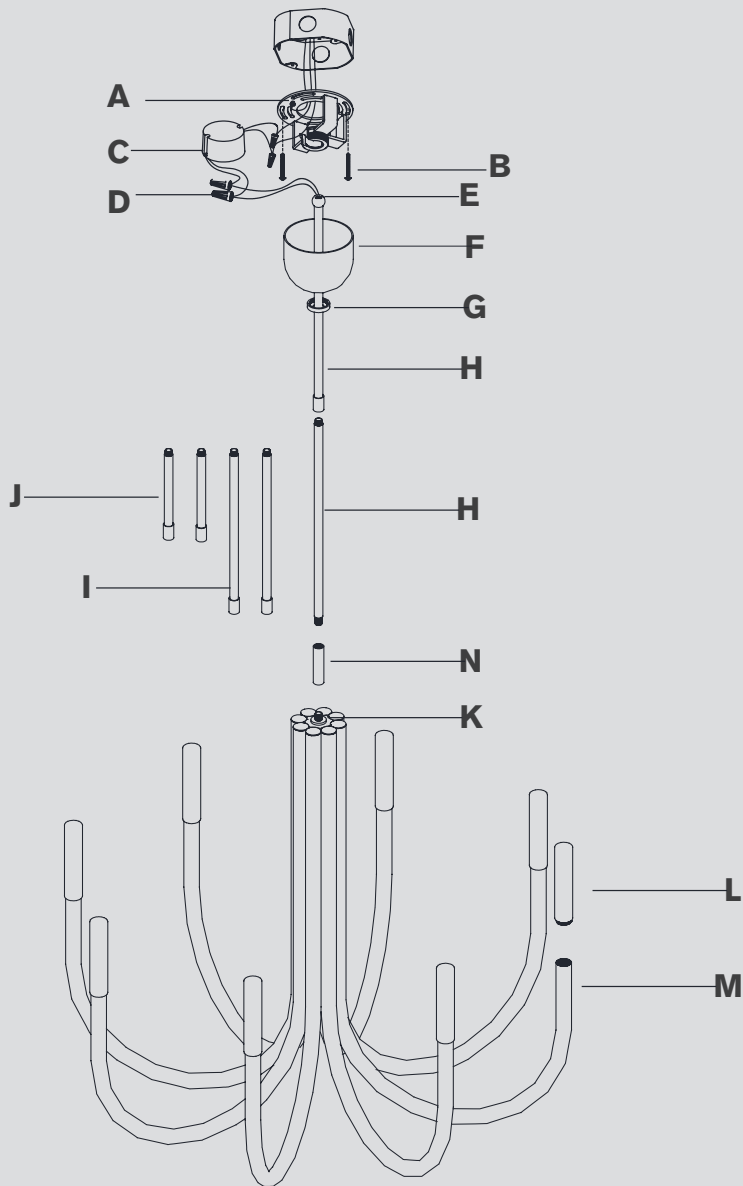

IMPORTANT: PLEASE READ

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR MOUNTING DIRECTLY TO A JUNCTION BOX. UNIQUE OR ALTERNATIVE INSTALLATION METHODS MAY REQUIRE DIFFERENT MOUNTING HARDWARE, WHICH HAS NOT BEEN INCLUDED. ALWAYS CONSULT WITH A LICENSED ELECTRICIAN BEFORE INSTALLATION.

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

IMPORTANT SAFETY FEATURES

This fixture is compatible with an Electric Low Voltage (ELV)

Dimmer. LED module is replaceable.

VAULTED-CEILING COMPATIBILITY

This fixture is vaulted-ceiling compatible, up to a maximum ceiling slope of 20 degrees.

DIMMER-SWITCH COMPATIBILITY

This fixture is dimmer-switch compatible, and may only be used with a forward-phase dimmer switch.



WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulbs. Do not touch or look directly at the bulbs when fixture is illuminated. Keep flammable materials away from lit bulbs.

WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

ASSEMBLY AND INSTALLATION

**SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM
THE FUSE BOX OR CIRCUIT BREAKER PANEL.**

1. Remove Mounting plate (A) from Canopy (F) by loosening Canopy Ring (G).
2. Remove Driver (C) from the bracket of Mounting Plate (A).
3. Install Mounting Plate (A) to the junction box and secure with Mounting Screws (B).
4. According to the desired hanging height, feed fixture wires through Connection Rod (N) and connect to Fixture Body (K). Repeat for Connection Rods (I) and (J), connecting to Connection Rod (N).
5. Continue feeding fixture wires through Canopy Ring (G), Canopy (F), and Connection Rods (H).
6. Holding fixture upright, slide Canopy Ring (G) and Canopy (F) down until they are resting on Fixture Body (K). Connect Connection Rod (H) to Connection Rod (I). NOTE: Slide components down slowly to avoid damages.
7. Hang Swivel Ball (E) to the center of Mounting Plate (A).
8. Cut excess wires, being sure to leave enough to reach the junction box.
9. Separate wires, and strip 5/8" of insulation off each wire.
10. Connect fixture neutral wire (black) to Driver (C) output neutral wire (black) using a Wire Nut (D).
11. Connect fixture hot wire (red) to Driver (C) output hot wire (red) using a Wire Nut (D).
12. Connect supply ground wire (usually green or bare copper) around the green grounding screw and tighten. NOTE: It is imperative that the fixture is grounded.
13. Connect Driver (C) input neutral wire (white) to the supply neutral wire (usually white) using a Wire Nut (D).
14. Connect Driver (C) input hot wire (black) to the supply hot wire (usually black) using a Wire Nut (D). CAUTION: Do not reverse the hot and neutral connections.
15. Make sure all wire connections are tight, then carefully tuck them into the junction box.
16. Insert Driver (C) into the bracket of Mounting Plate (A).
17. Install Canopy (F) to Mounting Plate (A) and secure with Canopy Ring (G).
18. Thread Shades (L) into each of Sockets (M). NOTE: Do not over tighten or shades could become damaged.
19. Restore power to outlet box and test operation of fixture.
20. Assembly is complete.

CARE INSTRUCTIONS


Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.

HEIGHT ADJUSTMENT INSTRUCTIONS

1. Feed the wires through rod (J), then thread rod (J) to the joint of fixture body (K).
2. Feed the wires through rod (I), then thread rod (I) to rod (J).
3. Feed the wires through rod (H), then thread rod (H) to rod (I).

ATTENTION: ADJUSTING THE HANG HEIGHT

Any adjustments or alterations to the fixture, cord, or overall hang height that differ from those detailed on RH.com will void the Laboratory Listing and Approvals (UL, ETL, CSA, etc.). If the listing is voided, this means the product may no longer be safe for use as modified. RH does not recommend modifying the product.

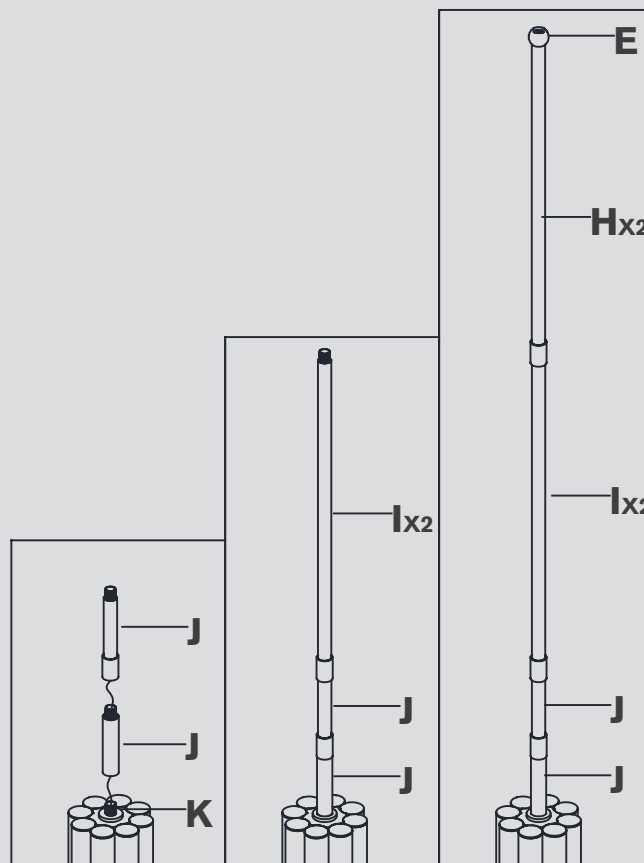

FCC COMPLIANCE:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC COMPLIANCE:

This Class B digital apparatus complies with CAN ICES-005 (B) /NMB-005(B).

RESTORATION HARDWARE
15 KOCH ROAD
CORTE MADERA, CA 94925
1-800-762-1005