




TRUMAN LINEAR CHANDELIER 72"
ASSEMBLY & INSTALLATION INSTRUCTIONS
ENGLISH

TRUMAN LINEAR CHANDELIER 72"

PARTS INCLUDED

- (A) Wire Nuts (3)
- (B) T-Wrench (1)
- (C) Hex Nuts (2)
- (D) Washers (2)
- (E) Mounting Plate (1)
- (F) Couplings (2)
- (G) Mounting Screws (2)
- (H) Canopy (1)
- (I) Canopy Rings (2)
- (J) 18" Connection Rods (4)
- (K) 12" Connection Rods (4)
- (L) 6" Connection Rods (4)
- (M) Shades (3)
(packed separately)
- (N) Bulbs (3)
- (O) Collars (3)
- (P) Brackets (3)
- (Q) Fixture Body (1)

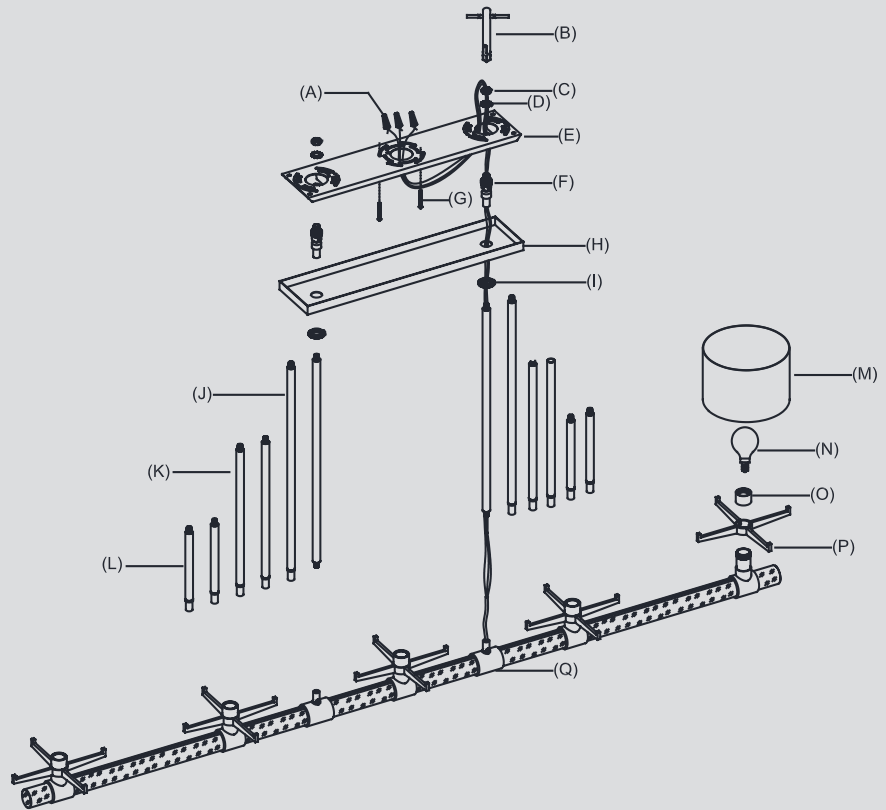

IMPORTANT: PLEASE READ

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR MOUNTING DIRECTLY TO A JUNCTION BOX. UNIQUE OR ALTERNATIVE INSTALLATION METHODS MAY REQUIRE DIFFERENT MOUNTING HARDWARE, WHICH HAS NOT BEEN INCLUDED. ALWAYS CONSULT WITH A LICENSED ELECTRICIAN BEFORE INSTALLATION.

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

IMPORTANT SAFETY FEATURES**BULBS**

This fixture has been rated for five (5) 40-watt maximum Type G incandescent lightbulbs or five (5) 9-watt maximum LED lightbulbs. To avoid the risk of fire, do not exceed the recommended wattage.

VAULTED-CEILING COMPATIBILITY

This fixture is vaulted-ceiling compatible, up to a maximum ceiling slope of 20 degrees.

DIMMER-SWITCH COMPATIBILITY

This fixture is dimmer-switch compatible, and may only be used with a forward-phase dimmer switch.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulbs. Do not touch or look directly at the bulbs when fixture is illuminated. Keep flammable materials away from lit bulbs.

WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

ASSEMBLY AND INSTALLATION**SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM
THE FUSE BOX OR CIRCUIT BREAKER PANEL.**

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Remove Mounting Plate (E) from Canopy (H) by Canopy Rings (I).
3. Remove Couplings (F) from Mounting Plate (E) by removing Hex Nuts (C) and Washers (D) using T-Wrench (B).
4. According to the desired hanging height, feed fixture wires through some or all Connection Rods (J) (K) (L).
5. Connect some or all Connection Rods (J) (K) (L) to Fixture Body (Q) according to the height needed.
6. Feed wires through Canopy Rings (I), Canopy (H), and Couplings (F).
7. Hold Fixture Body (Q) upright. Slide Canopy Ring (I) and Canopy (H) down and rest them on Fixture Body (Q).
NOTE: Slide components down slowly to avoid damages.
8. Screw Couplings (F) to the top of 18" Connection Rods (J).
9. Install Mounting Plate (E) to Couplings (F) and secure with Washers (D) and Hex Nuts (C) using T-Wrench (B).
10. Install Mounting Plate (E) to the junction box and secure with Mounting Screws (G).
11. Cut the extra wires. Be sure to have enough wiring left to reach the junction box.
12. Wrap fixture ground wire (bare copper) around the green grounding screw and tighten. Continue feeding fixture ground wire and connect to supply ground wire (usually green or bare copper) using a Wire Nut (A). NOTE: It is imperative that the fixture is grounded.
13. Connect fixture neutral wire (white) to the supply neutral wire (usually white) using a Wire Nut (A).
14. Connect fixture hot wire (black) to the supply hot wire (usually black) using a Wire Nut (A). CAUTION: Do not reverse the hot and neutral connections.
15. Make sure all wire connections are tight, then carefully tuck into the junction box.
16. Install Canopy (H) to Mounting Plate (E) and secure with Canopy Rings (I).
17. Remove Collars (O) from each of the sockets. Install Brackets (P) onto each of the sockets and secure with Collars (O).
18. Install Bulbs (N) into each of the sockets.
19. Install Shades (M) (packed separately) onto each of the Brackets (P).
20. Restore power to outlet box and check operation of fixture.
21. Assembly is complete.

ATTENTION: ADJUSTING THE HANG HEIGHT

Any adjustments or alterations to the fixture, cord, or overall hang height that differ from those detailed on RH.com will void the Laboratory Listing and Approvals (UL, ETL, CSA, etc.). If the listing is voided, this means the product may no longer be safe for use as modified. RH does not recommend modifying the product.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.

HEIGHT ADJUSTMENT INSTRUCTIONS

1. Feed the wires through 6" Connection Rod (L), then thread 6" Connection Rod (L) to the joint of Fixture Body (Q).
2. Feed the wires through 12" Connection Rod (K), then thread 12" Connection Rod (K) to 6" Connection Rod (L).
3. Feed the wires through 18" Connection Rod (J), then thread 18" Connection Rod (J) to 12" Connection Rod (K).

