


# RH

## UTILITAIRE FLOOR LAMP

### PARTS ENCLOSED

- (A) Socket (1)
- (B) Upper pole (1)
- (C) Hand Clutch (1)
- (D) Lamp pole (1)
- (E) Lamp base (1)
- (F) Base weight (1)
- (G) Washer (1)
- (H) Nut (1)
- (I) Wrench (1)
- (J) Harp (1)
- (K) Bulb (1)
- (L) Shade (1)
- (M) Flat Washers (2)
- (N) Finial (1)

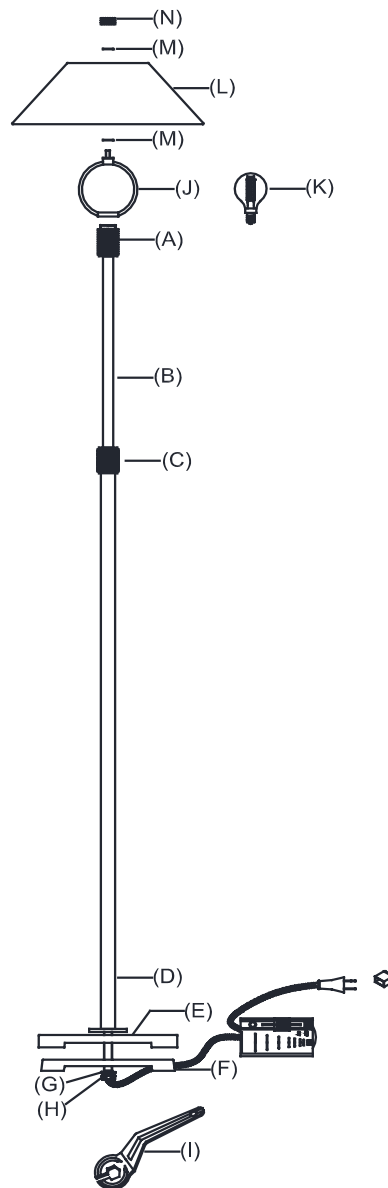

## UTILITAIRE FLOOR LAMP

## IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for up to one (1) 40-watt maximum Type G lightbulb, one (1) 9-watt compact fluorescent lightbulb or one (1) 5.5-watt SBLLED lightbulb. To avoid the risk of fire, do not exceed the recommended wattage.

## WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



**WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

## ASSEMBLY &amp; INSTALLATION

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Join Lamp Pole (D), Lamp Base (E), and Base Weight (F) together. Slide Washer (G) over the threaded nipple protruding at the bottom of Base Weight (F). Screw Nut (H) onto the threaded nipple to secure Lamp Base (E) to Lamp Pole (D). Tighten with Wrench (I).
3. Pull the wire from under Base Weight (F) until tight.
4. Remove Finial (N) and Flat Washer (M) from Harp (J).
5. Screw the bottom ring of Harp (J) onto the top of Socket (A).
6. Place Shade (L) onto the bolt on top of Harp (J), then tighten with Flat Washer (M) and Finial (N).
7. Insert Bulb (K) into Socket (A).
8. Plug into proper electrical outlet and test fixture.
9. Assembly is complete.

## TO ADJUST HEIGHT:

1. Loosen Hand Clutch (C) in a counter-clockwise direction.
2. Adjust the lamp by pulling or pushing Upper Pole (B) up or down to desired height.
3. Tighten Hand Clutch (C) in a clockwise direction to keep in place.

## CARE INSTRUCTIONS

Do not use polishes or cleaners on the lamp. Wipe clean with a soft, dry cloth.