


RH

UTILITAIRE TASK FLOOR LAMP

PARTS ENCLOSED

- (A) Socket (1)
- (B) Shade Adjustment Key (1)
- (C) Lamp Arm (1)
- (D) Upper Pole (1)
- (E) Threaded Collar (1)
- (F) Lower Pole (1)
- (G) Lamp Base (1)
- (H) Base Weight (1)
- (I) Washer (1)
- (J) Nut (1)
- (K) Wrench (1)
- (L) Felt Pad (1)
- (M) Bulb (1)
- (N) Shade (1)
- (O) Arm Adjustment Key (1)

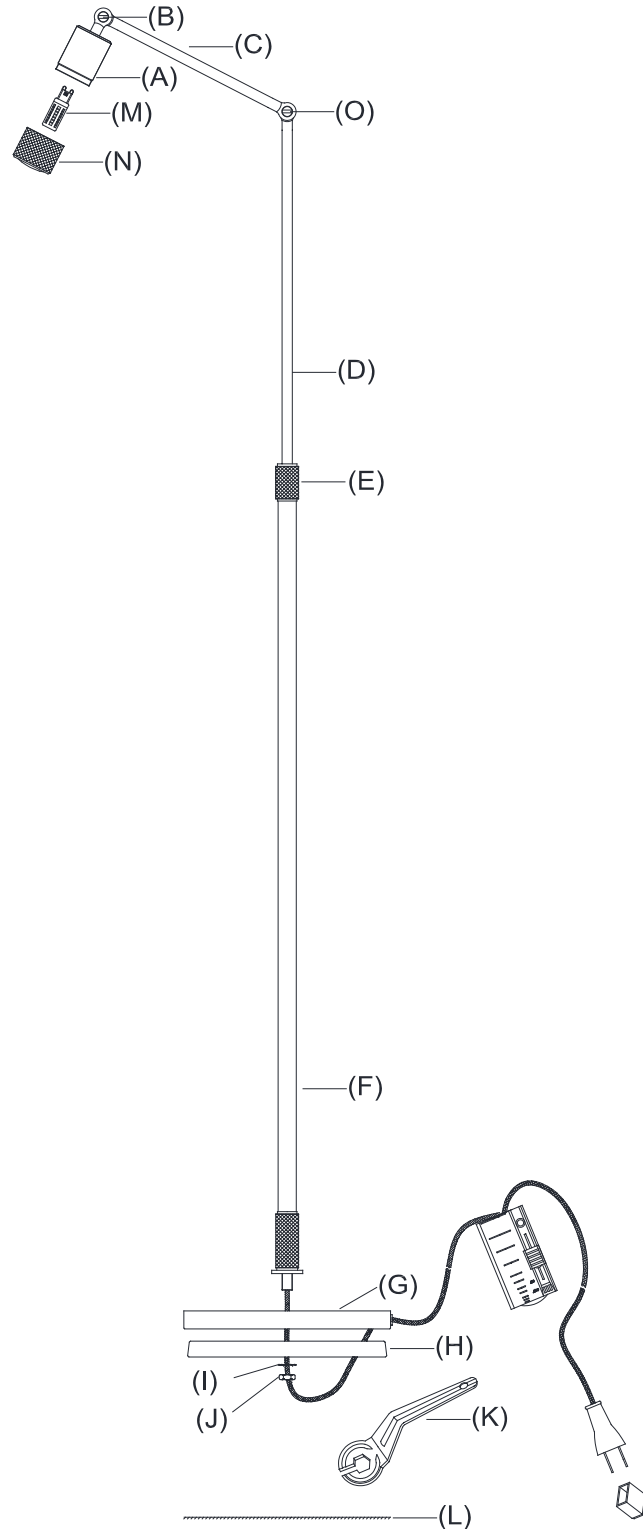

UTILITAIRE TASK FLOOR LAMP

IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for one (1) 5-watt maximum Type G9 lightbulb (included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

ASSEMBLY & INSTALLATION

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Join Lower Pole (F), Lamp Base (G) and Base Weight (H) together. Slide Washer (I) over the threaded nipple protruding from the bottom of Base Weight (H). Screw Nut (J) on the threaded nipple to secure Lamp Base (G) to Lower Pole (F). Tighten using Wrench (K).
3. Pull the wire until tight.
4. Remove backing sheet from Felt Pad (L). Affix Felt Pad (L) to the underside of Lamp Base (G).
5. Remove Shade (N) from Socket (A).
6. Insert Bulb (M) into Socket (A).
7. Screw Shade (N) onto Threaded Socket (A).
8. Plug into proper electrical outlet and test fixture.
9. Assembly is complete.

TO ADJUST:

1. Loosen Threaded Collar (E) in a counter-clockwise direction.
2. Adjust fixture by pulling or pushing Upper Pole (D) up or down to desired height.
3. Tighten Threaded Collar (C) in a clockwise direction to secure.
4. Loosen Shade Adjustment Key (B) and Arm Adjustment Key (O).
5. Adjust Lamp Arm (C) and Socket (A) to desired position.
6. Tighten Shade Adjustment Key (B) and Arm Adjustment Key (O) to secure.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.