

VETRO WALL FOUNTAIN ASSEMBLY INSTRUCTIONS

1. Choose location for fountain and make sure surface is level.
2. Pump assembly must be done before placing fountain against the wall.
3. Unpack pump, attach the suction cups to its feet (image 1), place rubber ring/gasket over the threaded adapter, and screw it into the threaded hole at the top of pump (image 2).
4. Unscrew the Phillips-head screws from the back cover of fountain with a screwdriver (image 3) and remove cover. Always remove the top left or center screw last and secure cover to prevent plate from falling.
5. Connect hose inside of opening to top spout and secure with provided clamp. Run hose to lower section of fountain.
6. Connect other end of hose to the pump and secure with provided clamp (image 5).
7. Gently place pump in the basin and make sure suction cups are secured.
8. Fill basin of fountain with water to the suggested water depth mark label on the inside of the basin. It is important to operate fountain with the suggested water amount. Water level should be monitored regularly and water added if needed.
9. Connect the bipolar plug of pump to a 110-volt receptacle. Do not let pump run dry. The water might take a couple of seconds to start as the pressure is adjusted.
10. Use the adjusters to level fountain if water flows out of spouts unevenly.
11. You may adjust the flow of water by using the regulator in front of the pump. Turning the wheel clockwise reduces the water flow and counterclockwise increases it. For additional information on the pump, please refer to the Sicce instruction manual supplied with the pump.
12. Once pump has been run and if no leaks have been detected, reinstall back cover. Do not overtighten screws.

GENERAL FOUNTAIN TIPS

Install fountain on a level surface. You will need a properly grounded 110-volt (AC only) GFCI-protected receptacle near the fountain for your pump. Test all pumps and adjust to full output prior to assembly. It is not recommended that fountains be placed directly on grass or dirt.

We recommend replacing the water and cleaning the fountain at least once a year with a soft bristle brush and water – use crude soap (without additives) or a mild detergent if needed. Ideally, this process should be done prior to the winter months, as the water would need to be removed anyway. Use pump to remove majority of water and gently tip fountain to remove remaining water. If too heavy to tilt, use a cloth to absorb water.

Weather such as sun, rain, wind, pollution, freezing cold, salt water and a host of other conditions can degrade the finish over time. In seaside locations, we recommend regular soap and water cleaning to rinse away salt deposits. If grime and salt deposits are not removed regularly, they will cause damage to the finish.

WINTER CARE

Fountains are frost-resistant up to -4°F (-20°C) but the pump must be removed from the fountain during freezing temperatures. If fountain must be left outside and temperatures drop below -4°F (-20°C):

1. Remove pump and store indoors.
2. Raise fountain base from ground with wood strips so that base will not freeze to the ground surface.
3. Cover or wrap the fountain with burlap or other absorbent material (e.g., an old blanket or towel), and then cover securely with plastic, making sure that water will not accumulate and freeze in the basin or other fountain components.
4. Check fountain periodically to ensure that plastic is secure and water is not accumulating in any of the fountain components.

1. Pump mounted



2. Mounted adapter



3. Remove back cover of fountain



4. Hose connected to spout



5. Connect hose to pump

