


RH

1930S PARISIAN TASK FLOOR LAMP

PARTS ENCLOSED

- (A) Lamp Pole (1)
- (B) Break (1)

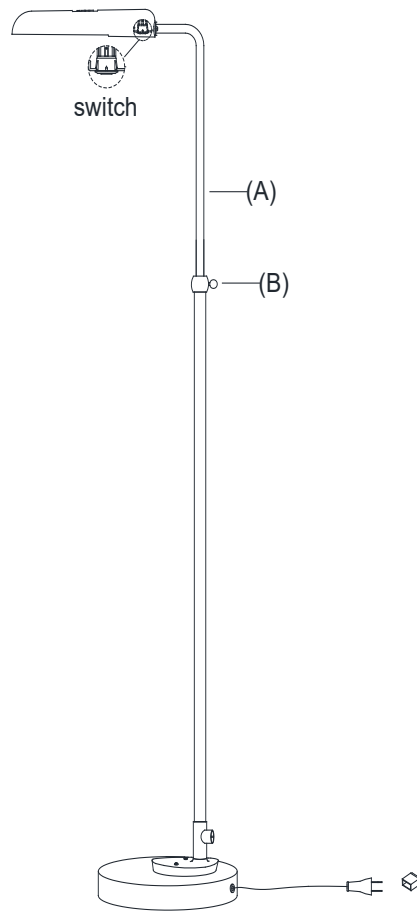

1930S PARISIAN TASK FLOOR LAMP

IMPORTANT SAFETY INSTRUCTIONS

For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.



WARNING: STRANGULATION HAZARD

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

ASSEMBLY & INSTALLATION

1. Carefully remove all parts from the box and remove all plastic covering.
2. Plug into proper electrical outlet and test fixture.
3. Assembly is complete.

HEIGHT ADJUSTMENT

1. Loosen Break (B) by turning counter-clockwise direction.
2. Adjust lamp by pulling or pushing Lamp Pole (A) up or down to desired height.
3. Tighten Break (B) by turning clockwise direction.

SWITCH OPERATION

1. When lamp is unlit, simply tap the switch to turn lamp on..
2. To adjust brightness, tap and hold your finger on the switch. The light will begin to dim up or down. To dim the opposite way, remove your finger; then tap and hold again until the desired light level is achieved.
3. To turn lamp off, tap the switch.

CARE INSTRUCTIONS

Do not use polishes or cleaners on your lamp. Just wipe clean with a soft cloth.

1930S PARISIAN TASK FLOOR LAMP

FCC COMPLIANCE:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC COMPLIANCE:

This Class B digital apparatus complies with CAN ICES-005 (B) / NMB-005(B).

RESTORATION HARDWARE
15 KOCH ROAD
CORTE MADERA, CA 94925
1-800-762-1005