


1960S LISEUSE TASK FLOOR LAMP

PARTS ENCLOSED

- (A) Metal Shade (1)
- (B) Socket Housing (1)
- (C) Upper Pole (1)
- (D) Lower Pole (1)
- (E) Lamp Base (1)
- (F) Washer (1)
- (G) Nut (1)
- (H) T-Wrench (1)
- (J) Foot Glide (1)
- (K) Screw (1)
- (L) Bulb (1)

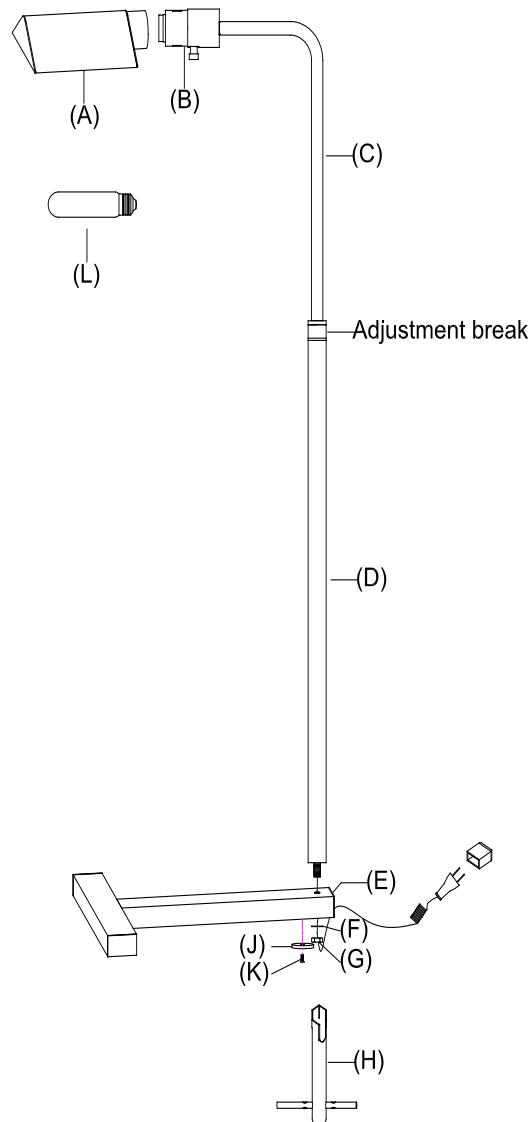

1960S LISEUSE TASK FLOOR LAMP

IMPORTANT SAFETY INSTRUCTIONS

For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

This fixture has been rated for one (1) 40-Watt maximum TYPE T bulb (L) (included) OR one (1) 9-Watt Compact Fluorescent bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.



WARNING: STRANGULATION HAZARD

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

ASSEMBLY & INSTALLATION

1. Carefully remove all parts from the box and remove all plastic covering.
2. Remove Foot Glide (J) from Lamp Base (E) by unscrewing Screw (K).
3. Join Lower Pole (D) and Lamp Base (F) together by tightening Washer (F) and Nut (G) to threaded rod at bottom of Lower Pole (D). Tighten with T-Wrench (H) provided.
4. Replace Foot Glide (J) to Lamp Base (E) and secure with Screw (K).
5. Slide Metal Shade (A) onto Socket Housing (B).
6. Plug into proper electrical outlet and test fixture.
7. Assembly is complete.

HEIGHT ADJUSTMENT

1. Loosen adjustment break by turning counter-clockwise.
2. Adjust lamp by pulling or pushing Upper Pole (C) up or down to desired height.
3. Tighten adjustment break by turning clockwise.

CARE INSTRUCTIONS

Do not use polishes or cleaners on your lamp. Just wipe clean with a soft cloth.