




CASCADA SCONCE

ASSEMBLY & INSTALLATION INSTRUCTIONS

**UNITED STATES ENGLISH**

**CASCADA SCONCE****PARTS INCLUDED:**

- (A) Junction Box, 25lbs/11.3kg MIN. FIXTURE RATED (not included)  
 (B) Mounting Bolts (2 pcs; for junction box)  
 (C) Wall Plate (1)  
 (D) Fixture Body (1)  
 (D1) Nuts (2)  
 (D2) Nut Caps (2)  
 (E) Wire Nuts (3)  
 (F) Bulb (1)  
 (G) Safety Cable (1)

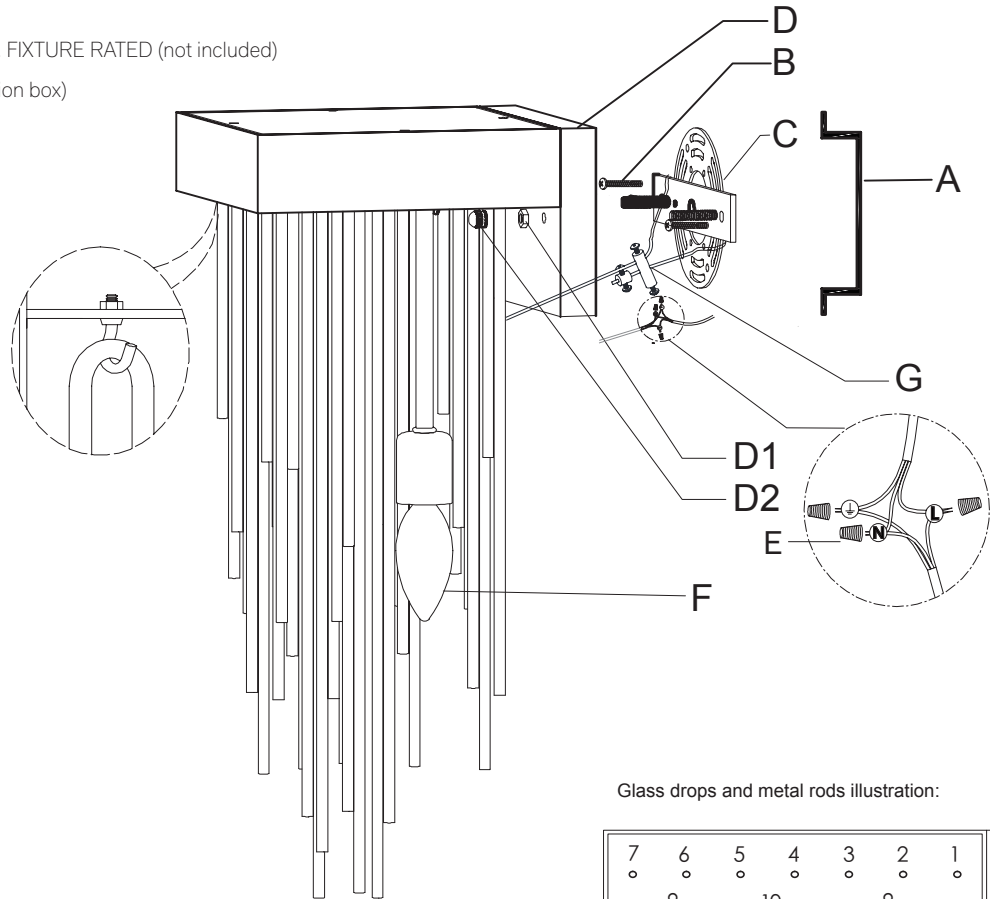

Glass drops and metal rods illustration:

7	6	5	4	3	2	1
○	○	○	○	○	○	○
9	○	10	○	9	○	○
4	5	6	7	○	8	○
○	10	○	9	○	11	○
○	6	○	8	○	4	○
○	9	○	10	○	11	○
○	8	○	7	○	6	○
○	○	10	○	9	○	10
1	2	3	4	5	6	7

1	2	3	4	5	6	7	8	9	10	11
2pcs	2pcs	3+1pcs	5+1pcs	4+1pcs	5+1pcs	4+1pcs	3+1pcs	5pcs	7pcs	2pcs

**IMPORTANT: PLEASE READ**

**PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR MOUNTING TO JUNCTION BOX. UNIQUE OR ALTERNATIVE INSTALLATION TYPES MAY REQUIRE DIFFERENT MOUNTING HARDWARE, WHICH HAS NOT BEEN INCLUDED. ALWAYS CONSULT WITH A LICENSED ELECTRICIAN BEFORE INSTALLATION.**

**INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.**

**IMPORTANT SAFETY FEATURES****BULBS**

This fixture has been rated for one (1) 25-watt maximum E12 TYPE B11 incandescent bulb (not included) or one (1) 6-watt maximum E12 LED TYPE B11 bulb (one (1) 4-watt E12 TYPE B11 LED bulb included). To avoid the risk of fire, do not exceed the recommended wattage

**DIMMER SWITCH COMPATIBILITY**

This fixture is dimmer-switch compatible and may be used with a forward- or reverse-phase dimmer switch.

**WARNINGS**

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.

**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 feet (91cm) away from cribs, bassinets, and toddler beds.

Keep out of reach of children under 3 years of age.

**THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.**

**ASSEMBLY AND INSTALLATION****SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.**

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Turn OFF power to junction box (A) where the fixture will be installed.
3. Loosen the nut caps (D2) and nuts (D1), detach the wall plate (C) from the fixture body (D).
4. Have a professional contractor reinforce wall.
5. Attach the wall plate (C) to the junction box (A) and secure with mounting bolts (B).
6. Carefully inspect the fixture wires. One is the ground wire (marked with  $\oplus$ ). The second is the neutral wire (marked with N). The third wire is the live/hot wire (marked with L).
7. Connect the fixture ground wire to the power supply ground wire with wire nut (E).

NOTE: IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.

8. Connect the fixture neutral wire to the power supply neutral wire with wire nut (E).
9. Connect the fixture live/hot wire to the power supply live/hot wire with wire nut (E).

CAUTION: DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS, AS SAFETY WILL BE COMPROMISED.

10. Attach the fixture body (D) to the wall plate (C) and secure with nuts (D1) and nut caps (D2).
11. Fasten the bulb (F) into the sockets.
12. Hang the glass drops and metal rods starting from inner layer to the outer layer. Refer to the glass drops and metal rods illustration for details.
13. Restore power to the junction box and test fixture.
14. Assembly is complete.

**CARE INSTRUCTIONS**

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.