



CHIARA GRAND SCONCE


ASSEMBLY & INSTALLATION INSTRUCTIONS

UNITED STATES ENGLISH

CHIARA GRAND SCONCE

PARTS INCLUDED:

- (A) Junction Box, 25lbs/11.3 kg MIN. FIXTURE RATED (not included)
- (B) Mounting Screws and Plastic Plugs (4 sets; for concrete wall or drywall)
- (C) Wire Nuts (3)
- (D) Fixture Body (1)
- (E) Wall Plate (1)
- (F) Bolt (1)
- (G) Glass Drops (3 +2 extra)
- (H) Glass Drops (3)
- (I) Bulbs (6 +2 extra)
- (J) Allen Key (1)
- (K) Glass Drops (9)
- (L) Safety Cable (1)

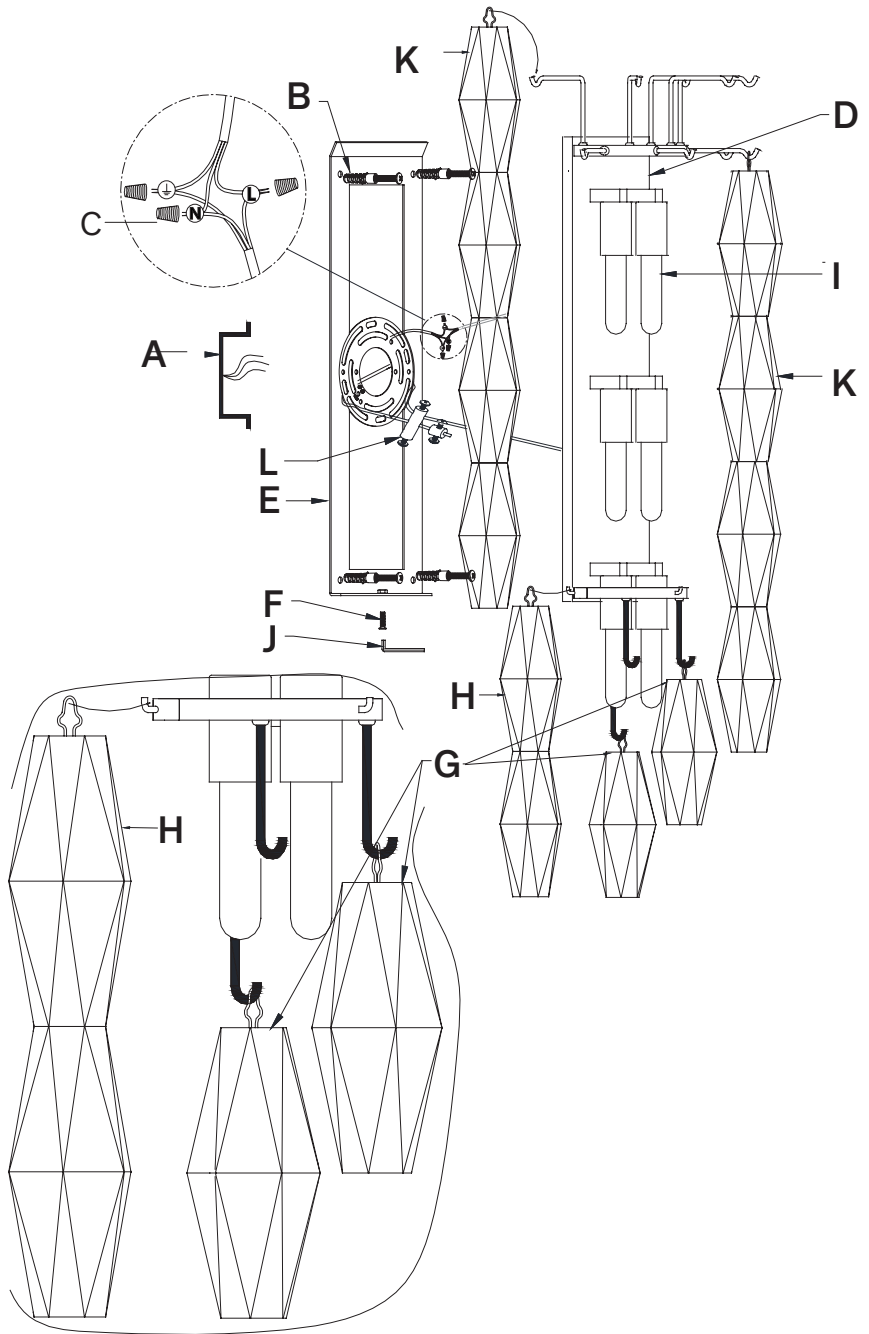

IMPORTANT: PLEASE READ

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR MOUNTING TO CONCRETE WALL OR DRY WALL. UNIQUE OR ALTERNATIVE INSTALLATION TYPES MAY REQUIRE DIFFERENT MOUNTING HARDWARE, WHICH HAS NOT BEEN INCLUDED. ALWAYS CONSULT WITH A LICENSED ELECTRICIAN BEFORE INSTALLATION.

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

IMPORTANT SAFETY FEATURES**BULBS**

This fixture has been rated for six (6) 25-watt maximum E12 TYPE T6 incandescent bulbs (six (6) 25-watt E12 TYPE T6 incandescent bulbs included) or six (6) 6-watt maximum E12 LED TYPE T6 bulbs (not included). To avoid the risk of fire, do not exceed the recommended wattage.

DIMMER SWITCH COMPATIBILITY

This fixture is dimmer-switch compatible and may be used with a forward- or reverse-phase dimmer switch.

WALL REINFORCEMENT

Fixtures weighing 25lbs/11.3 kg or more will require additional reinforcement behind the wall where they are to be installed.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulbs. Do not touch or look directly at the bulbs when fixture is illuminated. Keep flammable materials away from lit bulbs.


WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet (91cm) away from cribs, bassinets, and toddler beds.

Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

ASSEMBLY AND INSTALLATION**SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.**

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Turn OFF power to junction box where the fixture will be installed.
3. Loosen the bolt (F), then remove wall plate (E) from fixture body (D).
4. Attach the wall plate (E) to the wall with mounting screws and plastic plugs (B).
5. Carefully inspect the fixture wires. One is the ground wire (marked with ). The second is the neutral wire (marked with N). The third wire is the live/hot wire (marked with L).
6. The ground wire is to connect to grounding wire of power supply cable with wire nuts (C).

IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
7. The neutral wire is to connect to neutral wire of power supply cable with wire nuts (C).
8. The live/hot wire is to connect to live/hot wire of power supply cable with wire nuts (C).

DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS; OTHERWISE, SAFETY WILL BE COMPROMISED.
9. Attach the fixture body (D) to the wall plate (E) with bolt (F).
10. Fasten the bulbs (I) to the lampholders.
11. Hang the glass drops (G, H, and K) on the corresponding hooks of the fixture body (D) from bottom to top per illustration.
12. Restore power to the junction box and test fixture.
13. Assembly is complete.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.