


CLAUDEL SOLAR LANTERN

PARTS ENCLOSED

(A) Lantern

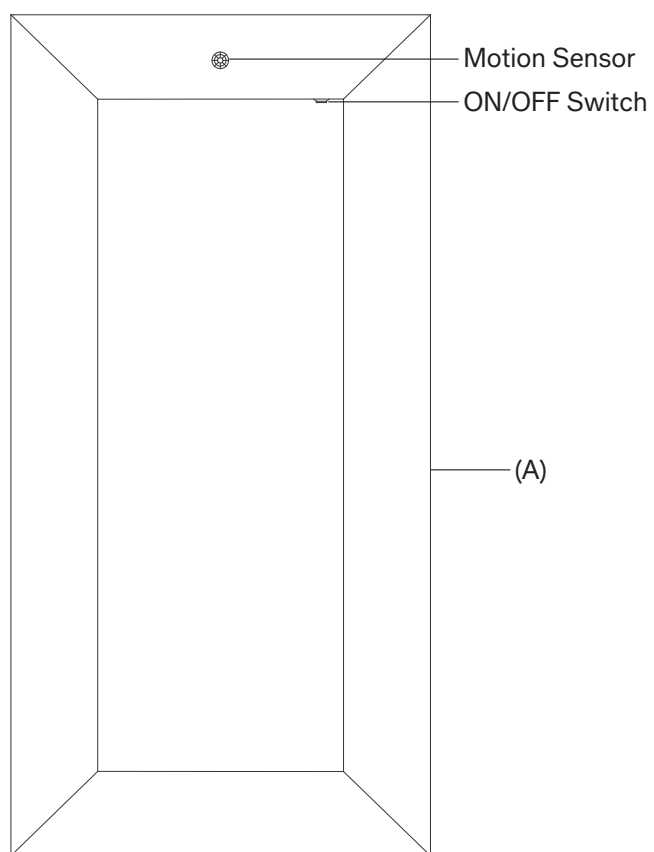

CLAUDEL SOLAR LANTERN

REQUIRES NO TOOLS OR WIRING.**NO RISK OF ELECTROCUTION.**

This lantern can be used as a pathway light to illuminate stairs, as a decorative lantern in your garden or path, or as a portable lantern.

The light source is attached to the frame and cannot be removed.

The light source includes a solar panel, 5 lithium phosphate batteries, 6 LEDs, a motion sensor that detects movement up to 2 meters away, and an ON/OFF switch. The solar panel converts sunlight into electricity and recharges the batteries (batteries are not replaceable). The batteries power the LEDs.

The LEDs generate 10-360 lumens depending on the lantern size.

MANUALLY OPERATING THE ON/OFF SWITCH

A. Press the switch to turn on the light for the first time. Please be aware that the lantern has high, medium, and low levels that are controlled by the ON/OFF switch. You may change the light output by pressing ON/OFF once. Therefore, you will need to press the switch six times to see all three outputs and choose your favorite as the initial brightness of your lantern.

WARNING: The switch is placed below the frame. Please do not mistake the motion sensor located on the front side of the frame for the switch.

Due to the depth of the switch, the button needs to be pressed all the way down until a subtle clicking sound is heard.

B. Leave the lantern turned on; no further adjustments will be needed. The light will automatically turn off during the day and turn on at night. If the lantern won't be used for a long period of time, press the switch again to turn off.

THE MOTION SENSOR FUNCTION

1. When the motion sensor detects movement within 2 meters, the light intensity is at 100%.
2. When movement is more than 2 meters away, the light intensity decreases to 20%.
3. After 4 hours with no movement detected, the light intensity decreases to 10% to conserve battery power.
4. The light comes on ONLY when motion is detected.

TROUBLESHOOTING

If the lamp does not work, the batteries may need to be charged. Place the lantern under the sun for a day or two, depending on your location and the time of the year. Keep the solar panel clean. Do not position the lantern near a sprinkler. The lantern is designed to be weatherproof, but over time, water may get in and damage the electronics and batteries.

NOTE: Even when fully charged, the lantern will only become illuminated when in dark or low-light conditions.

CARE INSTRUCTIONS

Wipe all surfaces with a soft, dry cloth. Do not use any harsh cleaners (including ammonia-based products) or abrasives on the lantern, as they may damage the finish.

Do not leave the lantern outside during snowy or inclement weather conditions.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.