RH

D'OLERON SINGLE SCONCE

ASSEMBLY AND INSTALLATION INSTRUCTIONS **ENGLISH**

D'OLERON SINGLE SCONCE

PARTS INCLUDED

- (A) Plastic Anchors (10)
- (B) Mounting Plate (1)
- (C) Wood Screws (10)
- (D) Fixture Base (1)
- (E) Set Screws (4)
- (F) Screwdriver (1)
- (G) Terminal Block (1)
- (H) Bulb (1)
- (I) Brackets (1)
- (J) Screws (2)
- (K) Shade (1)



IMPORTANT: PLEASE READ

IMPORTANT SAFETY FEATURES

BULBS

This fixture has been rated for up to one (1) 9-watt maximum Type T LED light bulbs. To avoid the risk of fire, do not exceed the recommended wattage.

DIMMER SWITCH COMPATIBILITY

This fixture is dimmer-switch compatible, and may only be used with a forward phase dimmer switch.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.

WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet (91cm) away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

CAUTION:

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar.

DISPOSAL:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

FOR INDOOR USE WARNING

FOR INDOOR USE ONLY

ASSEMBLY AND INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

- 1. Carefully remove all parts from the box and remove all plastic covering.
- 2. Remove mounting plate (B) from base of light fixture (D) by removing set screws (E) using Allen wrench (F).
- 3. Place Mounting Plate (B) on the wall, use it as a template, and mark center points for mounting slots for mounting plate on the wall. Remove mounting plate (B).
- 4. Drill small holes on the marked location, the holes should be big enough to accommodate with Plastic Anchor (A). Push Plastic Anchors (A) into the holes.
- 5. Affix mounting plate (B) to wall outlet box; insert wood screws (C) to plastic anchors (A) to secure mounting (B) to the wall.
- 6. Open Terminal Block (G) to prepare for installation of electrical wires.
- 7. Connect fixture ground (green) and supply ground (usually green or yellow) to Terminal Block (G) and secure with screws.

NOTE: It is imperative that the fixture is grounded.

- 8. Connect neutral wires (blue) to terminal block (G) and secure with screws.
- 9. Connect hot wires (brown) to Terminal Block (G) and secure with screws. Close terminal block (G).

CAUTION: Do not reverse the hot and neutral connections.

- 10. Attach Fixture Base (D) to the affixed Mounting Plate (B) and secure with Screws (E) using Allen wrench (F).
- 11. Insert the recommended bulb (H) into the socket.
- 12. Remove Screws (J) from Lamp Base (D). Insert Shade (K) into the slot on the Bracket (I). the attach the Bracket with Shade to Lamp Base (D) by aligning the holes on the Bracket (I) with the two holes on Lamp Base (D). Secure by inserting Screws (J) into the holes. Tighten with a screwdriver.
- 13. Restore power to outlet box and check operation of fixture.
- 14. Assembly is complete.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.