
GALLERY PICTURE LIGHT 12"

PARTS ENCLOSED

- (A) Metal Anchors (2)
- (B) Mounting Screws (2)
- (C) Base Plate (1)
- (D) Arm Adjustment Key (1)
- (E) Shade Adjustment Key (1)
- (F) Bulb (1)

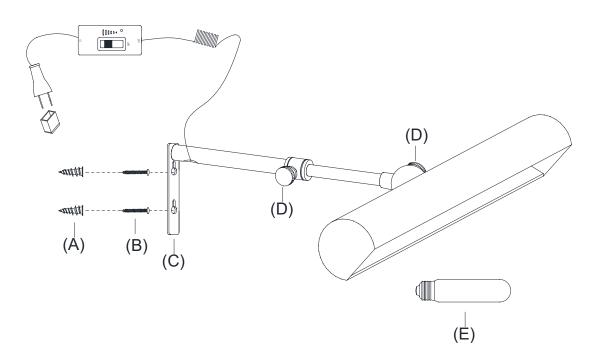



GALLERY PICTURE LIGHT 12"

IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for up to one (1) 25-watt maximum Type T lightbulb (included) or one (1) 9-watt compact fluorescent lightbulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.

WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

ASSEMBLY & INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

- Carefully remove all parts from the box and remove all plastic coverings. Do not discard the outer carton.
- 2. Place Base Plate (C) on the wall at desired height. Use a level to make sure Base Plate (C) is vertical.
- 3. Using a pencil, make a mark in the top center of each keyhole.

ASSEMBLY & INSTALLATION CONT.

- 4. Drill 1/8" holes into your pencil marks on the wall. For each hole:
 - If you encounter a wall stud, then drive a Mounting Screw
 (B) into the hole with a Phillips screwdriver.
 - If you don't encounter a wall stud, drive a Metal Anchor

 (A) into the hole using a Phillips screwdriver. Once
 Metal Anchor (A) is flush with the wall surface, drive
 Mounting Screw (B) into Metal Anchor (A) using a Phillips screwdriver.
 - In both cases, leave approximately 1/8" of screw threads exposed.
- Hook Base Plate (C) onto Mounting Screws (B). If Base Plate
 (C) is not snug against the wall, remove it, tighten each screw at a quarter turn and replace Base Plate (C). Repeat until snug.
- 6. Insert Bulb (F) into the socket.
- 7. Plug into proper electrical outlet and test fixture.
- 8. Assembly is complete.

ADJUSTMENT INSTRUCTIONS

- Loosen Arm Adjustment Key (D) and Shade Adjustment Key (E) found on stem.
- 2. Adjust lamp arm and shade to desired height and position.
- 3. Tighten Arm Adjustment Key (D) and Shade Adjustment Key (E) to secure in place.


CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.

GALLERY PICTURE LIGHT 18"

PARTS ENCLOSED

- (A) Metal Anchors (2)
- (B) Mounting Screws (2)
- (C) Base Plate (1)
- (D) Adjustment Keys (2)
- (E) Bulbs (2)

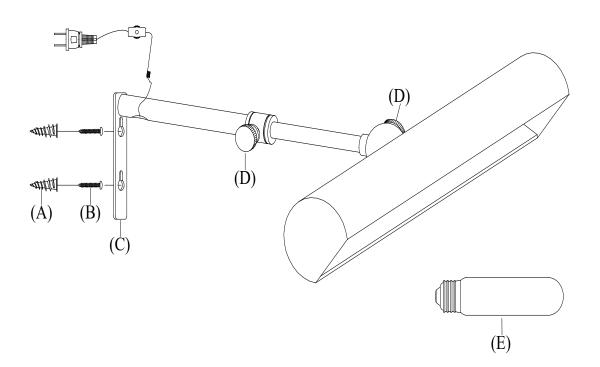



GALLERY PICTURE LIGHT 18"

IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

This fixture has been rated for up to two (2) 25-watt maximum Type T lightbulbs (included) or two (2) 9-watt compact fluorescent lightbulbs (not included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.

WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS PRODUCT IS NOT A TOY AND THE NO PLAY VALUE.



Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

ASSEMBLY & INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

- Carefully remove all parts from the box and remove all plastic coverings. Do not discard the outer carton.
- Place both Base Plates (C) on the wall at the desired height.
 Use a level to make sure Base Plates (C) are both vertically and horizontally leveled.
- 3. Using a pencil, make a mark in the top center of each keyhole.
- 4. Drill 1/8" holes into your pencil marks on the wall. For each hole:
- If you encounter a wall stud, drive a Mounting Screw (B) into the hole using a Phillips screwdriver (not included).
- If you do not encounter a wall stud, drive a Metal Anchor (A)
 into the hole using a Phillips screwdriver. Once Metal Anchor (A)
 is flush with the wall surface, drive a Mounting Screw (B) into
 Metal Anchor (A) using a Phillips screwdriver.
- In both cases, leave approximately 1/8" of screw threads exposed.
- Hook Base Plates (C) onto Mounting Screws (B). If Base Plates
 (C) are not snug against the wall, remove them and tighten each of Mounting Screws (B) in a ¼ turn, then replace Base Plates
 (C). Repeat until snug.
- 6. Insert Bulbs (E) into each of the sockets.
- 7. Plug into proper electrical outlet and test fixture.
- 8. Assembly is complete.

HEIGHT ADJUSTMENT

- 1. Loosen Adjustment Keys (D) found on the arms.
- Adjust the lamp arms and shade to the desired height and position.
- 3. Tighten Adjustment Keys (D) into place.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.