


CRATE STORAGE

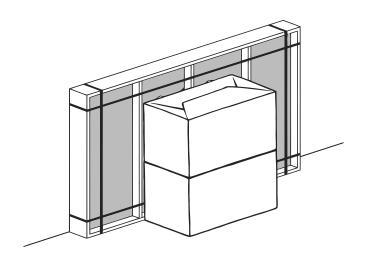


- Keep Stone Top in its crate until installation
- Store crate vertically in a safe location

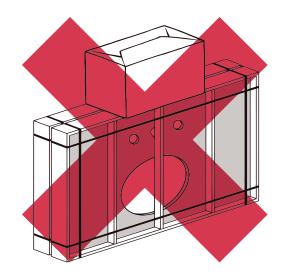

• Do not stack anything on top of crate

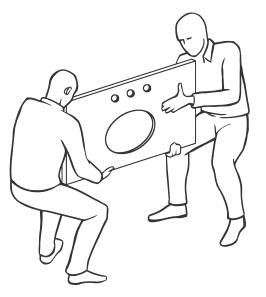


- When moving Stone Top always use a two-person crew.
- Always carry Stone Top vertically.

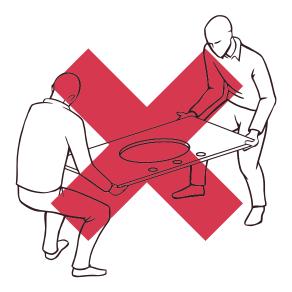


• Do not carry Stone Top horizontally as it increases the risk of breakage or cracking.

STONE TOP TRANSPORT

STONE TOP UNPACKING

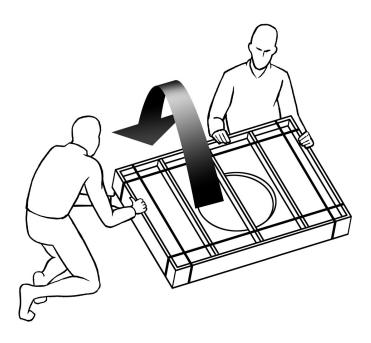


• Carefully, without allowing any freefall, rotate the crate from vertical to flat.

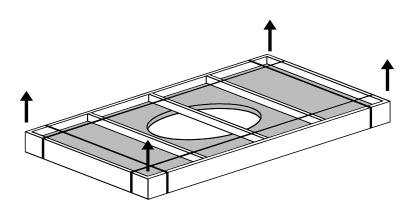

• Remove metal bands, unscrew the slats or lid, and lift the Stone Top out of the crate.

PARTS LIST

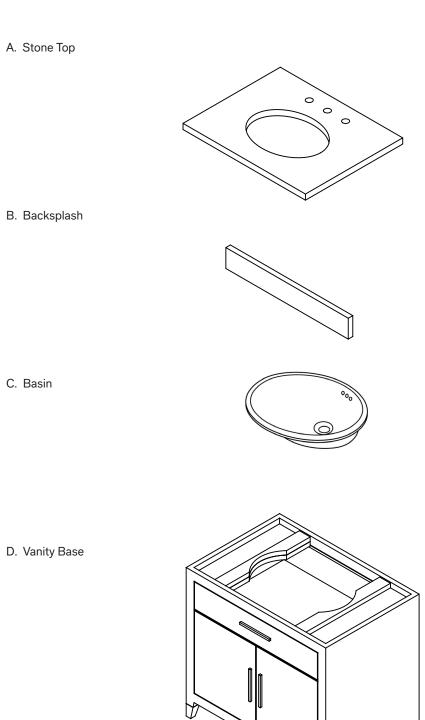

3 of 8

STONE TOP INSPECTION

• Before you begin, inspect the Stone Top for cracks and defects. If defects are detected, do not install and please call 800-762-1005. If no defects are detected, clean Stone Top with a soft cloth.

TOOL AND MATERIAL REQUIREMENTS


- Flat, non-abrasive work surface (blanket or smooth cardboard)
- Sealant
- Carpenter's level

PRIMARY INSTALLATION REQUIREMENTS

- Professional two-person crew
- Water supply and drain piping installed according to local plumbing and building codes (sold separately)
- Wall and floor are square and plumb at installation site
- Vanity Base [D] installed square and plumb with wall and floor. Vanity Base [D] also needs to be level
- Ensure Stone Top [A] is the correct size to match the Vanity Base [D]


BACK PANEL REMOVAL

• Remove screws and back panels. Back panels can be discarded or reattached with cutouts to accomodate plumbing

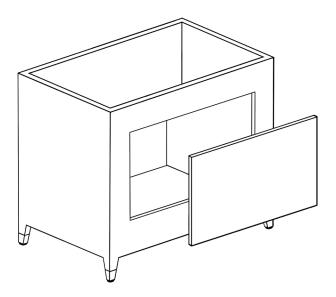

BASIN INSTALLATION

- 1. Position Basin [C] on cradles on base, if necessary, trim foam support to ensure proper fit. Basin should sit even with the top of the Vanity Base.
- 2. Apply a continuous bead of silicone sealant to the top surface of Basin [C] rim where it comes in contact with underside of the Stone Top [A].

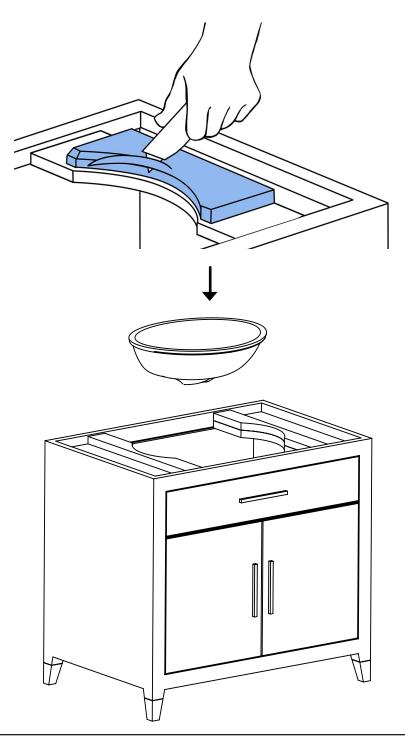

STONE TOP INSTALLATION




Caution! Installation between two walls requires special care. If Installing between two walls, stop here and follow the second set of instructions.

STANDARD STONE TOP INSTALLATION GUIDELINES

- 1. Using a two-person crew, lift Stone Top and set it on top of the Vanity Base [D].
- 2. Apply Silicone sealant at the seam where Backsplash [B] meets the wall.

STONE TOP INSTALLATION BETWEEN TWO WALLS


- 1. Using a two-person crew, lift Stone Top and set its rear edge on the back of the Vanity Base [D] (closest to the rear wall). See below illustration.
- 2. Lower front of Stone Top onto the Vanity Base, making sure both ends are lowered at the same rate.
- 3. Do not shimmy, twist or turn the Stone Top while lowering as this increases the risk of breakage.
- 4. Apply Silicone sealant at the seam where Backsplash [B] meets the wall.

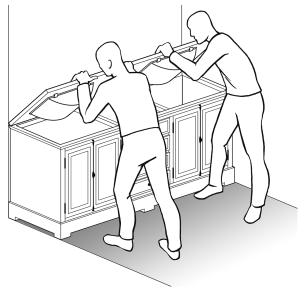


CLEANING AND MAINTENANCE

- Avoid abrasive and harsh chemical cleaners.
- RH Stone Tops have a honed finish, hand-polished edges, and are sealed twice with inert silicone sealant.
- Stone Tops should be re-sealed annually.




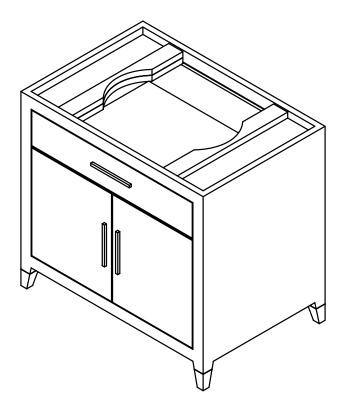


VANITY DIMENSIONS IN MILLIMETERS

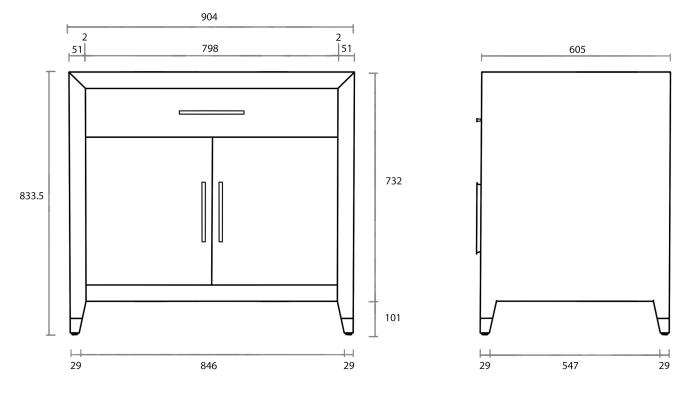

STONE TOP

 

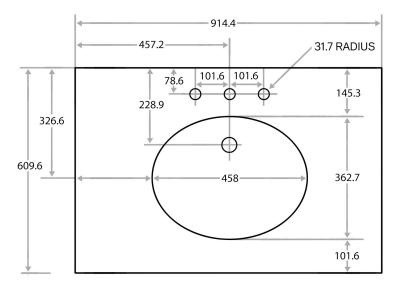

OVAL BASIN IN INCHES

