

RH

LEVI TASK FLOOR LAMP COLLECTION

ASSEMBLY & INSTALLATION INSTRUCTIONS

**UNITED STATES ENGLISH**


**LEVI TASK FLOOR LAMP**

**PARTS INCLUDED**

- (A) Power Cord (1)
- (B) Lamp Base (1)
- (C) Exposed Threaded Pipe (1)
- (D) Washer (1)
- (E) Hex Nut (1)
- (F) Lower Stem (1)
- (G) Upper Stem (1)
- (H) Lamp Body (1)
- (I) Diffuser (1)
- (J) Disc Finial (1)
- (K) G9 LED Bulb (3)
- (L) Rotary Dimmer Switch (1)

**TOOLS NEEDED  
(IF APPLICABLE)**

- (M) Open Wrench (1)

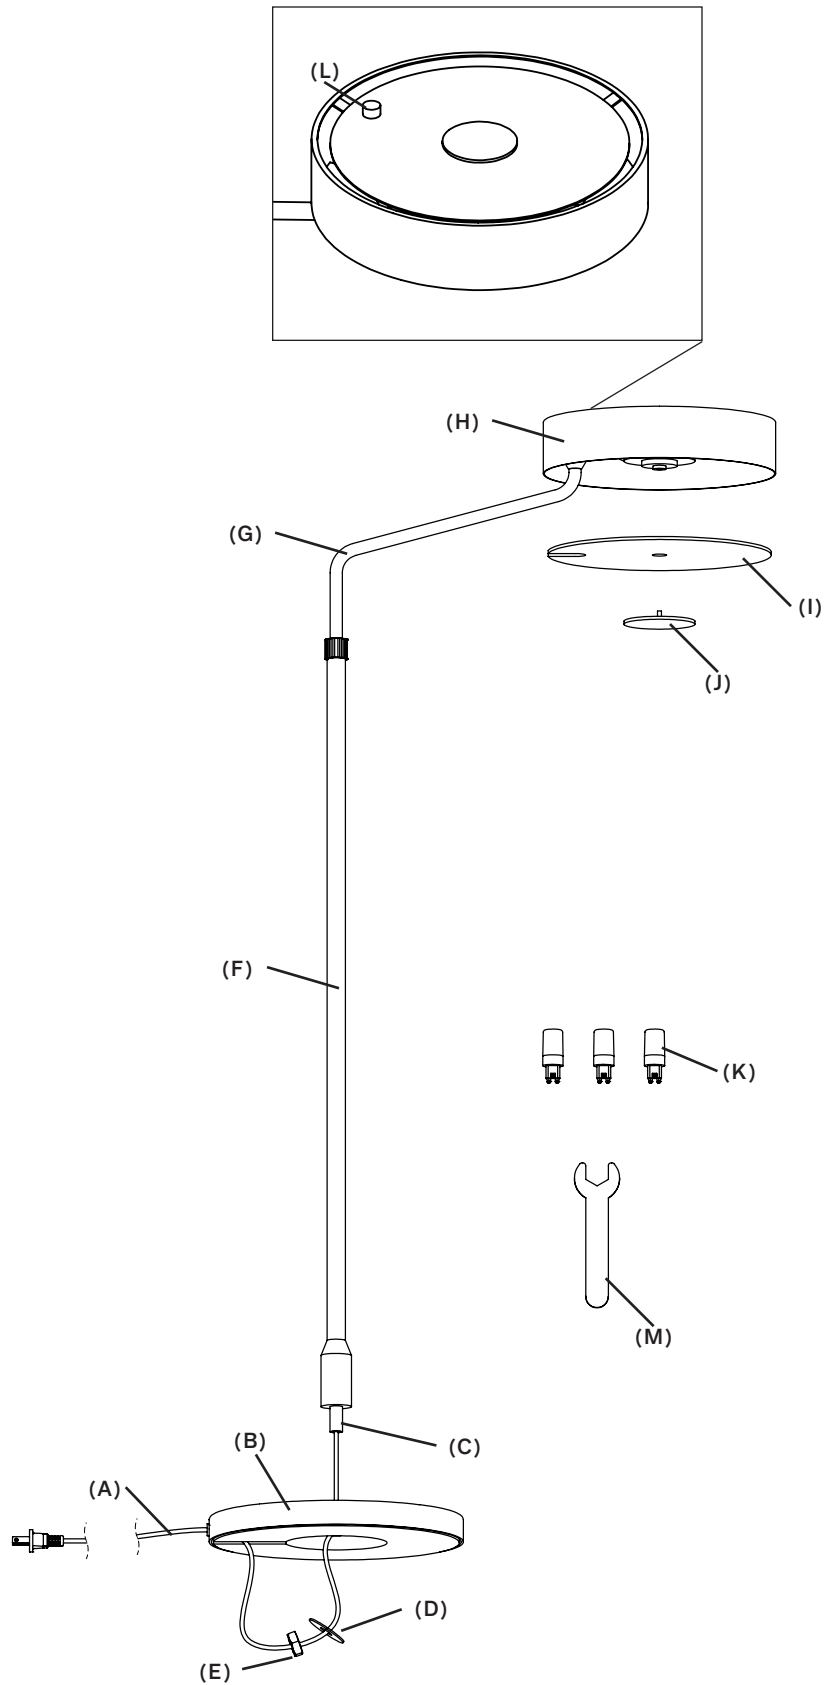

**IMPORTANT: PLEASE READ**

**PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE.**

**IMPORTANT SAFETY FEATURES****BULBS**

This fixture has been rated for up to three (3) 6-watt maximum LED lightbulbs. To avoid the risk of fire, do not exceed the recommended wattage.

**DIMMER-SWITCH COMPATIBILITY**

This fixture is not dimmer-switch compatible.

**WARNINGS**

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.

**WARNING STRANGULATION HAZARD**

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

**THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.**

**ASSEMBLY AND INSTALLATION**

1. Feed the power cord (A) through the hole in the lamp base (B) until the exposed threaded pipe (C) is able to enter the lamp base (B). Feed excess cord through the bushing in the side of the lamp base (B) before proceeding.
2. Slide the washer (D) over the exposed threaded pipe. Screw on the hex nut (E) and tighten with the included open wrench (M).
3. Insert the three G9 LED bulbs (K) into the sockets in the lamp body (H).
4. Align the diffuser (I) with the bottom of the lamp body (H) and attach by screwing in the disc finial (J).
5. This fixture allows height adjustment and rotation of the upper stem (G) by loosening and tightening the clutch at the top of the lower stem (F). It also allows rotation of the lamp body (H) where it meets the upper stem (G).
6. Insert plug into wall outlet to power the fixture. Rotary dimmer switch (L) is located on the top surface of the lamp body (H). For best dimming performance, turn the switch up to full brightness before dimming down to the desired level.

**CARE INSTRUCTIONS**

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.