

LIBRARY GRAND PICTURE LIGHT 18"


ASSEMBLY & INSTALLATION INSTRUCTIONS ENGLISH



LIBRARY GRAND PICTURE LIGHT 18"

PARTS INCLUDED

- (A) Mounting Plate (1)
- (B) Mounting Screws (2)
- (C) Base Screws (4)
- (D) Fixture Base (1)
- (E) Bulbs (2)
- (F) Wire Nuts (3)
- (G) Wood Screws (2)
- (H) Metal Anchors (2)

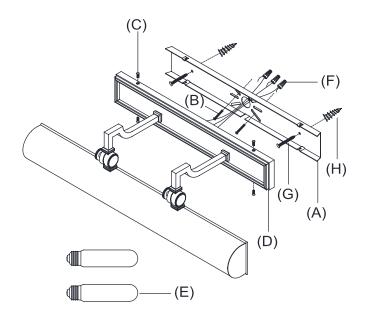



IMPORTANT: PLEASE READ

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR MOUNTING DIRECTLY TO A JUNCTION BOX. UNIQUE OR ALTERNATIVE INSTALLATION METHODS MAY REQUIRE DIFFERENT MOUNTING HARDWARE, WHICH HAS NOT BEEN INCLUDED. ALWAYS CONSULT WITH A LICENSED ELECTRICIAN BEFORE INSTALLATION.

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

IMPORTANT SAFETY FEATURES

BULBS

This fixture has been rated for up to two (2) 40-watt maximum Type T incandescent lightbulbs or two (2) 6.5-watt SBLED lightbulbs. To avoid the risk of fire, do not exceed the recommended wattage.

VAULTED CEILING COMPATIBILITY

This fixture is vaulted-ceiling compatible, up to a maximum ceiling slope of 20 degrees.

DIMMER SWITCH COMPATIBILITY

This fixture is dimmer-switch compatible, and may only be used with a forward-phase dimmer switch.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulbs. Do not touch or look directly at the bulbs when fixture is illuminated. Keep flammable materials away from lit bulbs.

WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

ASSEMBLY AND INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

- Carefully remove all parts from the box and remove all plastic coverings.
- 2. Remove Mounting Plate (A) from Fixture Base (D) by loosening Base Screws (C).
- 3. Use Mounting Plate (A) as a guide. Line up with the wall junction box and mark anchor positions.
- Using a drill bit slightly smaller than the anchor, drill holes in the marked positions. Install Metal Anchors (H) into the holes using a hammer.
- Install Mounting Plate (A) to the wall junction box and secure Wood Screws (G) to Metal Anchors (H) to secure Mounting Plate (A) to the wall.
- 6. Wrap fixture ground wire (bare copper) around the green grounding screw and tighten. Continue feeding fixture ground wire and connect to supply ground wire (usually green or bare copper) using a Wire Nut (F). NOTE: It is imperative that the fixture is grounded.
- 7. Connect fixture neutral wire (white) to the supply neutral wire (usually white) using a Wire Nut (F).
- Connect fixture hot wire (black) to the supply hot wire (usually black) using a Wire Nut (F). CAUTION: Do not reverse the hot and neutral connections.
- Make sure all wire connections are tight, then carefully tuck wires into the junction box.
- 10. Install Fixture Base (D) to Mounting Plate (A) and secure with Base Screws (C).
- 11. Install Bulbs (E) into each of the sockets.
- 12. Installation is complete. Turn on power at fuse or circuit breaker.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.

REVISION 05-17-24 RH.COM



LIBRARY GRAND PICTURE LIGHT 24"


ASSEMBLY & INSTALLATION INSTRUCTIONS ENGLISH



LIBRARY GRAND PICTURE LIGHT 24"

PARTS INCLUDED

- (A) Mounting Plate (1)
- (B) Mounting Screws (2)
- (C) Base Screws (4)
- (D) Fixture Base (1)
- (E) Bulbs (2)
- (F) Wire Nuts (3)
- (G) Wood Screws (2)
- (H) Metal Anchors (2)

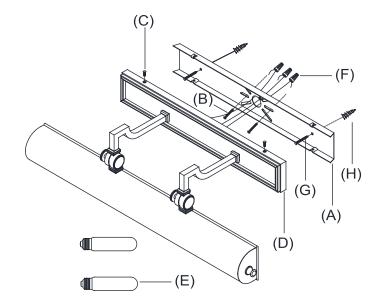



IMPORTANT: PLEASE READ

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR MOUNTING DIRECTLY TO A JUNCTION BOX. UNIQUE OR ALTERNATIVE INSTALLATION METHODS MAY REQUIRE DIFFERENT MOUNTING HARDWARE, WHICH HAS NOT BEEN INCLUDED. ALWAYS CONSULT WITH A LICENSED ELECTRICIAN BEFORE INSTALLATION.

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

IMPORTANT SAFETY FEATURES

BULBS

This fixture has been rated for up to two (2) 40-watt maximum Type T incandescent lightbulbs or two (2) 6.5-watt SBLED lightbulbs. To avoid the risk of fire, do not exceed the recommended wattage.

VAULTED CEILING COMPATIBILITY

This fixture is vaulted-ceiling compatible, up to a maximum ceiling slope of 20 degrees.

DIMMER SWITCH COMPATIBILITY

This fixture is dimmer-switch compatible, and may only be used with a forward-phase dimmer switch.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulbs. Do not touch or look directly at the bulbs when fixture is illuminated. Keep flammable materials away from lit bulbs.

WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

ASSEMBLY AND INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

- Carefully remove all parts from the box and remove all plastic coverings.
- 2. Remove Mounting Plate (A) from Fixture Base (D) by loosening Base Screws (C).
- 3. Use Mounting Plate (A) as a guide. Line up with the wall junction box and mark anchor positions.
- Using a drill bit slightly smaller than the anchor, drill holes in the marked positions. Install Metal Anchors (H) into the holes using a hammer.
- Install Mounting Plate (A) to the wall junction box and secure Wood Screws (G) to Metal Anchors (H) to secure Mounting Plate (A) to the wall.
- 6. Wrap fixture ground wire (bare copper) around the green grounding screw and tighten. Continue feeding fixture ground wire and connect to supply ground wire (usually green or bare copper) using a Wire Nut (F). NOTE: It is imperative that the fixture is grounded.
- 7. Connect fixture neutral wire (white) to the supply neutral wire (usually white) using a Wire Nut (F).
- Connect fixture hot wire (black) to the supply hot wire (usually black) using a Wire Nut (F). CAUTION: Do not reverse the hot and neutral connections.
- Make sure all wire connections are tight, then carefully tuck wires into the junction box.
- 10. Install Fixture Base (D) to Mounting Plate (A) and secure with Base Screws (C).
- 11. Install Bulbs (E) into each of the sockets.
- 12. Installation is complete. Turn on power at fuse or circuit breaker.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.

REVISION 05-17-24 RH.COM



LIBRARY GRAND PICTURE LIGHT 30"


ASSEMBLY & INSTALLATION INSTRUCTIONS ENGLISH



LIBRARY GRAND PICTURE LIGHT 30"

PARTS INCLUDED

- (A) Mounting Plate (1)
- (B) Mounting Screws (2)
- (C) Base Screws (4)
- (D) Fixture Base (1)
- (E) Bulbs (2)
- (F) Wire Nuts (3)
- (G) Wood Screws (2)
- (H) Metal Anchors (2)

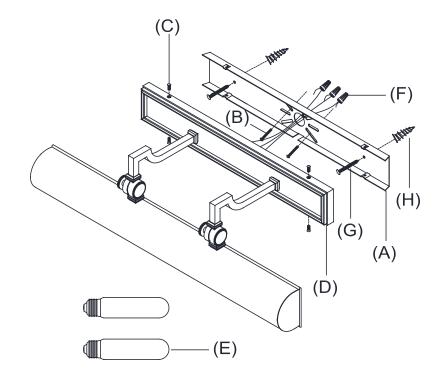



IMPORTANT: PLEASE READ

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR MOUNTING DIRECTLY TO A JUNCTION BOX. UNIQUE OR ALTERNATIVE INSTALLATION METHODS MAY REQUIRE DIFFERENT MOUNTING HARDWARE, WHICH HAS NOT BEEN INCLUDED. ALWAYS CONSULT WITH A LICENSED ELECTRICIAN BEFORE INSTALLATION.

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

IMPORTANT SAFETY FEATURES

BULBS

This fixture has been rated for up to two (2) 40-watt maximum Type T incandescent lightbulbs or two (2) 6.5-watt SBLED lightbulbs. To avoid the risk of fire, do not exceed the recommended wattage.

VAULTED CEILING COMPATIBILITY

This fixture is vaulted-ceiling compatible, up to a maximum ceiling slope of 20 degrees.

DIMMER SWITCH COMPATIBILITY

This fixture is dimmer-switch compatible, and may only be used with a forward-phase dimmer switch.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulbs. Do not touch or look directly at the bulbs when fixture is illuminated. Keep flammable materials away from lit bulbs.

WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

ASSEMBLY AND INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

- Carefully remove all parts from the box and remove all plastic coverings.
- 2. Remove Mounting Plate (A) from Fixture Base (D) by loosening Base Screws (C).
- 3. Use Mounting Plate (A) as a guide. Line up with the wall junction box and mark anchor positions.
- Using a drill bit slightly smaller than the anchor, drill holes in the marked positions. Install Metal Anchors (H) into the holes using a hammer.
- Install Mounting Plate (A) to the wall junction box and secure Wood Screws (G) to Metal Anchors (H) to secure Mounting Plate (A) to the wall.
- 6. Wrap fixture ground wire (bare copper) around the green grounding screw and tighten. Continue feeding fixture ground wire and connect to supply ground wire (usually green or bare copper) using a Wire Nut (F). NOTE: It is imperative that the fixture is grounded.
- 7. Connect fixture neutral wire (white) to the supply neutral wire (usually white) using a Wire Nut (F).
- Connect fixture hot wire (black) to the supply hot wire (usually black) using a Wire Nut (F). CAUTION: Do not reverse the hot and neutral connections.
- Make sure all wire connections are tight, then carefully tuck wires into the junction box.
- 10. Install Fixture Base (D) to Mounting Plate (A) and secure with Base Screws (C).
- 11. Install Bulbs (E) into each of the sockets.
- 12. Installation is complete. Turn on power at fuse or circuit breaker.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.

REVISION 05-17-24 RH.COM