


## ORBITER II™ WALL LAMP

### PARTS ENCLOSED

- (A) Wall Bracket (1)
- (B) Wall Bracket Screws (2)
- (C) Straight Arm (1)
- (D) Yoke (1)
- (E) Curved Arm (1)
- (F) Large Knurled Knob (1)
- (G) Small Allen Wrench (1)
- (H) Cord (1)
- (I) Small Knurled Knob (1)
- (J) Bulb (1)
- (K) Shade (1)
- (L) Dimmer Switch (1)

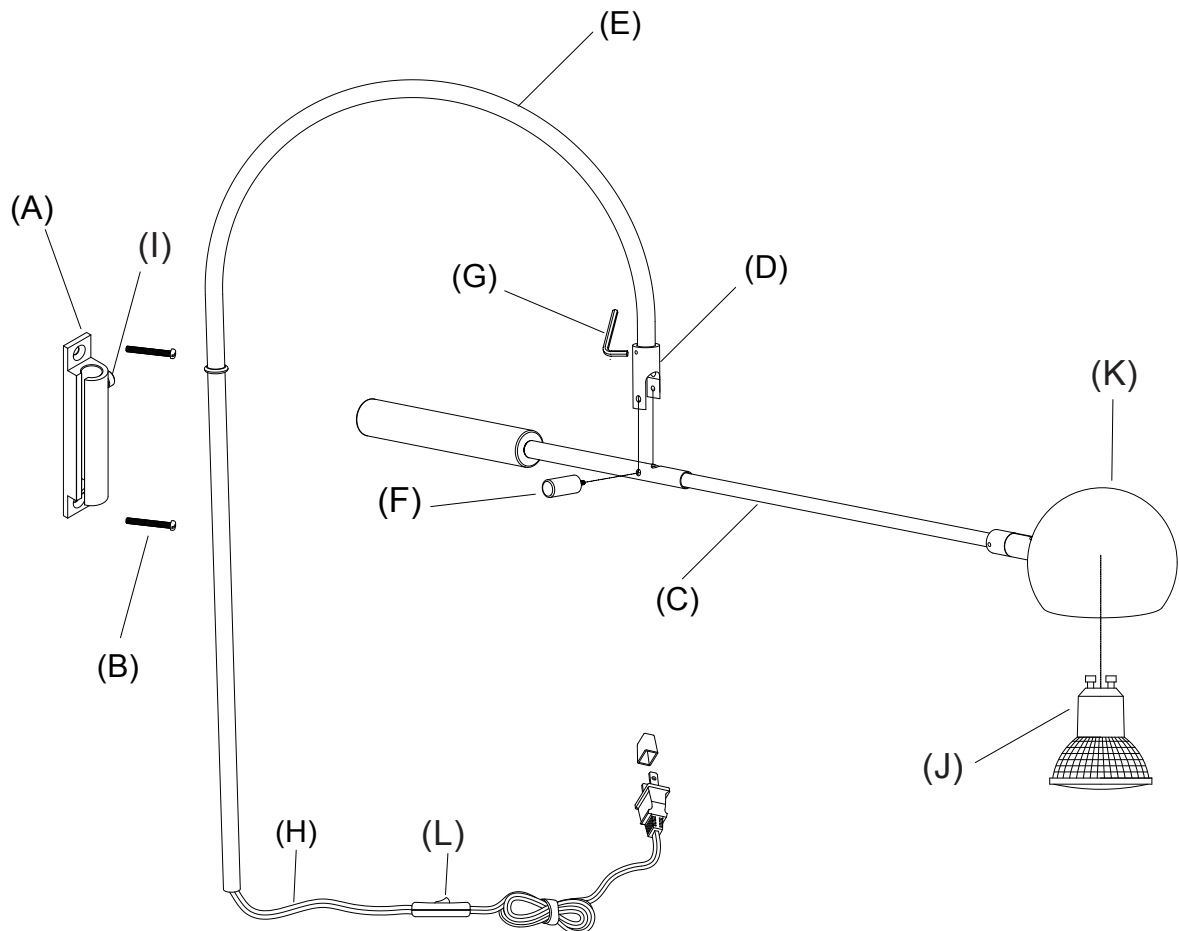



## ORBITER II™ WALL LAMP

### IMPORTANT SAFETY INSTRUCTIONS

For safety purposes, this lamp is equipped with a polarized plug. If the plug does not fit securely into the outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

Always disconnect the power before installing or replacing bulbs and before cleaning or other maintenance. This fixture has been rated for up to one (1) 9-watt GU10-base MR16 LED bulb. To avoid the risk of fire, do not exceed the recommended wattage.

### WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch the bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

### WARNING: Strangulation Hazard

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

### ASSEMBLY & INSTALLATION

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Attach wall bracket (A) to the wall with screws (B).
3. Insert straight arm (C) into yoke (D) on curved arm (E) and secure with large knurled knob (F). Yoke can be adjusted by tightening or loosening the set screw on the yoke using the small Allen wrench (G).
4. Slip cord (H) into slot in wall bracket, then slide lamp arm assembly into wall bracket.
5. Angle of arms can be adjusted and locked by tightening the small knurled knob (I) and large knurled knob (F).  
NOTE: This lamp does not have adjustable height. Adjusting the arms while the knurled knobs are tightened, or tightening the knobs while the lamp arm is in a raised position, can cause damage to the finish.
6. Install (1) bulb (J) into the shade (K) by inserting the pins on the bulb into the socket and twisting clockwise to lock.
7. Insert plug into wall outlet to power the fixture. Dimmer switch (L) is located on the cord. For best dimming performance, turn the switch up to full brightness, before dimming down to the desired level.

### CARE INSTRUCTIONS

Do not use polishes or cleaners on your lamp. Just wipe clean with a soft cloth. Please note that the Lacquered Burnished Brass finish is a hand-rubbed patina finish, and natural variation will occur with wear.