 


PARTS ENCLOSED

- (A) Metal Anchors (8)
- (B) Mounting Plate (1)
- (C) Mounting Screws (2)
- (D) Wood Screws (8)
- (E) Lamp Base (1)
- (F) Set Screws (4)
- (G) Screwdriver (1)
- (H) Bulb (1)
- (I) Shade (1)
- (J) Thumbscrews (4)
- (K) Rods (4)
- (L) Screws (4)
- (M) Lock Washers (4)
- (N) Washers (4)

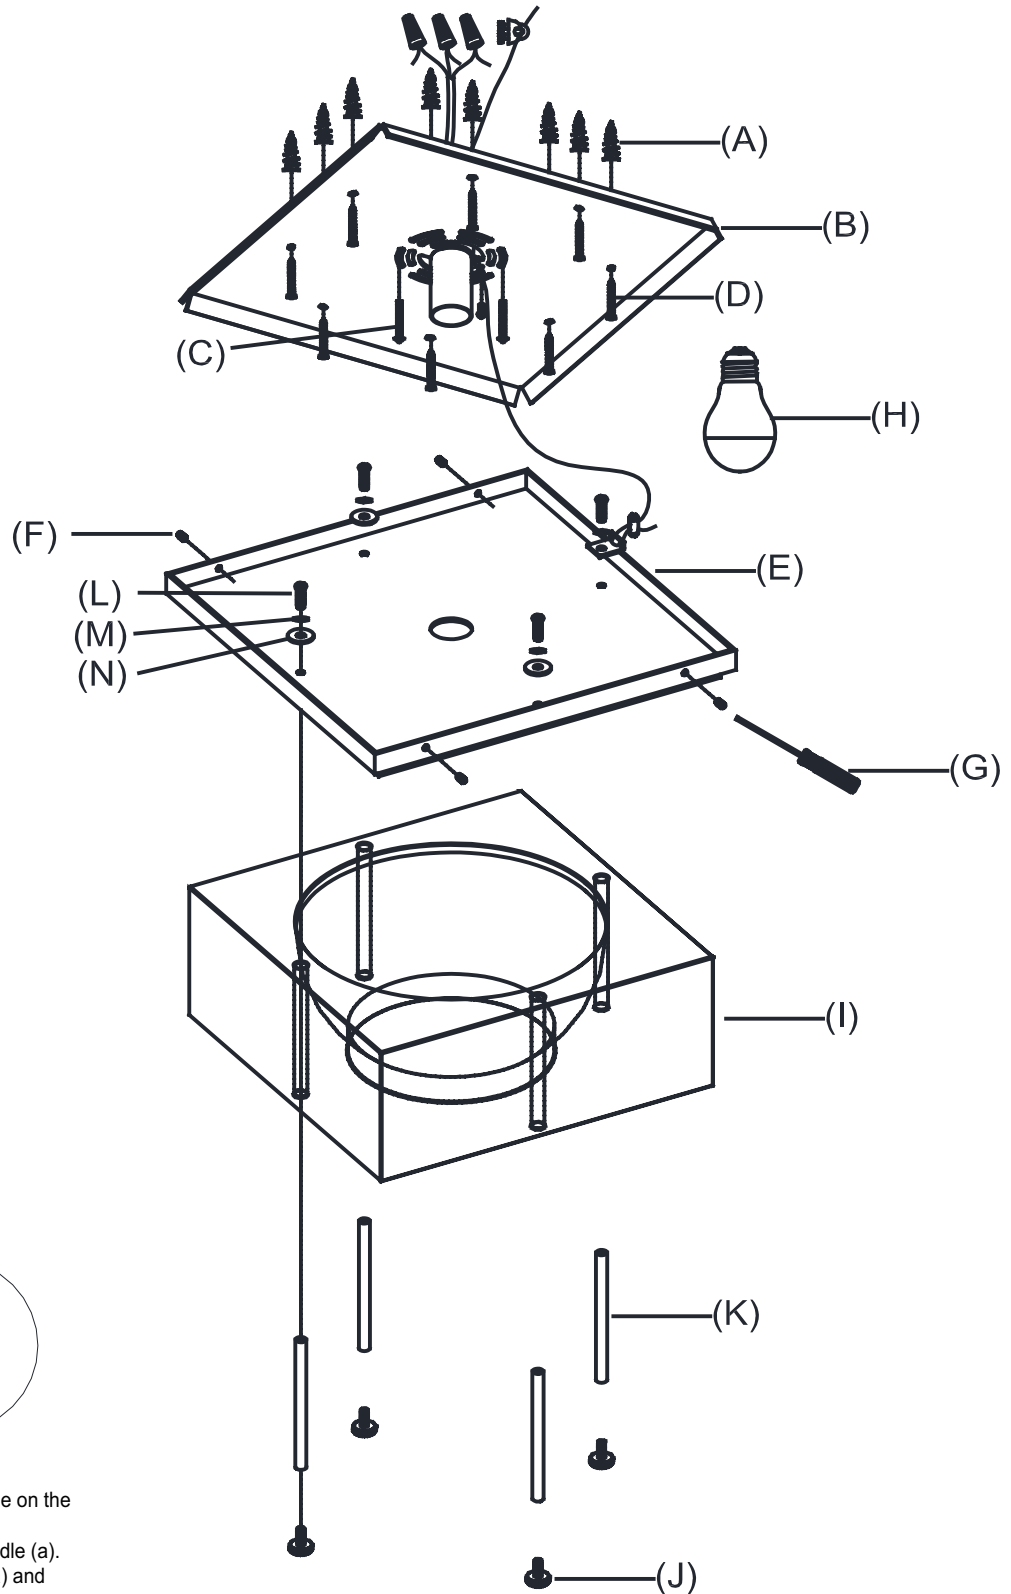

Install safety cable:

1. Wrap the safety cable into the slot hole on the mounting plate.
2. Wrap the safety cable around the saddle (a).
3. Insert U-bolt clip (b) into the saddle (a) and secure with the nuts (c).

IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for one (1) 60-watt maximum Type A lightbulb, one (1) 13-watt compact fluorescent lightbulb or one (1) 4.5-watt SBLed lightbulb. To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

ASSEMBLY & INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Remove Mounting Plate (B) from Lamp Base (E) by unscrewing Set Screw (F) using Screwdriver (G).
3. Place Mounting Plate (B) at desired location on the ceiling. Mark center point locations for four hanging holes with a pencil. Remove Mounting Plate (B).

ASSEMBLY & INSTALLATION CONT.

4. Drill small holes on each point location on the ceiling, each hole should be large enough to accommodate Metal Anchors (A). Push Metal Anchors (A) into the holes on the ceiling.
5. Attach Mounting Plate (B) to the ceiling outlet box by aligning the holes and secure by inserting Wood Screws (D) to Metal Anchors (A) and Mounting Screws (C) to the ceiling outlet box.
6. Install Lamp Base (E) to Shade (I) by aligning the holes. Insert Rods (K) to the holes and secure Thumbscrews (J) to the bottom of Shade (I), and secure Lock Washers (M), Washers (N) and Screws (L) to the top of Lamp Base (E).
7. Connect the safety steel wire from the fixture and the safety cable from the ceiling. Refer to the illustration on previous page.
8. Attach the fixture ground wire (green) to the ground wire from the outlet box (usually green) with a metal wire connector and wrap the connection with electrical tape.
9. Connect the hot wire (black) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape.
10. Connect the neutral wire (white) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
11. Insert Bulb (H) into the socket.
12. Attach Lamp Base (E) to the affixed Mounting Plate (B) and secure with Set Screws (F). Tighten using Screwdriver (G).
13. Restore power to outlet box and check operation of fixture.
14. Assembly is complete.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.

 


SAVILE SQUARE FLUSHMOUNT 12"
ASSEMBLY & INSTALLATION INSTRUCTIONS
ENGLISH

SAVILE SQUARE FLUSHMOUNT 12"

PARTS INCLUDED

- (A) Metal Anchors (8)
- (B) Mounting Plate (1)
- (C) Mounting Screws (2)
- (D) Wood Screws (8)
- (E) Fixture Base (1)
- (F) Set Screws (4)
- (G) Screwdriver (1)
- (H) Bulb (1)
- (I) Shade (1)
- (J) Thumbscrews (4)
- (K) Rods (4)
- (L) Screws (4)
- (M) Lock Washers (4)
- (N) Washers (4)

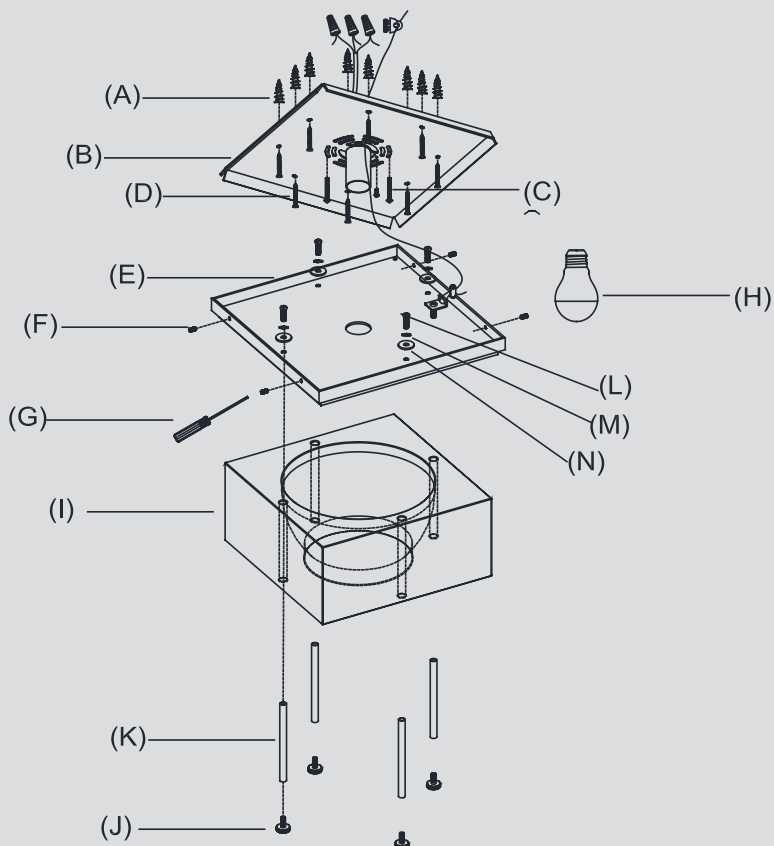

IMPORTANT: PLEASE READ

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR MOUNTING DIRECTLY TO A JUNCTION BOX. UNIQUE OR ALTERNATIVE INSTALLATION METHODS MAY REQUIRE DIFFERENT MOUNTING HARDWARE, WHICH HAS NOT BEEN PROVIDED. ALWAYS CONSULT WITH A LICENSED ELECTRICIAN BEFORE INSTALLATION.

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

IMPORTANT SAFETY FEATURES**BULBS**

This fixture has been rated for up to one (1) 60-watt maximum Type A incandescent light bulb, one (1) 13-watt maximum compact fluorescent lightbulb, or one (1) 4.5-watt SBLED lightbulb. To avoid the risk of fire, do not exceed the recommended wattage.

VAULTED-CEILING COMPATIBILITY

This fixture is vaulted-ceiling compatible, up to a maximum ceiling slope of 20 degrees.

DIMMER-SWITCH COMPATIBILITY

This fixture is dimmer-switch compatible, and may only be used with a forward-phase dimmer switch.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

 
WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

INSTALLING THE SAFETY CABLE:

1. Run safety cable through the junction box and around a structural member of the building.
2. Wrap the safety cable around the saddle (a), and secure with u-bolt (b) and hex nuts (c).

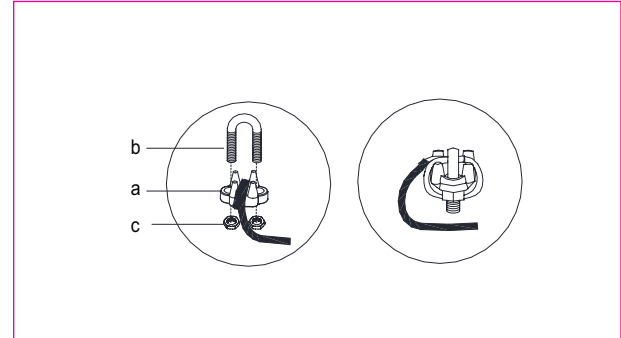

ASSEMBLY AND INSTALLATION

**SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM
THE FUSE BOX OR CIRCUIT BREAKER PANEL.**

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Remove Mounting Plate (B) from Fixture Base (E) by unscrewing Set Screws (F) using Screwdriver (G).
3. Place Mounting Plate (B) at desired location on the ceiling. On the ceiling, mark center point locations for four hanging holes with a pencil. Remove Mounting Plate (B).
4. Drill small holes into each point location on the ceiling. Each hole should be large enough to accommodate the Metal Anchors (A). Push Metal Anchors (A) into the holes on the ceiling.
5. Attach Mounting Plate (B) to the ceiling outlet by aligning the holes and secure by inserting Wood Screws (D) into the Metal Anchors (A) and Mounting Screws (C) into the ceiling outlet box.
6. Install Fixture Base (E) to Shade (I) by aligning the holes. Insert rods (K) into the holes and secure Thumbscrews (J) to the bottom of Shade (I). Secure Lock Washers (M), Washers (N), and Screws (L) to the top of Fixture Base (E).
7. Connect the safety steel wire from the fixture and the safety cable from ceiling. Refer to the illustration.
8. Attach the fixture ground wire (green) to the ground wire from the outlet box (usually green) with a metal wire connector and wrap the connection with electrical tape.
9. Connect the hot wire (black wire) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape.
10. Connect the neutral wire (white wire) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
11. Insert Bulb (H) (included) into the socket.
12. Attach Fixture Base (E) to the affixed Mounting Plate (B) and secure with Set Screws (F). Tighten with the Screwdriver (G).
13. Restore power to outlet box and test operation of fixture.
14. Assembly is complete.

 
 
CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.

SAVILE SQUARE FLUSHMOUNT 14"

PARTS ENCLOSED

- (A) Metal Anchors (8)
- (B) Mounting Plate (1)
- (C) Mounting Screws (2)
- (D) Wood Screws (8)
- (E) Lamp Base (1)
- (F) Set Screws (4)
- (G) Screwdriver (1)
- (H) Bulb (1)
- (I) Shade (1)
- (J) Thumbscrews (4)
- (K) Rods (4)
- (L) Screws (4)
- (M) Lock Washers (4)
- (N) Washers (4)

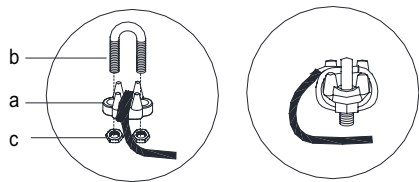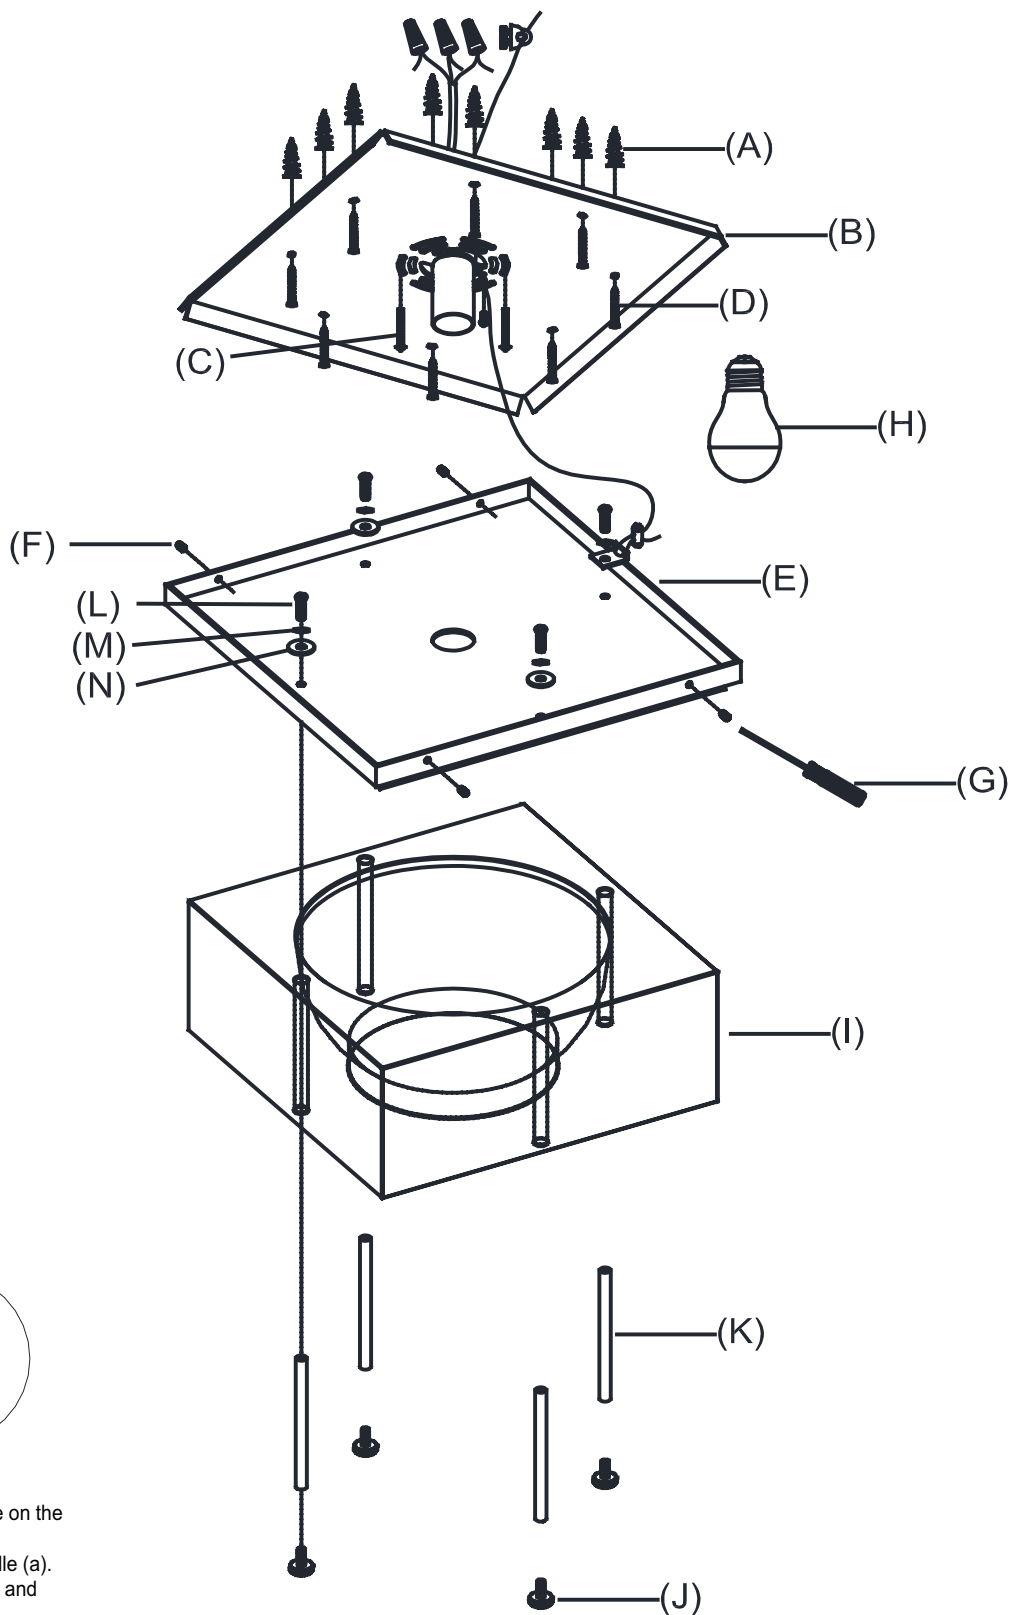

Install safety cable:

1. Wrap the safety cable into the slot hole on the mounting plate.
2. Wrap the safety cable around the saddle (a).
3. Insert U-bolt clip (b) into the saddle (a) and secure with the nuts (c).

SAVILE SQUARE FLUSHMOUNT 14"

IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for one (1) 60-watt maximum Type A lightbulb, one (1) 13-watt compact fluorescent lightbulb or one (1) 4.5-watt SBLLED lightbulb. To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

ASSEMBLY & INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Remove Mounting Plate (B) from Lamp Base (E) by unscrewing Set Screw (F) using Screwdriver (G).
3. Place Mounting Plate (B) at desired location on the ceiling. Mark center point locations for four hanging holes with a pencil. Remove Mounting Plate (B).

ASSEMBLY & INSTALLATION CONT.

4. Drill small holes on each point location on the ceiling. Each hole should be large enough to accommodate Metal Anchors (A). Push Metal Anchors (A) into the holes on the ceiling.
5. Attach Mounting Plate (B) to the ceiling outlet box by aligning the holes and secure by inserting Wood Screws (D) to Metal Anchors (A) and Mounting Screws (C) to the ceiling outlet box.
6. Install Lamp Base (E) to Shade (I) by aligning the holes. Insert Rods (K) to the holes and secure Thumbscrews (J) to the bottom of Shade (I), and secure Lock Washers (M), Washers (N) and Screws (L) to the top of Lamp Base (E).
7. Connect the safety steel wire from the fixture and the safety cable from the ceiling. Refer to the illustration on previous page.
8. Attach the fixture ground wire (green) to the ground wire from the outlet box (usually green) with a metal wire connector and wrap the connection with electrical tape.
9. Connect the hot wire (black) to the hot outlet box wire (usually black) with a plastic wire connector and wrap the connection with electrical tape.
10. Connect the neutral wire (white) to the neutral outlet wire (usually white) with a plastic wire connector and wrap the connection with electrical tape.
11. Insert Bulb (H) into the socket.
12. Attach Lamp Base (E) to the affixed Mounting Plate (B) and secure with Set Screws (F). Tighten using screwdriver (G).
13. Restore power to outlet box and check operation of fixture.
14. Assembly is complete.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.