

RH

WRIGHT FLOOR LAMP


ASSEMBLY AND INSTALLATION INSTRUCTIONS

ENGLISH

WRIGHT FLOOR LAMP

PARTS INCLUDED

- (A) Finial (1)
- (B) Harp (1)
- (C) Saddle (1)
- (D) Bulb (1)

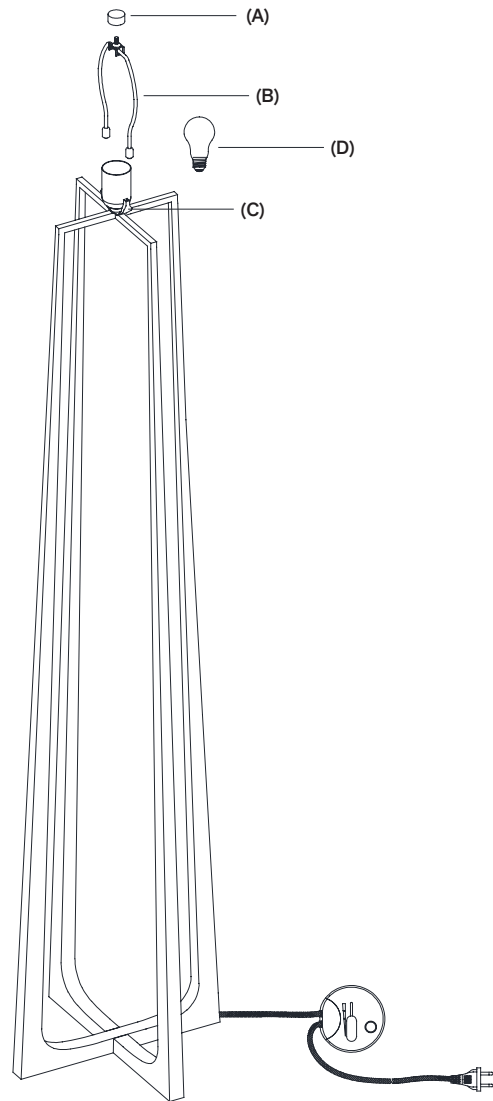

IMPORTANT: PLEASE READ**IMPORTANT SAFETY FEATURES****BULBS**

This fixture has been rated for up to one (1) 13-watt maximum Type A LED light bulb. To avoid the risk of fire, do not exceed the recommended wattage.

DIMMER SWITCH COMPATIBILITY

This fixture is dimmer-switch compatible, and may only be used with a forward phase dimmer switch.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.

WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet (92 cm) away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

ASSEMBLY AND INSTALLATION**SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.**

1. Carefully remove all parts from the box.
2. Install harp (B) by squeezing together and inserting into top of saddle (C).
3. Remove finial (A) from harp (C), install shade (not included) onto the harp and secure with finial (A).
4. Insert the recommended bulb (D) into the socket.
5. Plug into electrical outlet and test fixture.
6. Assembly is complete.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.