



WRIGHT SQUARE CHANDELIER 48" (122CM)


ASSEMBLY AND INSTALLATION INSTRUCTIONS

ENGLISH

WRIGHT SQUARE CHANDELIER 48" (122CM)

PARTS INCLUDED

- (A) Plastic Anchors (4)
- (B) Mounting Plate (1)
- (C) Mounting Loops (4)
- (D) Wood Screws (4)
- (E) Terminal Block (1)
- (F) Chains (8)
- (G) Closable Links (12)
- (H) Metal Covers (12)
- (I) Screws (24)
- (J) Hanging Loops (4)
- (K) Light bulbs (8)
- (L) Socket rings (8)
- (M) Shades (8)
- (N) Sockets (8)
- (O) Canopy screws (4)
- (P) Canopy (1)

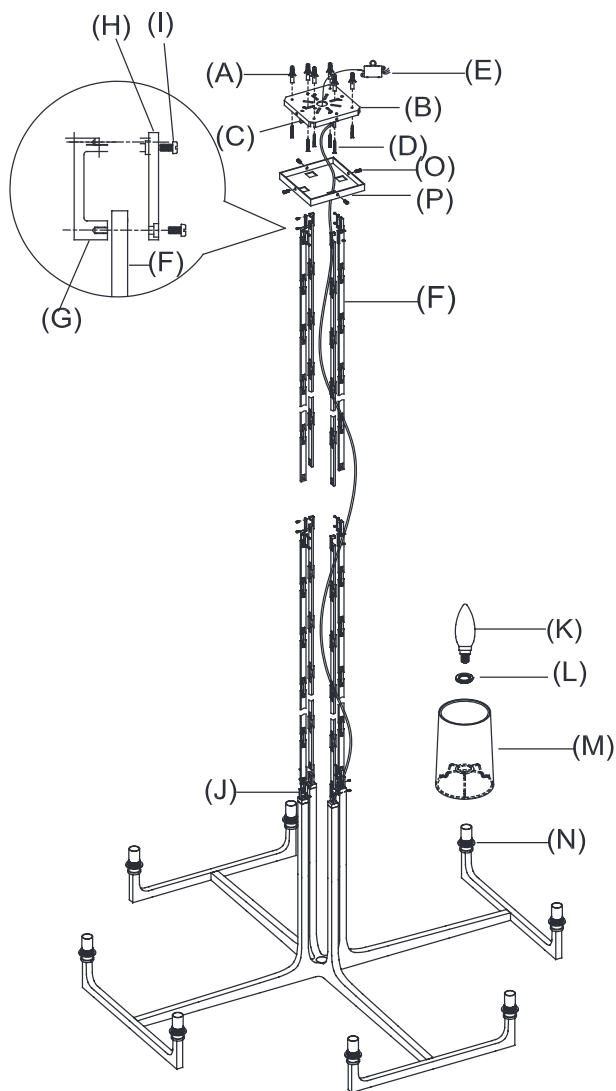

IMPORTANT: PLEASE READ

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR MOUNTING DIRECTLY TO A JUNCTION BOX. UNIQUE, OR ALTERNATIVE, INSTALLATION TYPES MAY REQUIRE DIFFERENT MOUNTING HARDWARE, WHICH HAS NOT BEEN INCLUDED. ALWAYS CONSULT WITH A LICENSED ELECTRICIAN BEFORE INSTALLATION.

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

IMPORTANT SAFETY FEATURES**BULBS**

This fixture has been rated for up to eight (8) 5-watt maximum Type B LED light bulbs. To avoid the risk of fire, do not exceed the recommended wattage.

VAULTED CEILING COMPATIBILITY

This fixture is vaulted-ceiling compatible, up to a maximum ceiling slope of 20 degrees.

DIMMER SWITCH COMPATIBILITY

This fixture is dimmer-switch compatible, and may only be used with a forward phase dimmer switch.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.

WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet (91cm) away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

CAUTION:

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar.

FOR INDOOR USE WARNING

FOR INDOOR USE ONLY

ASSEMBLY AND INSTALLATION**SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.**

1. Carefully remove all parts from the box and remove all plastic covering.
2. Remove Mounting Plate (B) from Canopy (P) by removing Canopy Screws (O).
3. Place Mounting Plate (B) on the ceiling, use it as a template, and mark center points for four mounting holes of Mounting Plate (B) on the ceiling. Remove mounting plate (B).
4. Drill small holes on the marked location, the holes should be big enough to accommodate with Plastic Anchors (A). Push Plastic Anchors (A) into the holes.
5. Affix Mounting Plate (B) to ceiling, insert Wood Screws (D) to Plastic Anchors (A) to secure Mounting Plate (B) to the ceiling.
6. Slide Canopy (P) on Chains (F).
7. Remove the Metal Covers (H) from Closable Links (G) by removing screws (I).
8. Hang chandelier joining Mounting Loops (C), Closable Links (G), and Hanging Loops (J) together. Secure by replacing Metal Covers (H) to Closable Links (G). Tighten with Screws (I).
9. Open terminal block (E) to prepare for installation of electrical wires.
10. Connect fixture ground (green) and supply ground (usually green or yellow) to terminal block (E) and secure with screws.
NOTE: It is imperative that the fixture is grounded.
11. Connect neutral wires (blue) to terminal block (E) and secure with screws.
12. Connect hot wires (brown) to terminal block (E) and secure with screws. Close terminal block (E).
CAUTION: Do not reverse the hot and neutral connections.
13. Raise Canopy (P) to the affixed Mounting Plate (B) by aligning the side holes and secure with Canopy Screws (O).
14. Remove socket rings (L) from sockets (N), place shades (M) onto the sockets (N) and secure with socket rings (L).
15. Insert the recommended bulbs (K) into the sockets.
16. Restore power to outlet box and check operation of fixture.
17. Assembly is complete.

HEIGHT ADJUSTMENT INSTRUCTIONS

1. Feed the wires through rod (I), then thread rod (I) to the center rod of Shade Holder.
2. Feed the wires through rod (J), then thread rod (J) to rod (I).
3. Feed the wires through rod (K), then thread rod (K) to rod (J).

ATTENTION: ADJUSTING THE HANG HEIGHT

Any adjustments or alterations to the fixture, cord, or overall hang height that differ from those detailed on RH.com will void the Laboratory Listing and Approvals (UL, ETL, CSA, etc.). If the listing is voided, this means the product may no longer be safe for use as modified. RH does not recommend modifying the product.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.