

RH


RESTORATION HARDWARE

19th C. English Artist's Easel

Thank you for choosing this quality product. Be sure to check all packaging materials carefully for small parts that may have loosened inside the carton during shipment, and place on a non-abrasive surface.

IMPORTANT

This TV easel can be cumbersome and heavy, therefore the assistance of two or more people is recommended in order to prevent personal injury and ensure the easel is not damaged during the assembly process.

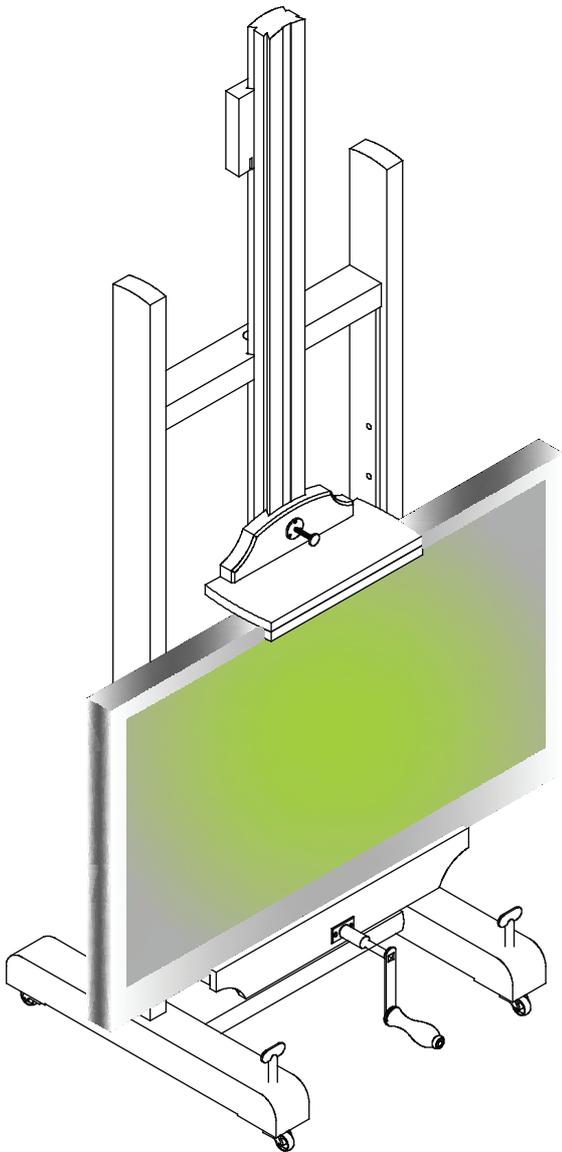

CAUTION

The top shelf of this easel is intended for use with: Plasma/LCD/DLP/HD televisions having a maximum screen size of 50 inches and weight of 135 lbs.

All other support shelves should not be loaded with more than 25 lbs.

DO NOT EXCEED RECOMMENDED LOAD. Use with products heavier than the maximum sizes and weights indicated may result in instability causing possible injury.

Do not allow children under 16 years to move easel.

DO NOT REMOVE THIS LABEL



MISE EN GARDE

L'étagère supérieure de ce support ou chariot est destinée à recevoir :

Une télévision à écran plasma ou haute densité dont l'écran ne mesure pas plus de 127.0 cm et qui ne pèse pas plus de 61.4 kg.




Les autres étagères ne doivent pas recevoir une charge de plus de 11 kg.

NE PAS DÉPASSER LA CHARGE RECOMMANDÉE. L'utilisation avec des articles qui dépassent la taille et le poids recommandés peut rendre l'article instable et entraîner des blessures.

Il faut interdire à tout enfant de moins de 16 ans de déplacer le chariot.

NE PAS ENLEVER CETTE ÉTIQUETTE

Customer Service - If you are missing parts or have any questions about this product please contact us at 1-800-762-1751

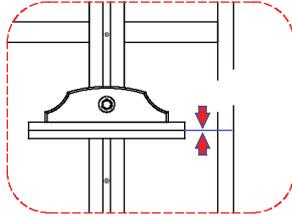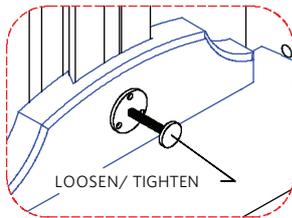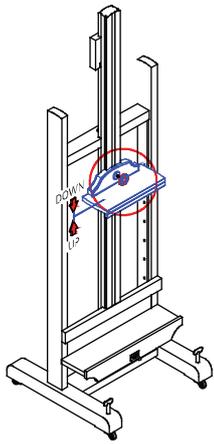

WARNING

BE SURE TO UNFASTEN THE BARREL BOLTS ON THE REAR OF THE EASEL PRIOR TO ADJUSTING THE HEIGHT.

INSTRUCTIONS

1. Roll the easel away from the wall so you can easily fit behind it and work freely with no interference.
2. Twist the adjustment knob counterclockwise on the upper bracket of the easel to loosen. The upper bracket can be adjusted to correspond to your TV's height. Please see figure 01 (A, B).
3. Gently place the TV onto the easel, and check the lower bracket to ensure that the TV is set properly and secure. Slide the upper bracket to fit atop the TV snugly so that it holds it firmly in place. Please see figure 02 (C).
4. Firmly adjust the thumb screw at the back so that it grasps the vertical threaded rod as in figure 03 (D).
5. To adjust the display of your TV, engage the crank into the key located at front surface of the lower bracket. Turn the crank clockwise to rise up and counterclockwise to lower it. Please see figure 04 (F).
6. Note: After making the adjustment, secure the barrel bolt at the back to fasten as in figure 03 E.
7. Roll the easel to the area where you want to display your TV, and position it near an electrical outlet. Be sure to place in an area where it will not be easily jostled or knocked over.

