

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. IF YOU ARE UNSURE ABOUT YOUR CEILING TYPE OR WHAT MOUNTING METHOD YOU SHOULD USE, CONSULT A QUALIFIED PROFESSIONAL OR YOUR LOCAL HARDWARE STORE.



THIS LIGHTING FIXTURE WORKS WITH ELV DIMMERS ONLY. CONNECTING IT TO TRIAC DIMMERS MAY DAMAGE THE ELECTRICAL INSTALLATION. SEE RECOMMENDED DIMMERS ON THE LEFT BELOW

PARTS ENCLOSED:

- (A) Top ceiling plate [1]
- (B) Bottom ceiling plate [1]
- (C) Glass globes [7]
- (D) Bolts [6]
- (E) Extension rods [12]
- (F) 1.6W LED G4 bulbs [7]


TOOLS ENCLOSED:

- (G) Plate nut wrench
- Pair of cotton gloves

NOT INCLUDED

(recommended for install):

- (H) Wall anchors [6]
- (I) Screws [6]
- Flat-head screwdriver
- Drilling machine
- Pencil

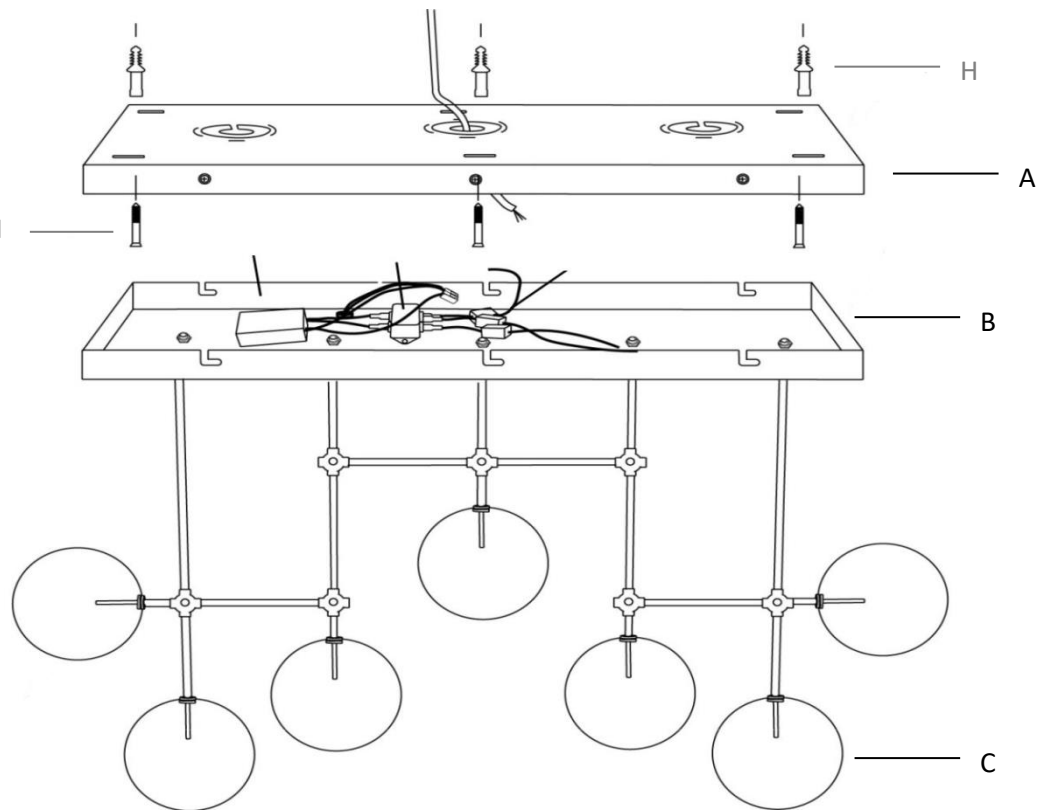

1st CHOICE RECOMMENDED DIMMERS


REQUIRING NEUTRAL WIRE

1. Lutron Skylark SELV-300P
2. Lutron Maestro MA-PRO-WH 250W
3. Lutron Diva DVELV-300P-WH

2nd CHOICE RECOMMENDED DIMMERS

NOT REQUIRING NEUTRAL WIRE

1. Lutron Ariadni AYCL-153P
2. Lutron Ariadni AYL-603P
3. Lutron Ariadni AYL-600P
4. Lutron Diva DVCL-153P

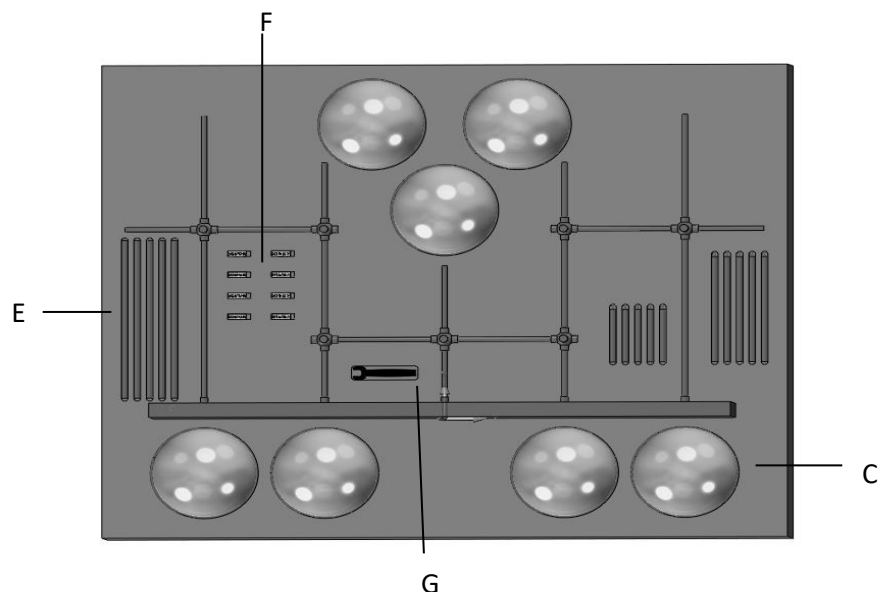

SAFETY INSTRUCTIONS:

These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.

1. Turn off electricity at the main circuit breaker panel before beginning installation.
2. This direct wire fixture must be installed by a certified and licensed electrician. Customers should not attempt to install it on their own.
3. This fixture has been rated for up to seven 1.6W max G4 base bulbs. To avoid the risk of fire, do not exceed the recommended wattage.
4. If any special control devices are used with this fixture, follow the instructions to assure full compliance with the N.E.C. requirements.
5. This fixture can be used only with a trailing edge dimmer.
6. The mounting hook with wall anchor is not included. To select the proper type of mounting hook / wall anchor based on the material the ceiling is made of, please contact your local hardware store for assistance. If there are any questions, contact a licensed electrical contractor.

WARNINGS:

- Do not mount or unmount the glass globes if the lightbulbs or fixture is hot.
- All wires are connected. Do not remove the ceiling light from its packaging by pulling on the power cord, as a bad connection may result.
- Do not use if the light cable / cord is damaged.
- To reduce the risk of fire, electrical shock, or personal injury, always turn off light fixture and allow it and the clothes to cool prior to replacing lightbulb.
- When mounting the fixture, always use included white gloves.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.

CLEANING AND MAINTENANCE

NOTE: Make sure you cut off electrical supply to the lamp before commencing cleaning operations.

Component	Maintenance	Tools
Brass frame	Clean every month using a soft cloth, dampened slightly with water. Make sure the frame is dry before switching it back on.	Soft cloth, water
Glass globes	Clean regularly with a soft dry cloth. Clean only the outside of the globe. When dirtier, use a wet cloth first. Grease can be cleaned with a gentle glass cleaner.	Soft cloth Cotton gloves
LED bulbs	Make sure your power supply is off before changing the bulb. Unscrew the globe where bulb needs replacing. Gently remove the bulb by pulling it out and replace with an LED bulb of the same parameters.	Cotton gloves LED bulbs

NOTE: Please remember solid brass may tarnish over time. This is a natural process. Make sure you follow our guidelines to preserve the great look of RH lighting for years.

TROUBLESHOOTING


NOTE: The handmade nature of the products offers a unique aesthetic experience and allows for small imperfections, which is inherent in crafts. If solutions offered below are not sufficient, please do not hesitate and contact our customer service.

Problem	Possible cause	Action
Tarnishing	Oxidation of brass is a natural process. Although it is lacquered, its color may change slightly over time.	No action is necessary apart from regular cleaning. See the Maintenance section.
Noise	The humming noise normally comes from transformers.	Check electrical connections and make sure the right dimmer is used - ELV.
Globe deformations	Mouth-formed glass globes are beautiful but not perfect. The process leaves a slight deformation at the bottom of the globe.	No action is necessary. All globes undergo a quality check. Should you have any doubts, please send us a photo of the deformed globe and we will act accordingly.



MAKE SURE YOU CUT OFF ELECTRICAL SUPPLY AT THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE COMMENCING ANY WORK


1

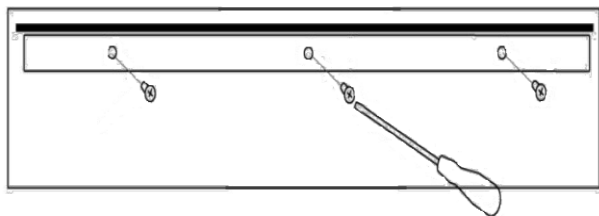

NOTE: HEAVY ELEMENT. HANDLE WITH CARE. After removing the lamp frame from the box, use a flat head screwdriver to unscrew 6 bolts [D] holding the ceiling plate.


2

CHECK POWER OFF!

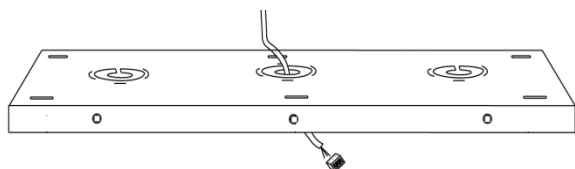


Place the top plate [A] flush against the ceiling, pull electrical cords through the hole and mark 6 anchor spots. Drill holes in the marked spots and place anchors in. **NOTE: Consult your local hardware store for proper anchors.**

3

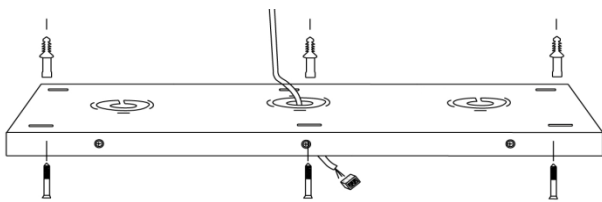

Pull wires protruding from the ceiling through the ceiling plate and screw the anchor screws in.

 4




Are you installing extension rods?

YES: Continue to Step 5


NO: Jump to Step 9

5

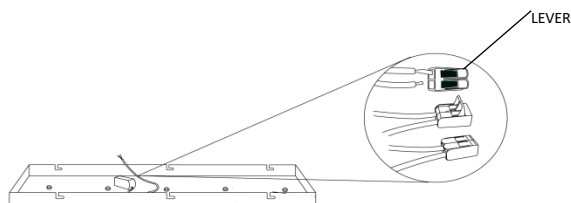


Disconnect the lamp cords by lifting the levers on the terminal and pulling out the cords.

6

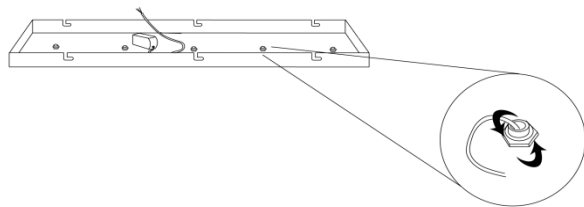


Use the large nut wrench [I] to unscrew the nuts holding the plate to the rods.

7

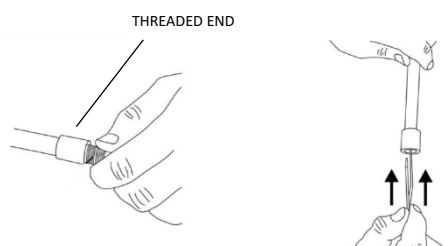


After removing the plate [B], unscrew the threaded inserts from the lamp rods. Carefully pull the cords through selected extension rods [E]. **NOTE: Make sure the rods are positioned with the thread upwards.** Screw the threaded inserts on top of extension rods.

8

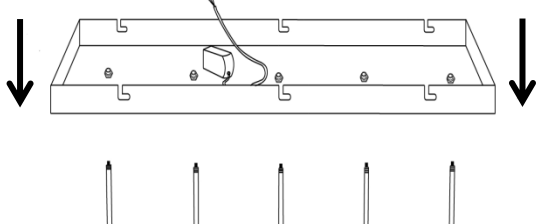


Pull the cords through the bottom ceiling plate [B] and screw it back on the rods with the nuts using the wrench [G]. **NOTE: Make sure the cord endings are not frayed. If yes, twist them back together.** Connect the cords back to the transformer terminal. (See Step 5 for reference)

9

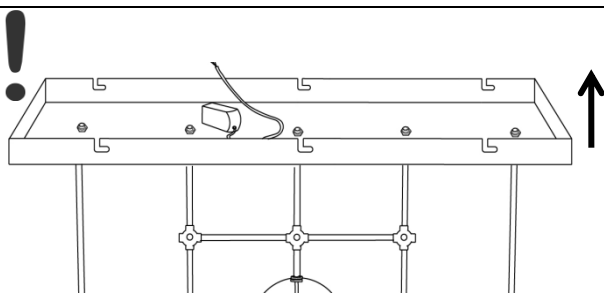


Lift the fixture up and hold under the top ceiling plate [A] to make electrical connections. **NOTE: TWO PEOPLE are needed for this and the three following steps.**

10

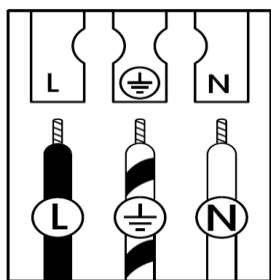


Junction boxes may vary depending on location. The diagram on the left shows the most common markings and manner of connecting the cords. **NOTE: We recommend installation by a licensed electrician.**

11

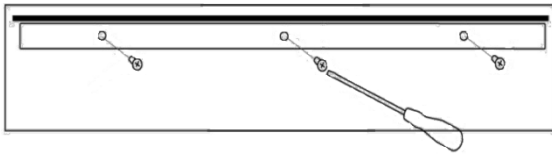


Lift the bottom ceiling plate [B] flush with the top ceiling plate [A] and line up the bolt holes. Use a flat-head screwdriver to screw four bolts [D] in.

 12




Carefully insert 7 included 1.6W LED G4 bulbs into slots on the tip of each arm.

13

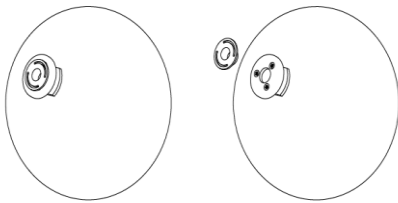


NOTE: Included cotton gloves **MUST** be worn when handling glass globes. Start mounting glass globes by first removing a plastic stopper from each globe to be mounted.

14

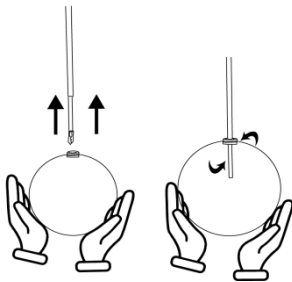

Carefully mount each globe onto the arm tip and screw it on.

15

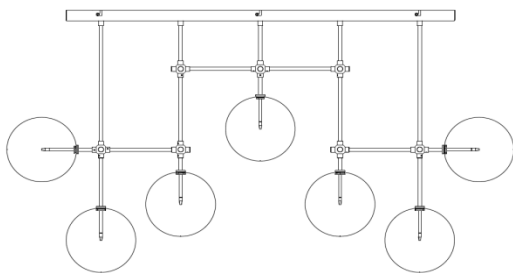

Restore power and enjoy your RH Lamp.