

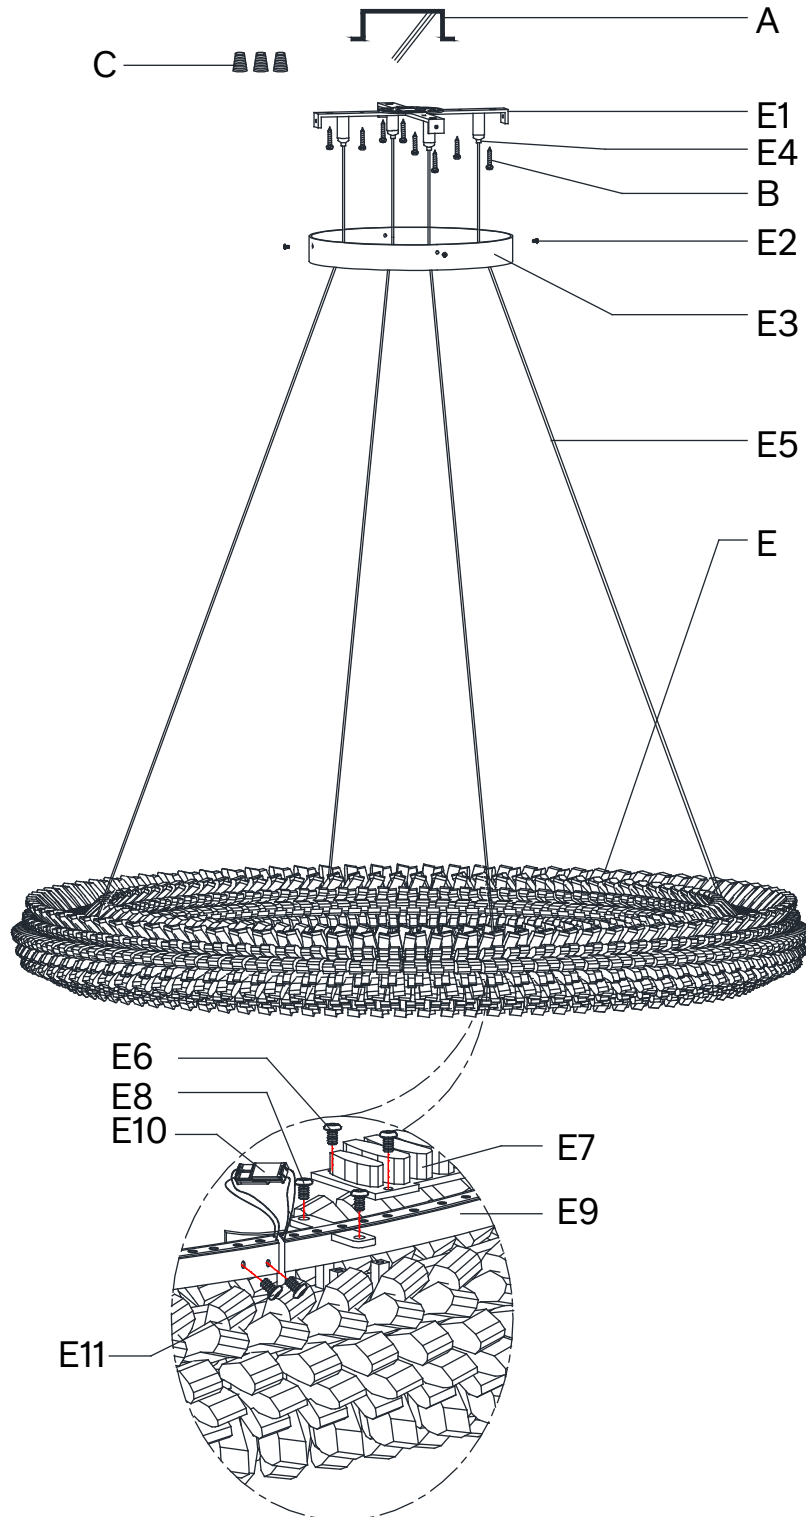
PARTS ENCLOSED**(A)** Junction Box (Not included.) 22.7 kg/50 lbs. MIN. FIXTURE RATED**(B)** Mounting Screws (Not included. 3 Sets.)**(C)** Wire Nut (3)**(D)** Wrench (1)**(E)** Body (1)**(E1)** Ceiling Hook (1)**(E2)** Bolts (4)**(E3)** Canopy (1)**(E4)** Locking Device (4)**(E5)** Wires (4)**(E6)** Bolts (36)**(E7)** Crystal Cover (6)**(E8)** Bolts (6)**(E9)** Lightsource Frame (1)**(E10)** Quick-Link Connectors (8)**(E11)** Bolts (2)**(F)** Auxiliary Frame (1)**(F1)** Bolts (8)**(F2)** Cross Piece (1)**(F3)** Nuts (16)**(F4)** Metal Piece (1)**(F5)** Nuts (8)**(F6)** Bolts (8)**PRODUCT DESCRIPTION:**

General material: Glass & Iron

Height: 18.0 cm (7.08 in)

Diameter: 132.0 cm (51.97 in)

Weight: 101.0 kg (222.7 lbs)



IMPORTANT PLEASE READ**WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.****SAFETY INSTRUCTIONS:**

1. Use an authorized and certified electrician for consultation and installation.
2. The screws need to be screwed into a solid support structure inside the ceiling, which will require professional assistance.
3. This fixture has been rated for a 60-watt maximum replaceable LED module.
4. To avoid the risk of fire, do not exceed the recommended wattage.
5. The ceiling must have at least the capacity of 5 times the weight of the ceiling light. For this light, at least a ceiling capacity of 505 kg (1113.5 lbs) is required.
6. The manufacturer and distributor accept no liability for incorrect installation.
7. For indoor use only.
8. Keep away from children.
9. Expected lifespan of the LED module is 30,000 hours.

WARNINGS:

1. Turn off electricity supply at main circuit panel before installing.
Do not connect electricity supply until your ceiling light is fully assembled and installed.
2. All wires are connected. Do not remove the ceiling light from its packaging by pulling on the power cord, as a bad connection may result.
3. To reduce the risk of fire, electrical shock, or personal injury, do not touch bulb when fixture is turned on. Always turn off the ceiling light and allow it to cool prior to replacing the bulb. Do not look directly at bulb when fixture is illuminated. Keep flammable materials away from lite bulb.
4. Deviation from instructions may result in a risk of fire or electric shock.



WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.



WARNING: STRANGULATION HAZARD

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

ASSEMBLY & INSTALLATION:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Turn OFF power to the junction box where the ceiling light will be installed.
3. Loosen the bolts (F1) and remove the cross piece (F2) from metal frame (F). (view 1)
4. Loosen the bolts (E2) and remove the ceiling hook (E1) from canopy (E3). (view 2)
5. Attach the ceiling hook (E1) to the ceiling with mounting screws (B).
6. Connect the ground wire from the fixture to the ground junction box wire (usually the green or bare wire) and wrap the connection with electrical tape. Connect the hot wire to the junction box wire (usually black or smooth) with a plastic wire nut (C) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction box wire (usually white or ribbed) with a plastic wire nut (C) and wrap the connection with electrical tape.
7. Move the canopy (E3) up to the ceiling, then fasten the bolts (E2).
8. Loosen the nuts (F3) by wrench (D) and remove the metal piece (F4) from metal frame (F). (view 3)
- 9.1 Press and loosen the height adjustable wire locking device (E4) to adjust the length of the steel wires (E5) in order to let the ceiling light fixture down and level it.
- 9.2 Insert the steel wire into the height adjustable wire locking device (E4) in order to let the ceiling light fixture go up to the suitable height and level it. (view 4)
10. Loosen the nuts (F5) by a wrench (D) and remove the bolts (F6) from body (E). (view 3)
11. Restore power to the junction box and test ceiling light fixture.

REPLACE LED LIGHTSOURCE STEPS:

1. Loosen the bolts (E6) to detach the crystal cover (E7).
2. Loosen the bolts (E8) to detach the lightsource frame (E9).
3. Disconnect all quick-link connectors (E10).
4. Loosen the bolts (E11) on the side of the lightsource frame (E9).
5. Take out the lightsource frame (E9) from the fixture then replace it.

CARE INSTRUCTIONS:

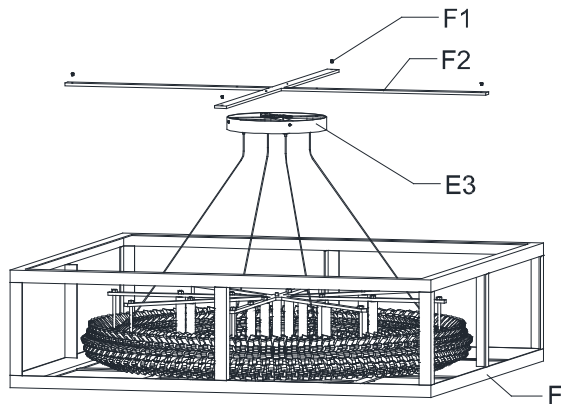
1. Make sure that the power is turned off and bulb has cooled before handling.
2. Wipe clean with a dry cloth / mild soapy solution. Do not use corrosive cleaners.
3. The cable / cord of this ceiling light cannot be replaced; if the cable is damaged, do not use the light.

WARNING:

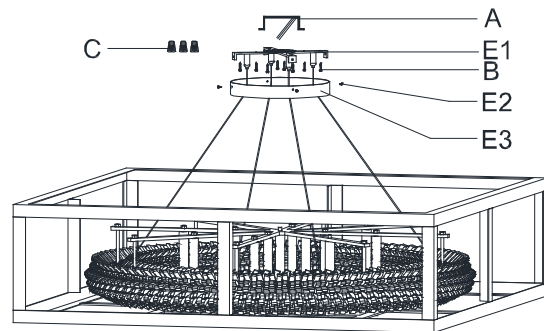
1. Please read the instruction thoroughly on page 1 prior to assembling.
2. Do not place the lighting on the floor directly or any hard surface as it can damage the fixture.
3. Ensure the fixture is properly hung from the ceiling before removing the iron packaging.

view 1

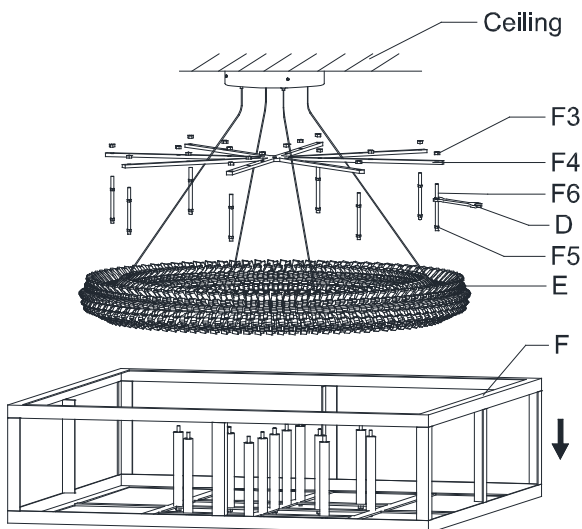
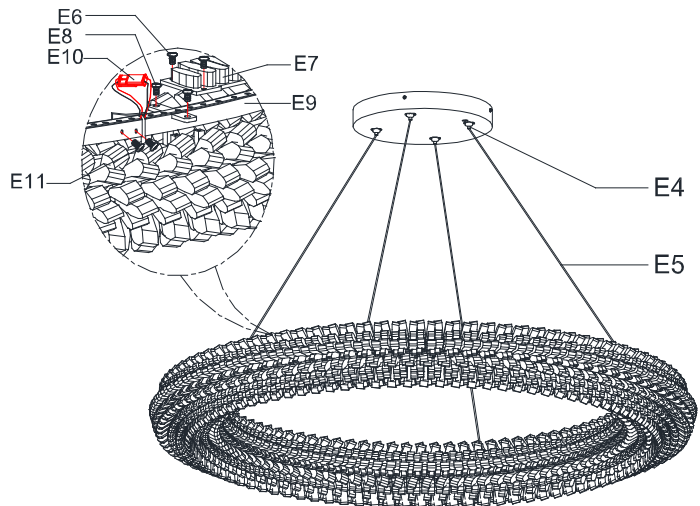
Remove the packaging materials and cross piece (F2).

**view 2**

Attach the ceiling hook (E1) to the ceiling then fix the canopy up to the ceiling hook.

**view 3**

Loosen the nuts (F3) by wrench (D) and remove the metal piece (F4) from metal frame (F).

**view 4**

Ensure the lighting is hanging securely from the ceiling before removing the iron packaging frame.