


RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind and each collection is clad in one of our signature finish options. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

PARTS ENCLOSED

- (A) Metal anchor (2)
- (B) Mounting screw (2)
- (C) Lamp base (1)
- (D) Top cord cover
- (E) Middle cord cover
- (F) Lower cord cover

LIBRARY SWING ARM WALL SCNCE

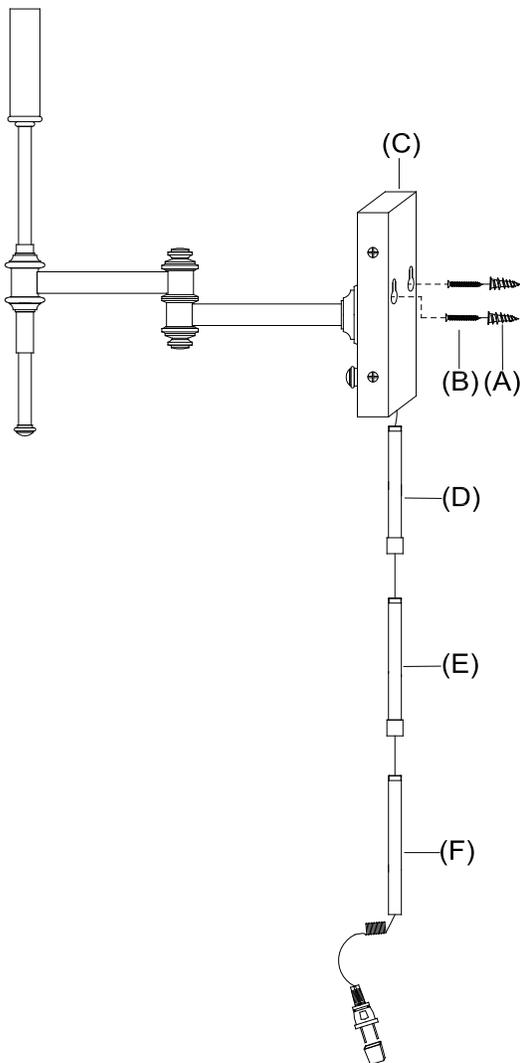

IMPORTANT SAFETY INSTRUCTIONS:

For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

This fixture has been rated for up to (1) 40-watt maximum TYPE B standard bulb. To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

1. All wires are connected.
2. Do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
3. Do not connect electricity until your lamp is fully assembled.
4. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
5. Do not touch bulb when fixture is turned on or look directly at lit bulb.
6. Keep flammable materials away from lit bulb.

TO ASSEMBLE:

1. Carefully remove all parts from the box and remove all metal covering.
2. Measure center distance of both hanging key holes at backside of lamp base (C). Mark hole locations on the wall with the same distance at the desired height, making sure both holes are level with each other.
3. Drill small pilot hole on each point location on the wall, then drive metal anchors (A) into the holes in the wall using a screwdriver.
4. Insert both mounting screws (B) into the metal anchors (A), make sure both screw heads with 1/8" threads are visible.
5. Hook lamp base (C) onto both heads of on mounting screws (B). If lamp base (C) is not tight, remove from screws (B), tighten screws ¼ turn, then re-hang lamp base (C).
6. Attach top cord cover (D) to bottom of lamp base by turning (D) in counter-clockwise direction.
7. Attach middle cord cover (E) to bottom of (D) by turning (E) in counter-clockwise direction, and attach lower cord cover (F) to bottom of (E) by turning (F) in counter-clockwise direction
8. Plug into proper electrical outlet and test fixture.
9. Assembly is complete.

CARE INSTRUCTIONS:

Avoid the use of all polishers, cleaners, and abrasives, as they will damage the finish of your lamp. To remove dust or fingerprints, wipe gently with a soft, clean cloth.