

RESTORATION HARDWARE

Thank you for purchasing Restoration Hardware Lighting. Our assortment is crafted with the highest quality details in mind: cast sockets, full range dimmers, and hand applied finishes. Each item's surface is sealed which eliminates the need for polishing and ensures the lasting brilliance of your piece for years to come.

PARTS ENCLOSED:

- (A) MOUNTING PLATE
- (B) BACKPLATE PLATE SCREWS (X4)
- (C) BACKPLATE
- (D) MOUNTING PLATE SCREWS (X2)
- (E) WIRE NUTS (X3)
- (F) SOCKET
- (G) SHADE
- (H) SPACER
- (I) THREADED FLANGE
- (J) FLANGE WRENCH
- (K) PLASTIC WASHER
- (L) FABRIC INSULATOR

IMPORTANT SAFETY INSTRUCTIONS:

*These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.

*DIRECT WIRE FIXTURES: WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

WARNINGS:

Turn off power (unplug from the wall outlet) before replacing the bulb(s), making sure the bulb(s) had sufficient time to cool down. DO NOT subject the fixture to any shock while lit as shattering of bulb may result.

TO ASSEMBLE:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/ CIRCUIT BREAKER.
2. Remove all parts from carton. Do not throw away any parts.
3. Unscrew threaded flange (I) from socket (F) and remove spacer (H), fabric insulator (L), and plastic washer (K). Set threaded flange (I), spacer (H), fabric insulator (L), and plastic washer (K) aside.
4. Remove the mounting plate (A) from backplate (C) by removing the backplate screws (B).
5. Gently pull wiring from the wall outlet box and allow the wires to hang. Thread wires through center hole in the mounting plate (A).
6. Affix the mounting plate (A) to wall outlet box with the mounting plate screws (D) provided.
7. Connect ground wire from the fixture to the ground wire from the wall outlet box. Fasten together with a plastic wire nut and tightly wrap the wire connector with electrical tape so the end of the connector is sealed. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
8. Connect the neutral (white) fixture wire coming from the fixture to the neutral (usually white) outlet wire. Connect wires together with a plastic wire nut (E) and tightly wrap the wire nut (E) with electrical tape.
9. Connect the hot (black) fixture wire coming from the fixture to the hot (usually black) outlet wire. Connect wires together with a plastic wire nut (E) and tightly wrap the wire nut (E) with electrical tape.
10. Always make sure that no wire strands are left outside the connectors. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
11. Attach backplate (C) to the affixed mounting plate (A) by aligning the holes in mounting plate (A) and the holes in backplate (C) and inserting backplate screws (B). Tighten backplate screws (B) with screwdriver (not included).
12. Align hole in top of glass shade (G) with socket (F). Slide glass shade (G) over socket (F). Slide plastic washer (K), fabric insulator (L), and spacer (H) up over socket (F). Make sure to orient spacer as shown so widest part is at the top. Thread flange (I) onto socket (F) using flange wrench (J) to secure shade (G) to fixture.
13. Insert three (3) 60W max B-10 Candelabra base bulbs into sockets (F).

CARE INSTRUCTIONS:

To clean, use a soft cloth only. DO NOT use any chemical or abrasive cleaners.

SPRITZ TRIPLE LIGHT SCONCE

