



CONVESSI SWING-ARM SCONCE

PARTS ENCLOSED

- (A) Metal Anchors (2)
- (B) Screws (2)
- (C) Lamp Base (1)
- (D) Adjustment Key (1)
- (E) Bulb (1)
- (F) Mounting Plate (1)
- (G) Mounting Screws (2)
- (H) Direct Wire Plug (1)
- (I) Base Screws (3)

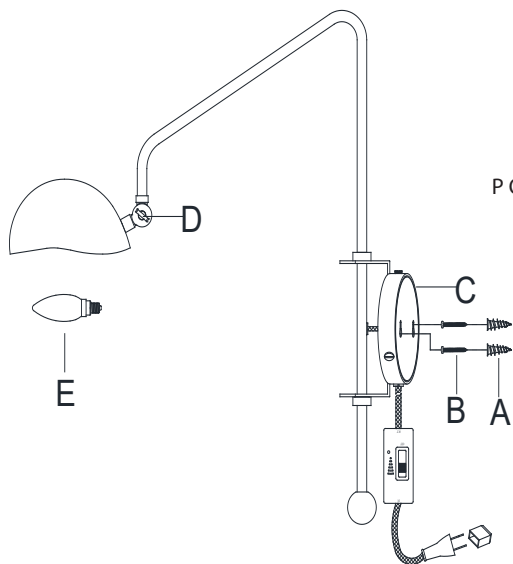

PORTABLE (FIG. 1)

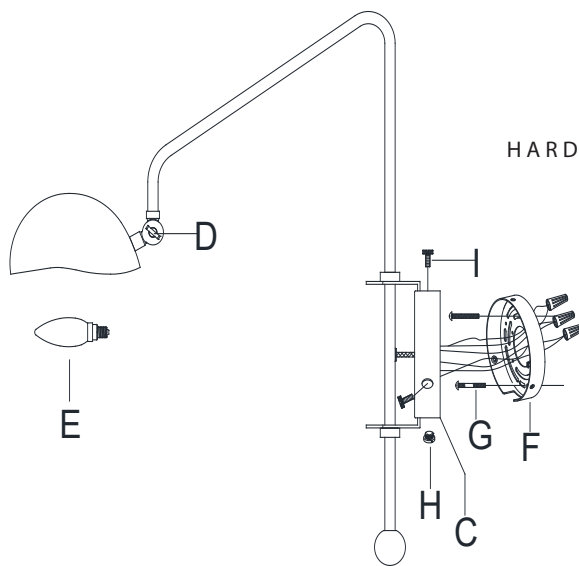

HARDWIRE (FIG. 2)

IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into outlet, do not force it - contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

This fixture has been rated for one (1) 60-Watt maximum Type B lightbulb (not included), one (1) 13-Watt compact fluorescent lightbulb (not included), or one (1) 4.5-Watt SBLed lightbulb (4-Watt SBLed lightbulb included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

PORTABLE ASSEMBLY & INSTALLATION (FIG. 1)

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Measure the center distance of both hanging keyholes on the back side of Lamp Base (C). Make pencil marks on the wall for the holes with the same distance at the desired height; make sure the holes are level with each other.

ASSEMBLY & INSTALLATION CONT.

3. Drill a small hole on each pencil mark on the wall. Each hole should be large enough to accommodate the Metal Anchors (A). Push Metal Anchors into the holes in the wall.
4. Insert both Mounting Screws (B) into the Metal Anchors (A); make sure both screw heads with 1/8" threads are visible.
5. Hook Lamp Base (C) onto both heads of Mounting Screws (B).
6. Insert Bulb (E) into the socket.

HARDWIRE ASSEMBLY & INSTALLATION (FIG. 2)

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Guide wiring from wall outlet through the center hole in Mounting Plate (F). Affix Mounting Plate (F) to wall outlet box with Mounting Screws (G) provided.
3. Cut the wire 12 inches away from Fixture Base (C).
4. Insert the Direct Wire Plug (H) to the threaded hole vacated by the cord.
5. Attach the fixture ground wire and house ground wire (green) to wall outlet box with the green grounding screw. Connect fixture wire to corresponding house wire with a wire nut. Carefully tuck the wires back into the outlet box. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
6. Connect both neutral wires (white) to the neutral outlet wire (usually white insulation) with a plastic wire connector and wrap the connection with electrical tape.
7. Connect both hot wires (black) to the hot outlet box wire (usually black insulation) with a plastic wire connector and wrap the connection with electrical tape. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
8. Attach Fixture Base (C) to affixed Mounting Plate (F) and secure with Base Screws (I).
9. Insert Bulb (E) into the socket.
10. Assembly is complete.

HEIGHT ADJUSTMENT

1. Loosen Adjustment Key (D); adjust lamp shade to desired position.
2. Tighten Adjustment Key (D).

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.