



CRATE STORAGE

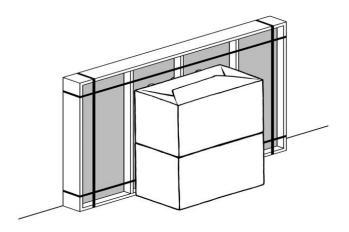

- Keep Stone Top in it's crate until installation.
- Store crate vertically in a safe location.

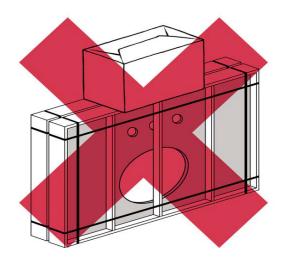


• Do not stack anything on top of crate.




PARTS LIST


[A] STONE TOP Qty: 1

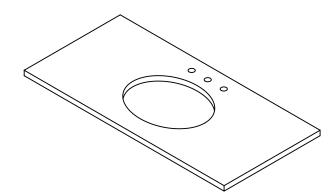

[B] BACKSPLASH (sold seperately) Qty:1

 

[C] SINK BASIN Qty:1

 

[D] VANITY BASE Qty:1





PRIMARY INSTALLATION REQUIREMENTS:

- Professional two-man crew.
- Water supply and drain piping installed according to local plumbing and building codes (sold seperately).
- Wall and floor are square and plumb at installation site.
- Vanity Base [D] installed square and plumb with wall and floor. Vanity Base [D] also needs to be level.
- Ensure Stone Top [A] is the correct size to match the Vanity Base [D].

TOOL AND MATERIAL REQUIREMENTS


- Flat, non-abrasive work surface (blanket or smooth cardboard)
- Sealant
- Phillips-head screwdriver
- Carpenter's level
- Utility blade

CLEANING AND MAINTENANCE INSTRUCTIONS

- Avoid abrasive and harsh chemical cleaners.
- To maintain and protect luster of vanity sink components, RH bathroom care products are reccommended.
- RH Stone Tops [A] have a honed finish, hand-polished edges, and are sealed twice with inert silicone sealant.
- Stone Top [A] should be re-sealed annualy.




SINK INSTALLATION

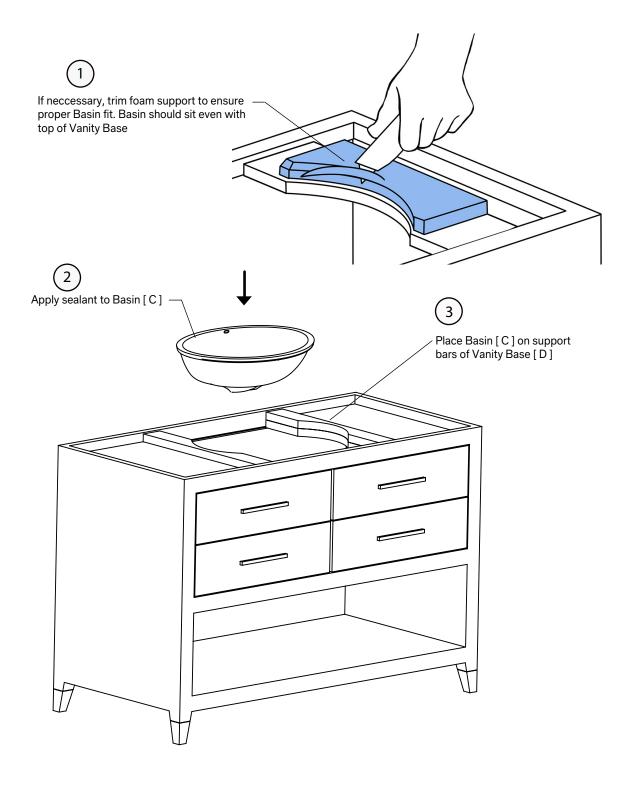




STONE TOP UN-PACKING

** WHEN MOVING STONE TOP, ALWAYS USE A TWO-MAN CREW **

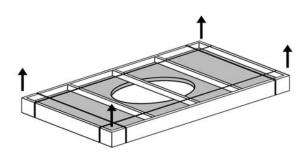


Remove metal bands, unscrew the slats or lid, and lift the Stone Top [A] out of the crate.

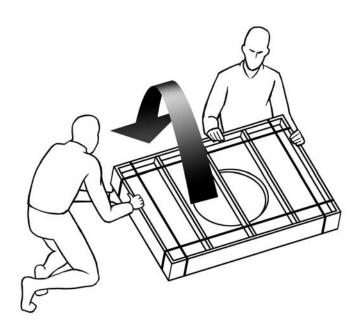

Carefully, without allowing any freefall, rotate the crate from vertical to flat.

STONE TOP INSPECTION

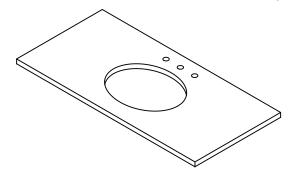

Inspect the Stone Top [A] for cracks or defects.

If defects are detected, do not install and please call 877-777-7059.

If no defects are detected; clean Stone Top [A] with a soft cloth.




STONE TOP TRANSPORT

** WHEN MOVING STONE TOP, ALWAYS USE A TWO-MAN CREW **



Always carry Stone Top [A] vertically

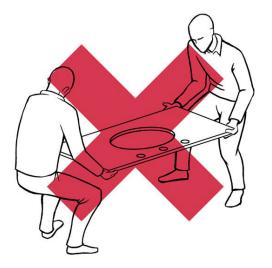

Do not carry Stone Top $\,$ [A] horizontally as it increases the risk of breakage or cracking.



STONE TOP INSTALLATION

• If installing Stone Top [A] between two walls, stop here and follow the next set of instructions.

Standard Stone Top Installation Guidlines

- Apply a continuous bead of sealant to the top face of Sink Basin [C] rim where the Stone Top [A] makes contact with the Sink Basin [C].
- 2. Using a two-man crew, lift Stone Top [A] and set it on top of Vanity Base [D].
- 3. Apply silicone sealant to bottom and Backsplash [B], the rear of the Vanity Base [D] and wall (see illustration below).

Stone Top Installation Between Two Walls

- Apply a continuous bead of sealant to the top face of Sink Basin [C] rim (where the Stone Top [A] makes contact with the Sink Basin [C]).
- 2. Using a two-man crew, lift Stone Top [A] and set it's rear edge on the back of the Vanity Base [D] (closest to rear wall) -- see illustration below.
- 3. Lower front of Stone top onto the Vanity Base [D] make sure both ends are lowered at the same rate.
- 4. Do not shimmy, twist or turn the Stone Top [A] while lowering as this increases the risk of breakage!
- 5. Apply silicone sealant to bottom and Backsplash [B], the rear of the Vanity Base [D] and wall (see illustration below).



