


## WRIGHT SQUARE CHANDELIER 48"

### PARTS ENCLOSED

- (A) Toggle Wings (4)
- (B) Mounting Plate (1)
- (C) Mounting Loops (4)
- (D) Toggle Bolts (4)
- (E) Mounting Screws (2)
- (F) Chains (4)
- (G) Closable Links (8)
- (H) Metal Covers (8)
- (I) Screws (16)
- (J) Fixture Body (1)
- (K) Bulbs (8)
- (L) Socket Rings (8)
- (M) Shades (8)
- (N) Sockets (8)
- (O) Canopy Screws (4)
- (P) Canopy (1)

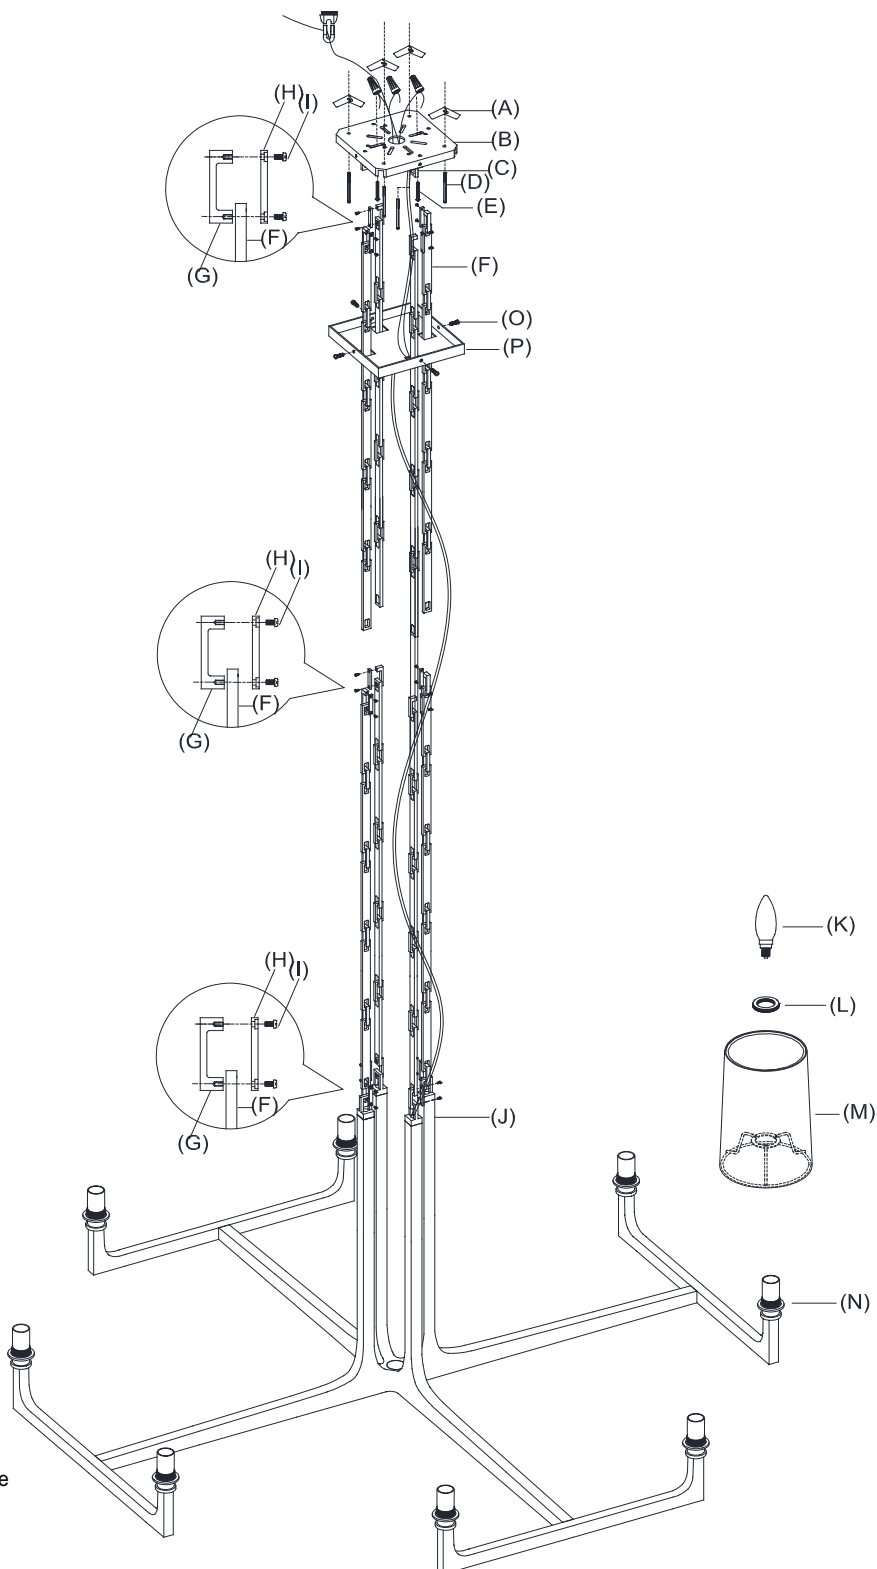

#### Install safety cable:

1. Wrap the safety cable into the slot hole on the mounting plate.
2. Wrap the safety cable around the saddle (a).
3. Insert U-bolt clip (b) into the saddle (a) and secure with the nuts (c).

## IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for up to eight (8) 40-Watt maximum Type B lightbulbs (not included), eight (8) 9-Watt compact fluorescent lightbulbs (not included) or eight (8) 5.5-Watt SBLed lightbulbs (included). To avoid the risk of fire, do not exceed the recommended wattage.

## WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the light bulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



**WARNING:** This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

## ASSEMBLY &amp; INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Remove Canopy (P) from Mounting Plate (B) by removing Canopy Screws (O).
3. Using a drill with the appropriate size drill bit - just large enough to make hole that will allow passage of the folded Toggle Wings (A) of Toggle Bolts (D), drill 1 hole in the ceiling at each of the 4 marked slot locations for Toggle Bolts (D) and Toggle Wings (A) assemblies.

## ASSEMBLY &amp; INSTALLATION CONT.

4. Affix Mounting Plate (B) to the ceiling outlet box. Insert Mounting Screws (E) to the ceiling outlet box. Insert Toggle Bolts (D) through Mounting Plate (B), making sure that the head of the screws are on the inside of Mounting Plate (B). Screw Toggle Wings (A) onto the threaded Toggle Bolts (D), making sure Toggle Wings (A) are at the end of Toggle Bolts (D).
5. Push Toggle Wings (A) through the hole in the ceiling. Tighten Toggle Bolts (D) so that Mounting Plate (B) is secured to the ceiling.
6. Carefully slide Canopy (P) onto Chains (F).
7. Remove Metal Covers (H) from Closable Links (G) by removing Screws (I).
8. Hang Chains (F) to Fixture Body (J) and Mounting Loops (C). Secure by replacing Metal Covers (H) to Closable Links (G) using Screws (I).
9. Gently pull the wires from the ceiling outlet box and allow the wires to hang. Thread the wires through the center hole of Mounting Plate (B).
10. Connect the safety cable as shown in the figure on previous page.
11. Carefully inspect the chandelier's two fixture wires. One has very fine ridges molded into the plastic covering – this is the neutral wire. The second wire's covering is smooth – this is the hot wire. The bare wire is the ground wire.
12. Connect the ground wire from the fixture with the ground wire (usually bare) from your ceiling box using a wire nut. If you house does not have ground wire, then attach the ground wire from the fixture to the green grounding screw inside of the outlet box. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
13. Connect the neutral wire from your fixture with the neutral wire (usually white) from your ceiling box using a wire nut.
14. Connect the hot wire from your fixture with the hot wire (usually black) from your outlet box using a wire nut. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
15. Raise Canopy (P) to the affixed Mounting Plate (B) by aligning the side holes and secure with Canopy Screws (O).
16. Remove Socket Rings (L) from Sockets (N). Place Shades (M) onto each of Sockets (N) and secure with Socket Rings (L)
17. Insert Bulbs (K) into each of Sockets (N).
18. Restore power to outlet box and check operation of fixture.
19. Assembly is complete.

## CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.