

RH

SELENITE CRYSTAL PENDANT

PARTS ENCLOSED

(A) Junction Box (Not included) 22.7kg/50lbs. MIN. FIXTURE RATED

(B) Mounting Screws (Not included. 1 Set)

(C) Wire Nut (3)

(D) Ceiling Plate (1)

(E1) Canopy (1)

(E2) Screw (2)

(E3) Quick Link (1)

(E4) Hanging Straight (1)

(E5) Hanging Rod A (2)

(E6) Hanging Rod B (2)

(E7) Hanging Rod C (2)

(F) Body (1)

(F1) Screw Cap (2)

(G) Bulb(4)

(H) Allen Key(1)

(I) Set Screw spare (14)

(J) Lock Device(1)


PRODUCT DESCRIPTION:

General material: Glass & Iron

Height: 35.0cm (14.00in)

Diameter: 40.5cm (15.95in)

Weight: 23.3kg (51.32lbs)

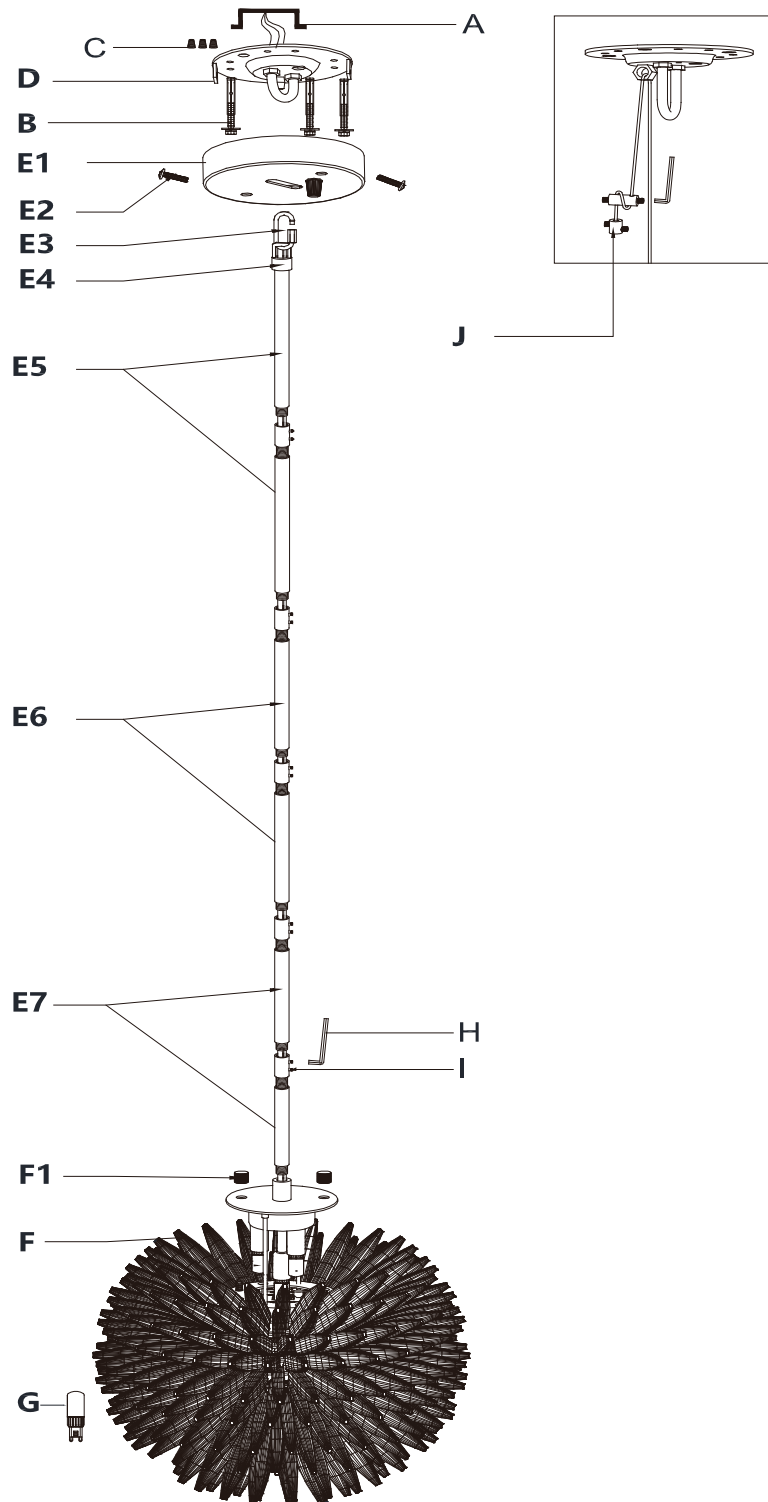

IMPORTANT PLEASE READ**WE RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.****SAFETY INSTRUCTIONS:**

1. Use an authorized and certified electrician for consultation and installation.
2. This fixture has been rated for (4)x2-watt maximum replaceable G9 LED bulbs.
3. To avoid the risk of fire, do not exceed the recommended wattage.
4. The ceiling must have at least the capacity of 5 times the weight of the ceiling light. For this light, at least a ceiling capacity of 116.5 kg (256.61lbs) is required.
5. The manufacturer and distributor accept no liability for incorrect installation.
6. For indoor use only.
7. Keep away from children.

WARNINGS:

1. Turn-off electricity supply at main circuit panel before installing. Do not connect electricity supply until your ceiling light is fully assembled and installed.
2. All wires are connected, Do not remove the ceiling light from its packaging by pulling on the power cord, as a bad connection may result.
3. To reduce the risk of fire, electrical shock, or personal injury, always turn off the ceiling light and allow it to cool prior to replacing lightbulb. Do not touch bulb when fixture is turned on or look directly at lightbulb. Keep flammable materials away from lightbulb.
4. Deviation from instructions may result in a risk of fire or electric shock.



WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS IS NOT A TOY AND THE PRODUCT HAS NO PLAY VALUE.

**WARNING: STRANGULATION HAZARD**

Keep cord at least 3 ft away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3.

**WARNING:**

1. Do not place the lighting on the floor directly or any hard surface as it can damage the fixture.
2. Ensure the fixture is properly hung from the ceiling before removing the iron packaging.

ASSEMBLY & INSTALLATION:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Turn OFF power to the junction box where the ceiling light will be installed.
3. Loosen the screws (E2) and remove the ceiling plate (D) from the canopy (E1).
4. Attach the ceiling plate (D) to the ceiling with mounting screws (B).
5. Assemble the hanging rod A (E5) or B (E6) or C (E7) to hang straight (E4) and tighten the set screws (I) by Allen key(H).

Note : The hanging height is adjustable by using hanging rod A (E5) or hanging rod B (E6) or hanging rod C (E7) or all together.

6. Insert the cable and steel wire into the hanging rods (E5 & E6 & E7) till canopy (E1). Connect the hanging rods with body (F) , Connect the hanging straight (E4) to the hook of the ceiling plate (D) with quick link (E3).
7. Connect the ground wire from the fixture to the ground junction box wire (usually the green or bare wire) and wrap the connection with electrical tape. Connect the hot wire to the junction box wire (usually black or smooth) with a plastic wire nut (C) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction box wire (usually white or ribbed) with a plastic wire nut (C) and wrap the connection with electrical tape.
8. Fasten the steel wire with the lock device (J), tighten it by Allen key (H) Refer to drawing showed as page one.
9. Move the canopy (E1) up to the ceiling plate (D), then fasten the bolts (E2).
10. Restore power to the junction box and test ceiling light fixture.

REPLACE LED LIGHTSOURCE STEPS:

1. Loosen the bolts (F1) to detach the selenite cover (F).
2. Take out the lightsource (G) from the fixture, then replace it.

CARE INSTRUCTIONS:

1. Make sure that the power is turned off and bulb has cooled before handling.
2. Wipe clean with a dry cloth / mild soapy solution. Do not use corrosive cleaners.
3. The cable / cord of this ceiling light cannot be replaced; if the cable is damaged, do not use the light.

ENVIRONMENT:

Special waste handling may be required. Please contact your local authorities for more information.

CEILING SAFETY CABLE ASSEMBLY

1. Remove the Nut locker A & B by loosening the Set Screw from the Ceiling safety cable before installation.
2. Insert the Ceiling safety cable through the Nut lockers as the drawing shows.
3. Fasten the Nut locker A with Set Screw by Small Allen Key.
4. Fasten the Nut locker B with Set Screw by Small Allen Key .

